

Contura

856W Style

856WG Style



SE

Fakta	3
Installationsavstånd	4
Montering	17

NO

Fakta	5
Installasjonsavstand	6
Montering	17

FR

Données Techniques	7
Distances d'installation	8
Montage	17

GB

Facts	9
Installation distances	10
Assembly	17

DK


Fakta	11
Installationsafstand	12
Montering	17

IT

Dati Tecnici	13
Distanze di sicurezza	14
Montaggio	17

NL

Gegevens	15
Installatieafstand	16
Monteren	17

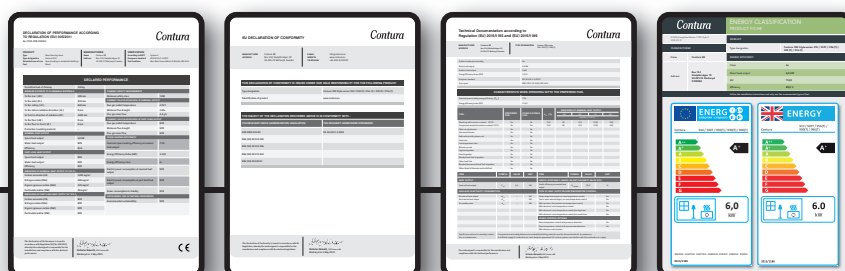

DOWNLOAD DOCUMENTS

SE

"Prestandadeklaration", "EU-försäkran om överensstämmelse",
"Teknisk dokumentation", "Energy Classification" och
"Garantibevis" finns tillgängliga på contura.eu

DK

Du finder "Ydeevnedeklaration",
"EU-overensstemmelseserklæring", "Teknisk dokumentation",
"Energiklassificering" og "Garantibevis" på contura.eu

DE

„Leistungserklärung“, „EU-Konformitätserklärung“, „Technische
Dokumentation“, „Energieklassifizierung“ und „Garantieschein“
sind unter contura.eu verfügbar

FI

"Suorituslause", "EU-vaatimustenmukaisuusvakuutus",
"Tekninen dokumentaatio", "Energialuokitus" ja "Takuutodistus"
ovat saatavilla osoitteessa contura.eu

NO

"Ytelseserklæring", "EU-samsvarserklæring", "Teknisk
dokumentasjon", "Energiklassifisering" og "Garantibevis" er
tilgjengelige på contura.eu

IT

La "Dichiarazione di Prestazione", la "Dichiarazione di Conformità
UE", la "Documentazione Tecnica", la "Classificazione Energetica"
e il "Certificato di Garanzia" sono disponibili su contura.eu

FR

« Déclaration des performances », « Déclaration de conformité UE
», « Documentation technique », « Classification énergétique » et
« Certificat de garantie » sont disponibles sur contura.eu

NL

"Prestatieverklaring", "EU-verklaring van overeenstemming",
"Technische documentatie", "Energy Classification" en
"Garantiebewijs" zijn beschikbaar op contura.eu

GB

"Performance declaration", "EU Declaration of Conformity",
"Technical Documentation", "Energy Classification" and "Warranty
Certificate" are available from contura.eu

Facts



3-7 kW



697 mm



465 mm



379 mm



67 kg

Nominal effect	5 kW
Efficiency	81 %
Flue gas temperature in the connection at nominal output	314°C
Flue gas mass flow	4,3 g/s
Air tightness class	Type CM

Complies with EU Regulation No. 305/2011 for construction products and harmonised standard EN 16510-2-1:2023

Installation by authorised technician

This manual contains instructions about how the stoves must be assembled and installed. To ensure the function and safety of the stove, we recommend that the installation is carried out by an authorised technician. Contact one of our dealers who can recommend suitable technicians.

Structural support

Check that the wood joists are strong enough to bear the weight of the stove and chimney. The stove and chimney can usually be placed on a normal wooden joist in a single occupancy house if the total weight does not exceed 400 kg.

Hearth plate

Due to the risk of falling embers, a flammable floor must be protected by a hearth plate. It must extend 300 mm in front of the stove and 100 mm on each side of the stove, or have a 200 mm extension on each side of the opening. The hearth plate can consist of natural stone, concrete, metal plate or glass. A glass hearth plate is available as an accessory for these models.

Final inspection of the installation

It is extremely important that the installation is inspected by an authorised chimney sweep before the stove is used. Also read the "Lighting instructions", before lighting for the first time.



The stove becomes very hot

During operation, certain surfaces of the stove become very hot and can cause burn injury if touched. Be aware of the strong heat radiated through the hatch glass. Placing flammable material closer than the safe distance indicated may cause a fire. Pyre lighting can cause quick gas ignition with the risk of damage to property and personal injury.

Building application

These main instructions may give guidance which would contravene national building regulations. Please refer to supplementary instructions or ask your local authority for advice regarding building regulations.

Before installing a stove or erecting a chimney it is necessary for you to make a building application permission to your local authority.

The owner of the house is personally responsible for ensuring compliance with the mandatory safety requirements and must have the installation approved by a qualified inspector. Your local chimney sweep must also be informed about the installation as this will affect the routines for regular chimney-sweeping services.



Installation

This stove model is only intended to be installed in a masonry chimney, and must not support a chimney on the top.

Connection to chimney

- The stove must be connected to chimneys dimensioned for a minimum flue gas temperature of 400°C.
- The external diameter of the connection sleeve is 150 mm.
- Normal chimney draw under nominal operation should be between 20-25 Pa close to the connector. The draft is affected both by the length and area of the chimney, and by how well sealed it is. The recommended minimum flue length is 3.5 m and its diameter should be Ø130 to Ø150 mm.
- A flue with sharp bends and horizontal routing reduces the draught in the chimney. Maximum horizontal flue is 1 m, on the condition that the vertical flue length is at least 5 m.
- It must be possible to sweep the full length of the flue and the soot hatches must be easily accessible.
- Carefully check that the chimney is sealed and that there is no leakage around soot hatches and flue connections. See page 18.
- The stove meets the requirements for connection to a branched flue pipe.

Supply of combustion air

When a stove is installed in a room, the demand for air supply to the room increases. Air can be provided indirectly via a vent in the outer wall or via a duct from the outside that is connected to the connector on the underneath of the stove. The amount of air needed for combustion is 15 m³/h.


The connector for the combustion air has an external diameter of 67 mm. When duct routing further than 1 m the pipe diameter must be increased to 100 mm and a correspondingly larger wall vent must be selected.

In hot areas, the duct should be insulated with 30 mm mineral wool with a moisture inhibiting outer cover. It is also important to seal around the hole in the wall (or floor) of the lead-in using sealant.


A 1 m length of condensation insulated ducting for combustion air is available as an accessory.

Installation distances


C856W Style

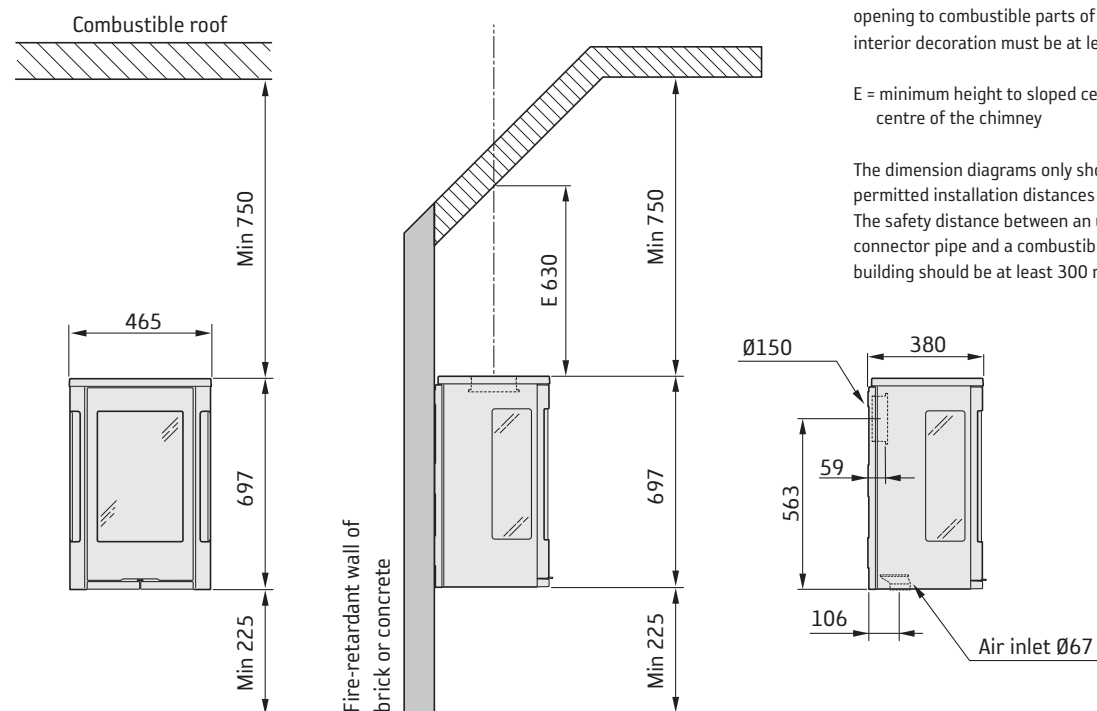

INSTALLATION AGAINST COMBUSTIBLE WALLS

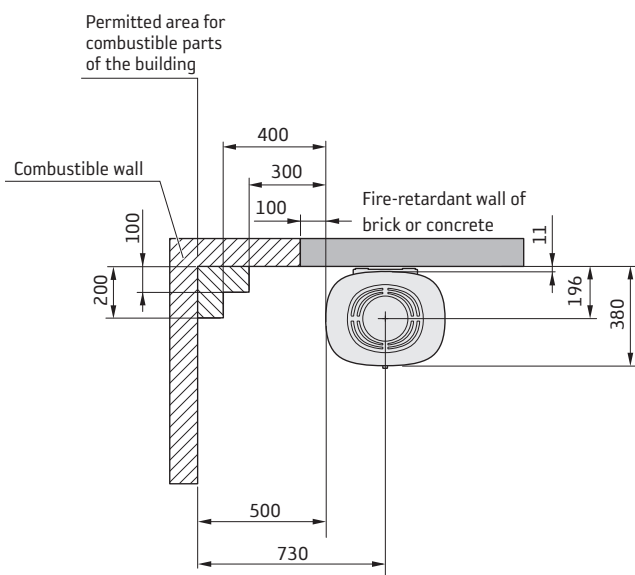

INSTALLATION AGAINST FIREWALLS

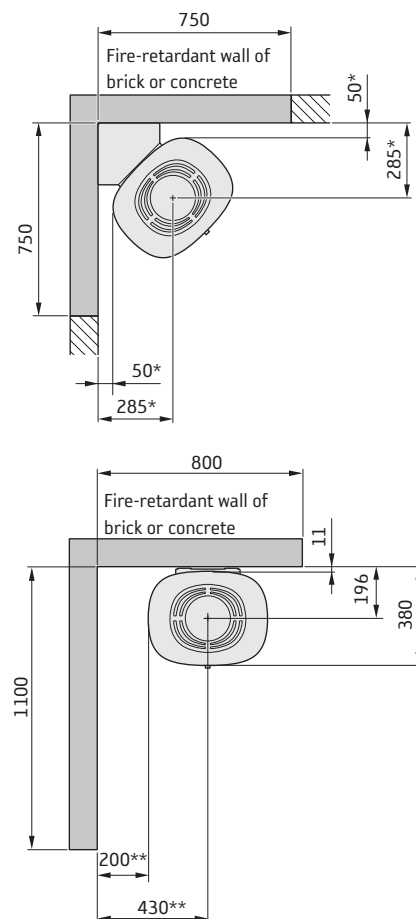

* There must be a minimum distance of 50 mm/285 mm. If mounting on Contura's corner bracket, the distance must be 56 mm/291 mm.

** To prevent discolouration of painted non-flammable walls we recommend that the same side distance as to combustible walls is used.



SE Montering

Om insatsen behöver läggas ned för att förflyttas bör lösa delar demonteras. Demontering av eldstadsbeklädnad beskrivs i slutet av denna anvisning.

- 1 Galler
- 2 Rostertallrik
- 3 Betongskruv för upphängning
- 4 Eldstadsbeklädnad (Vermiculit)
- 5 Typskylt
- 6 Brasbegränsare

NO Før montering

Hvis innsatsen må legges ned for å flyttes, bør løse deler demonteres. Demontering av brennplater og hvelv er beskrevet mot slutten av denne veiledningen.

- 1 Gitter
- 2 Rist
- 3 Betongskruv for opphengning
- 4 Brennplater og hvelv (vermikulitt)
- 5 Typeskilt
- 6 Kubbstopper

FR Avant de procéder au montage

Les éléments non fixés devront être déposés si l'insert doit être couché pour être déplacé. Le démontage de l'habillage du foyer est décrite à la fin de ce document.

- 1 Grille
- 2 Grille de décendrage
- 3 Vis à béton pour suspension
- 4 Habillage du foyer (Vermiculite)
- 5 Plaque signalétique
- 6 Pare-bûches

GB Prior to installation

If the insert needs to be put down to be moved, loose components should be removed. Removal of the hearth cladding is described at the end of these installation instructions.

- 1 Grille
- 2 Grate disc
- 3 Concrete screw for mounting
- 4 Hearth cladding (Vermiculite)
- 5 Type plate
- 6 Fire bars

DK Før opstilling

Hvis indsatsen skal lægges ned for at blive flyttet, bør løselede afmonteres. Afmontering af ovnbeklædning beskrives i slutningen af denne vejledning.

- 1 Gitter
- 2 Rund askerist
- 3 Betonskrue til ophængning
- 4 Ovnbeklædning (Vermiculite)
- 5 Typeskilt
- 6 Brændeholder

IT Prima del montaggio


Se è necessario smontare l'inserto per spostarlo, rimuovere prima i componenti liberi. La procedura di smontaggio del rivestimento del focolare è descritta alla fine delle presenti istruzioni.

- 1 Griglia
- 2 Griglia del braciere
- 3 Vite per calcestruzzo per sospensione
- 4 Rivestimento interno del focolare (vermiculite).
- 5 Etichetta prodotto
- 6 Femalegna


NL Voorafgaand aan montage

Als de inzet liggend moet worden verplaatst, moeten losse onderdelen worden gedemonteerd. De demontage van de haardbekleding wordt beschreven aan het eind van deze instructies.



- 1 Rooster
- 2 Roosterschijf
- 3 Betonschroef voor ophanging
- 4 Haardbekleding (vermiculiet)
- 5 Typeplaatje
- 6 Houtvanger

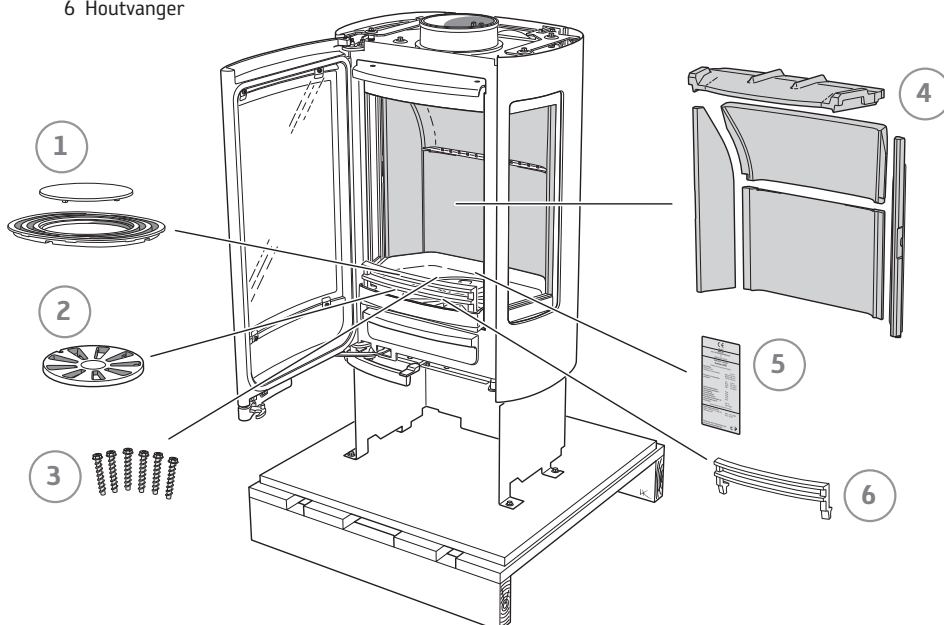






- | | |
|--|---|
| SE Bakåttanslutning till skorsten | DK Tilslutning bagud til skorsten |
| NO Bakmontering til skorstein | IT Collegamento alla canna fumaria dal retro della stufa |
| FR Raccordement par l'arrière à la cheminée | NL Achterwaartse aansluiting op een schoorsteen |
| GB Rear connection to chimney | |

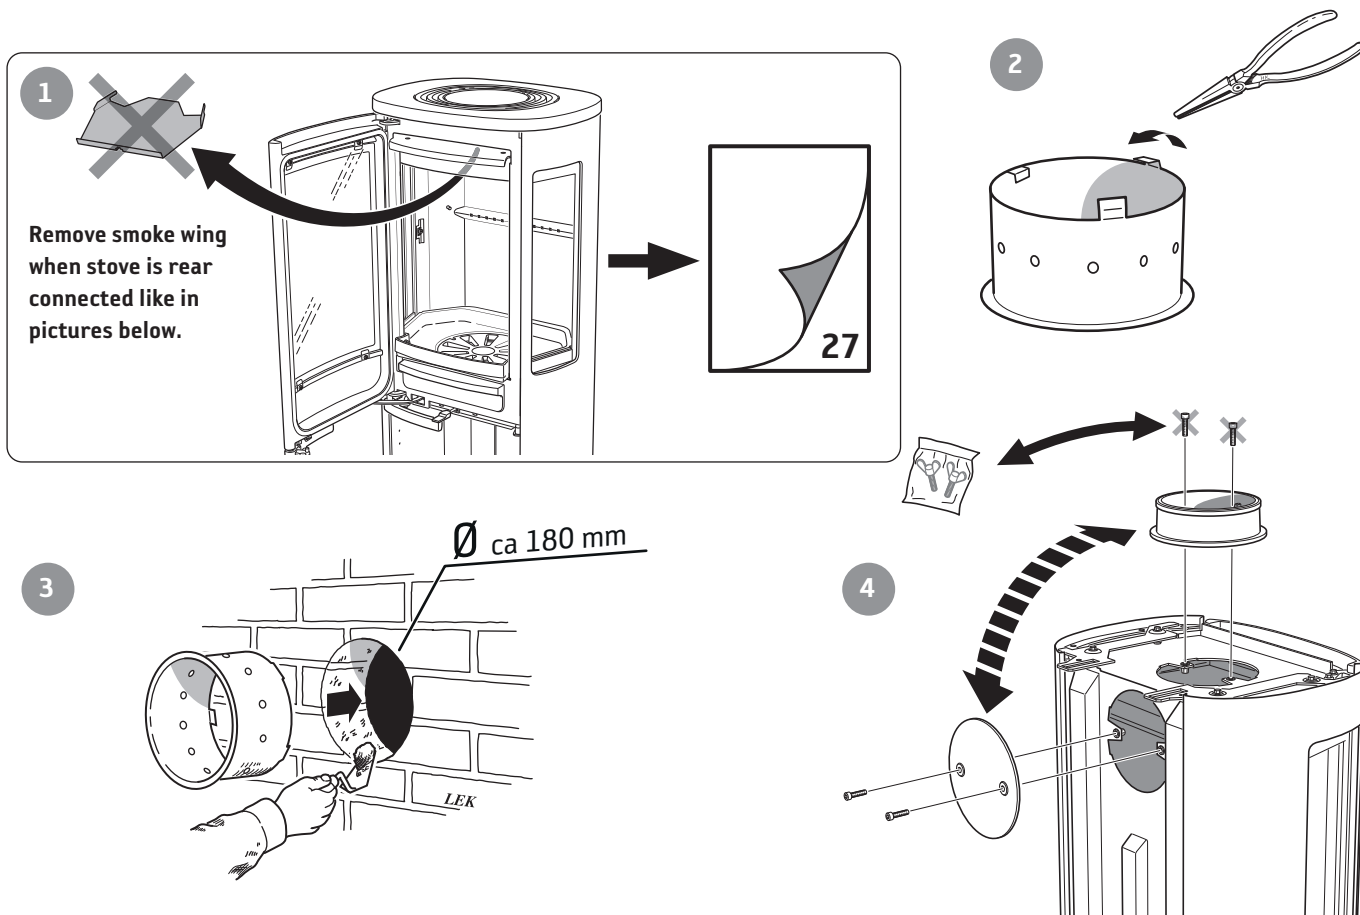

- | | |
|-------------------------|-----------------------------------|
| SE Tilluft | DK Forbrændingsluft |
| NO Tilluft | IT Alimentazione dell'aria |
| FR Arrivée d'air | NL Toevoerlucht |
| GB Supply | |

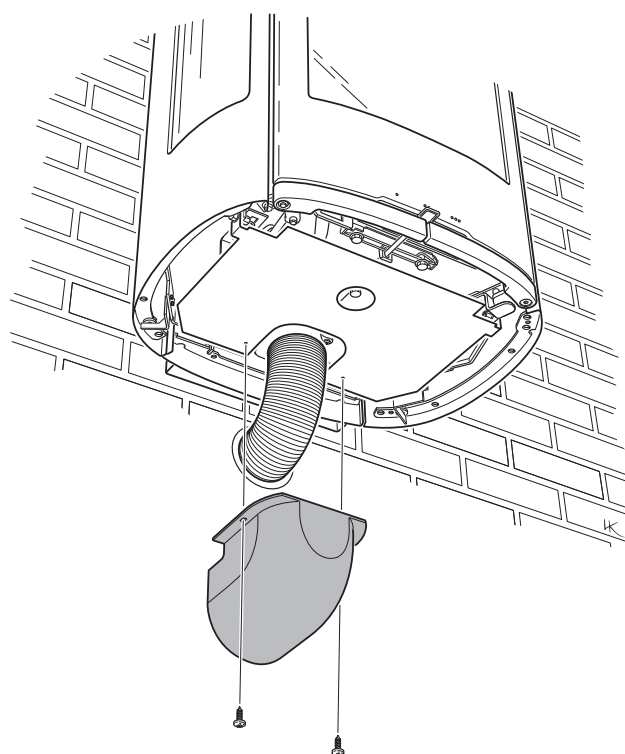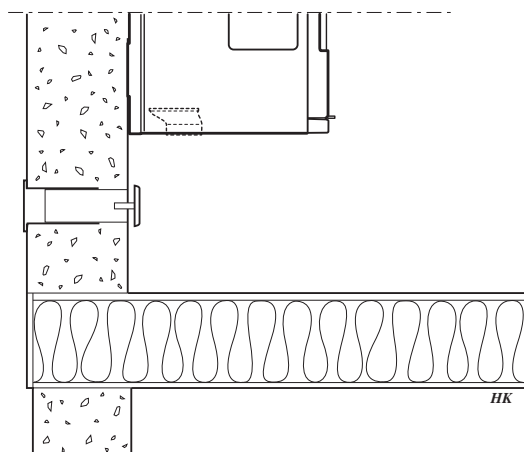

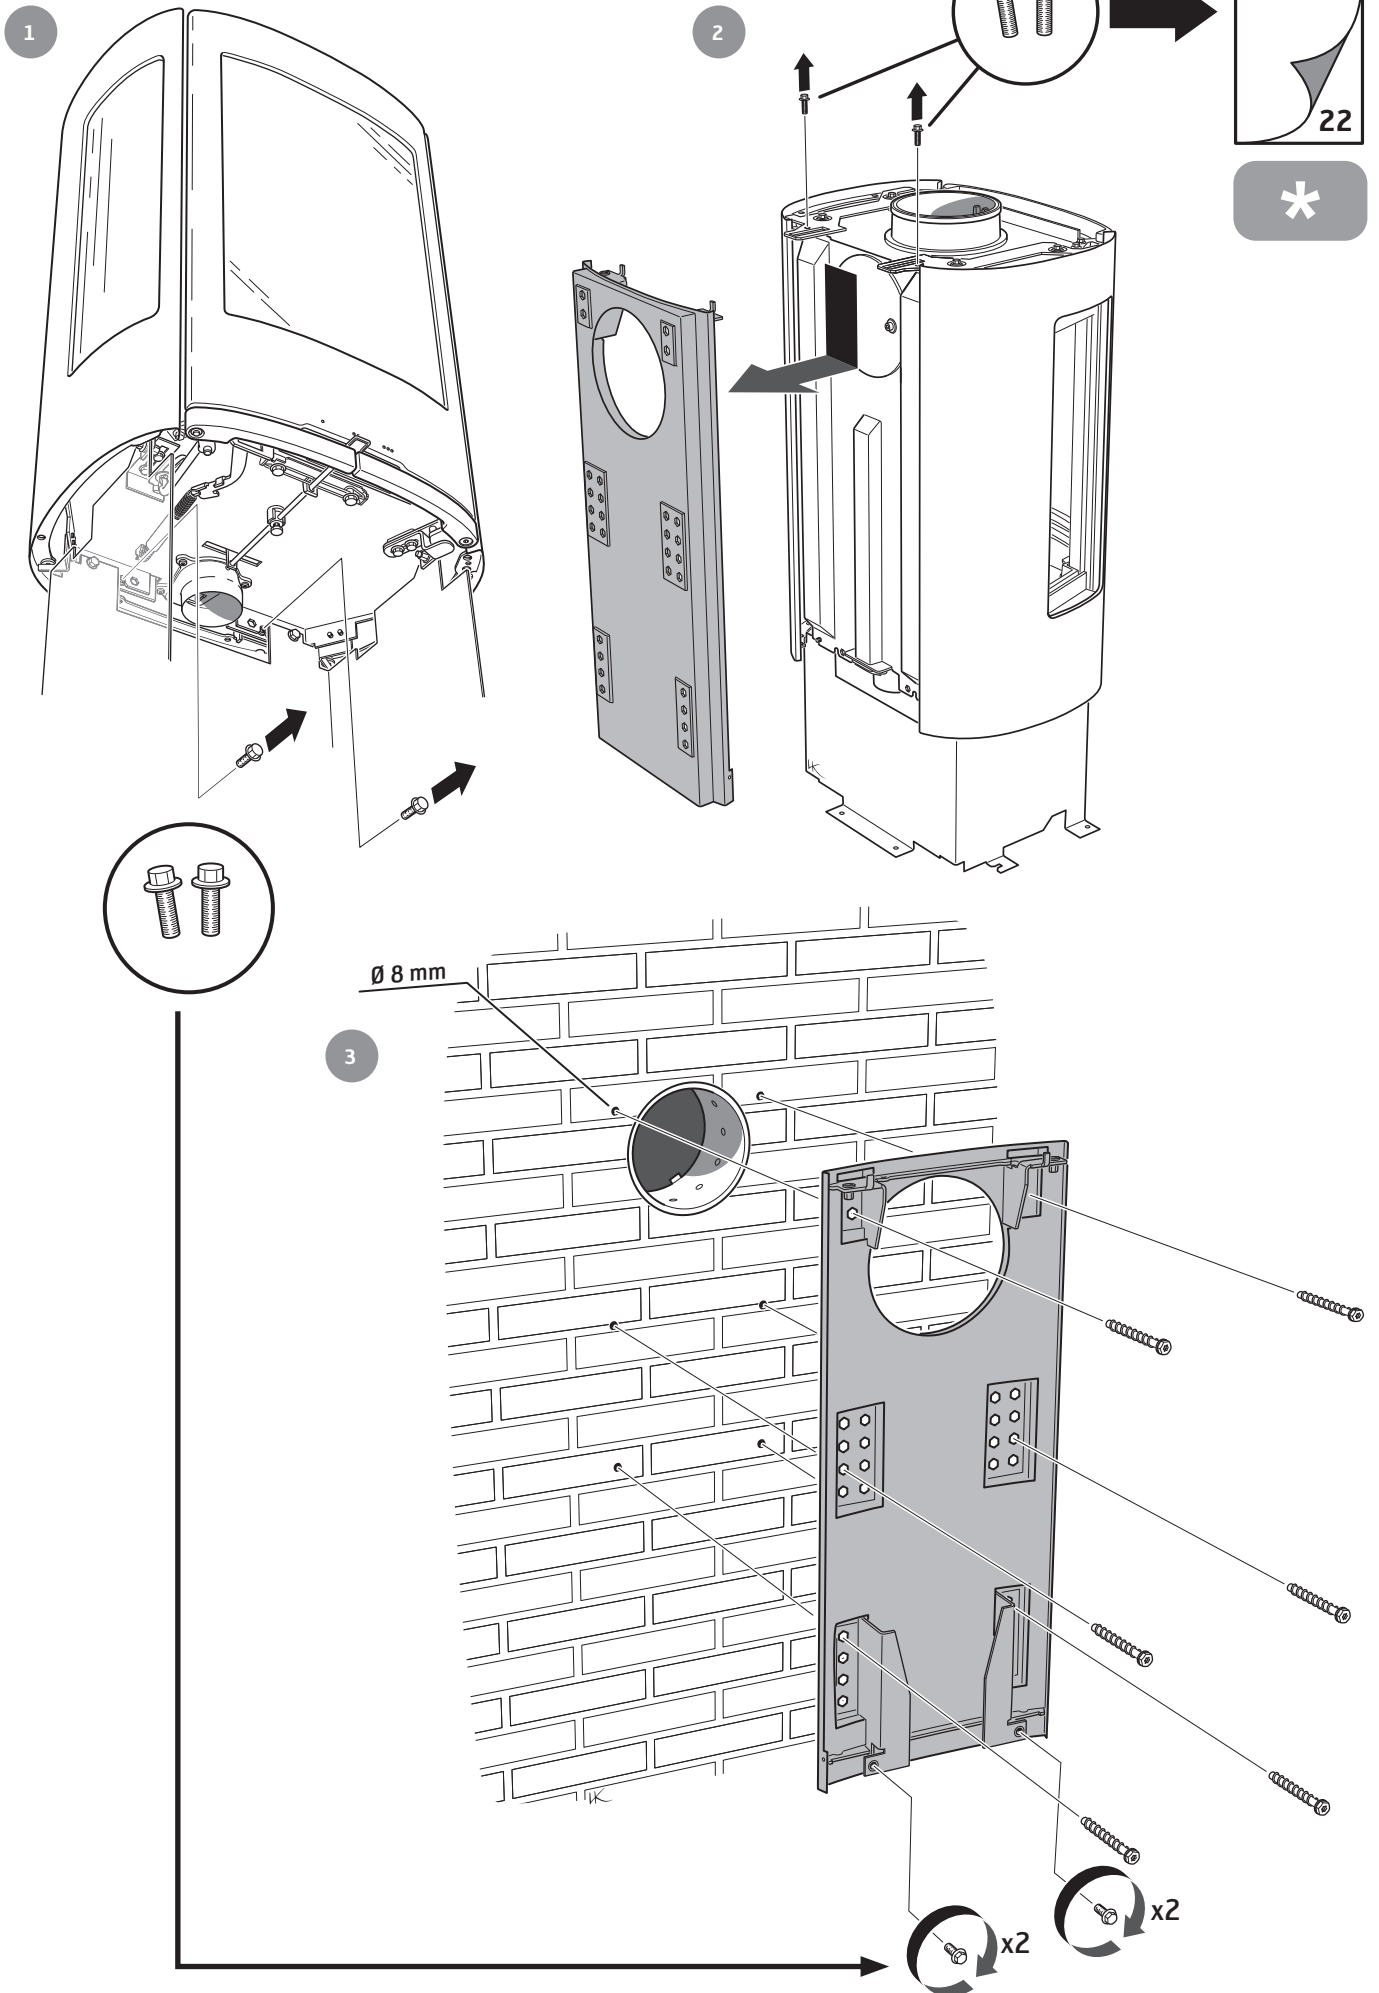


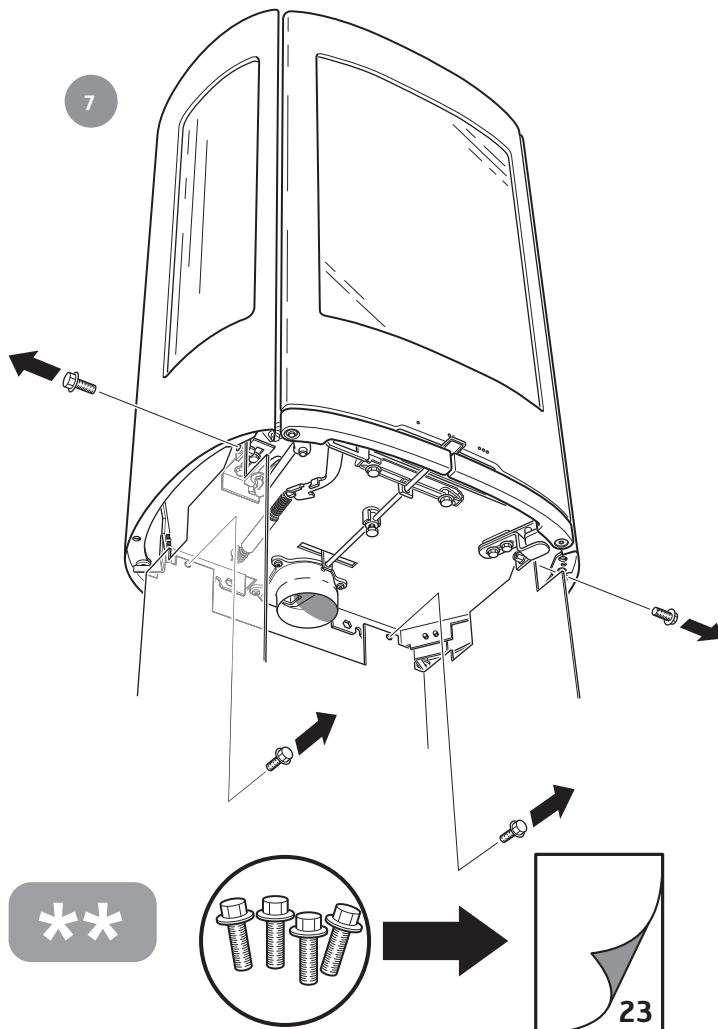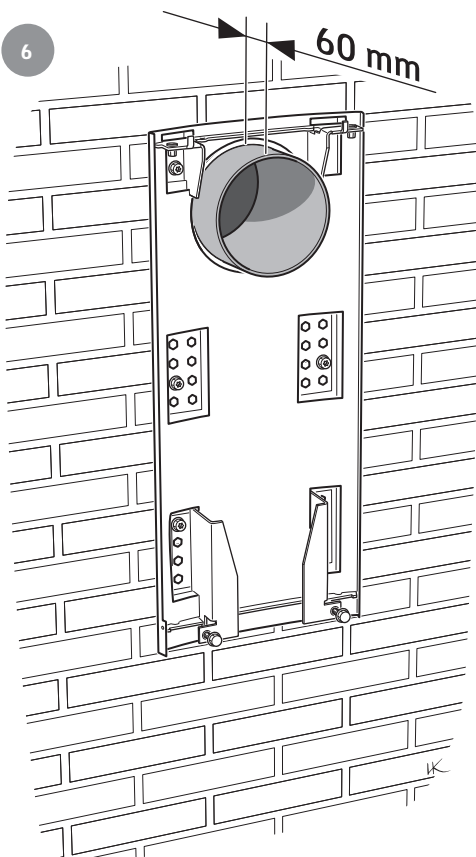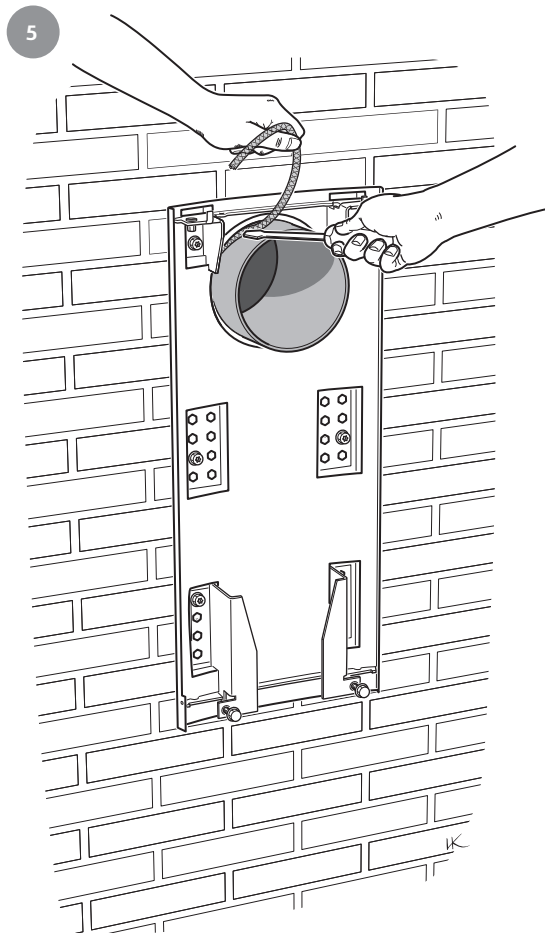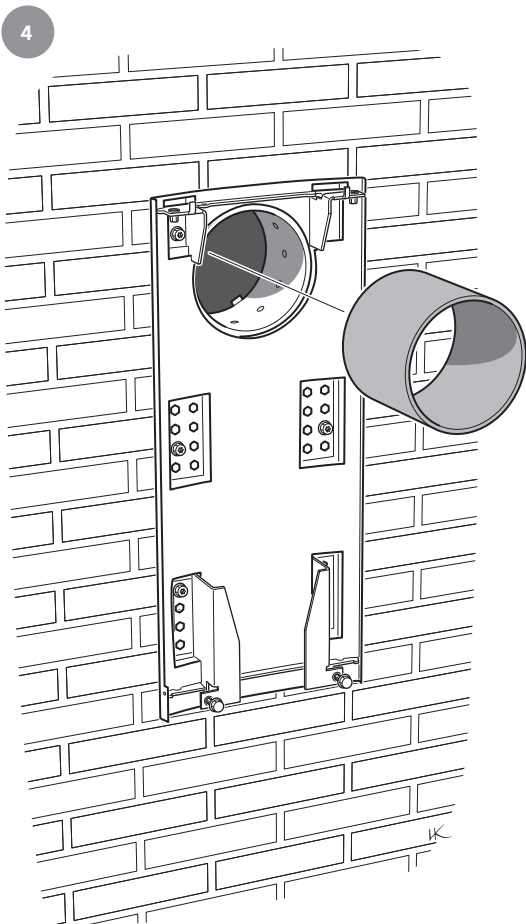


8




9

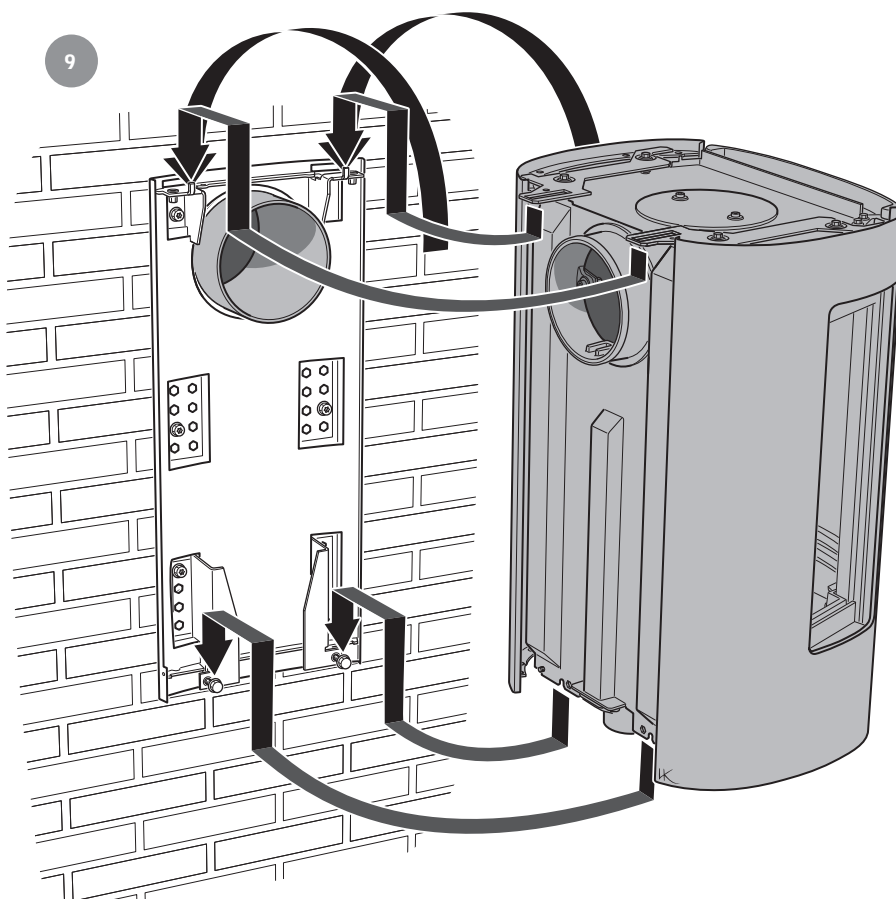


10

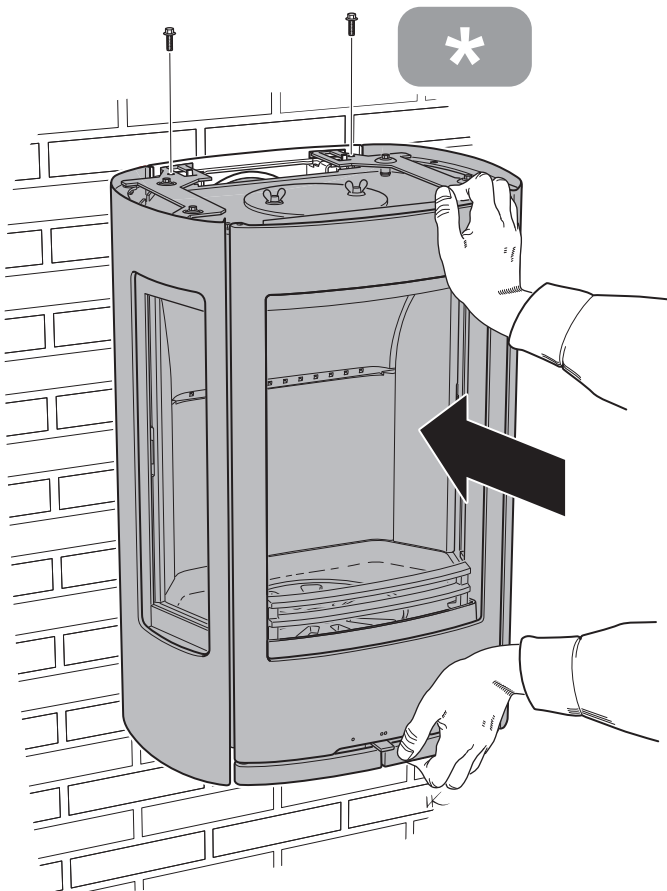


11

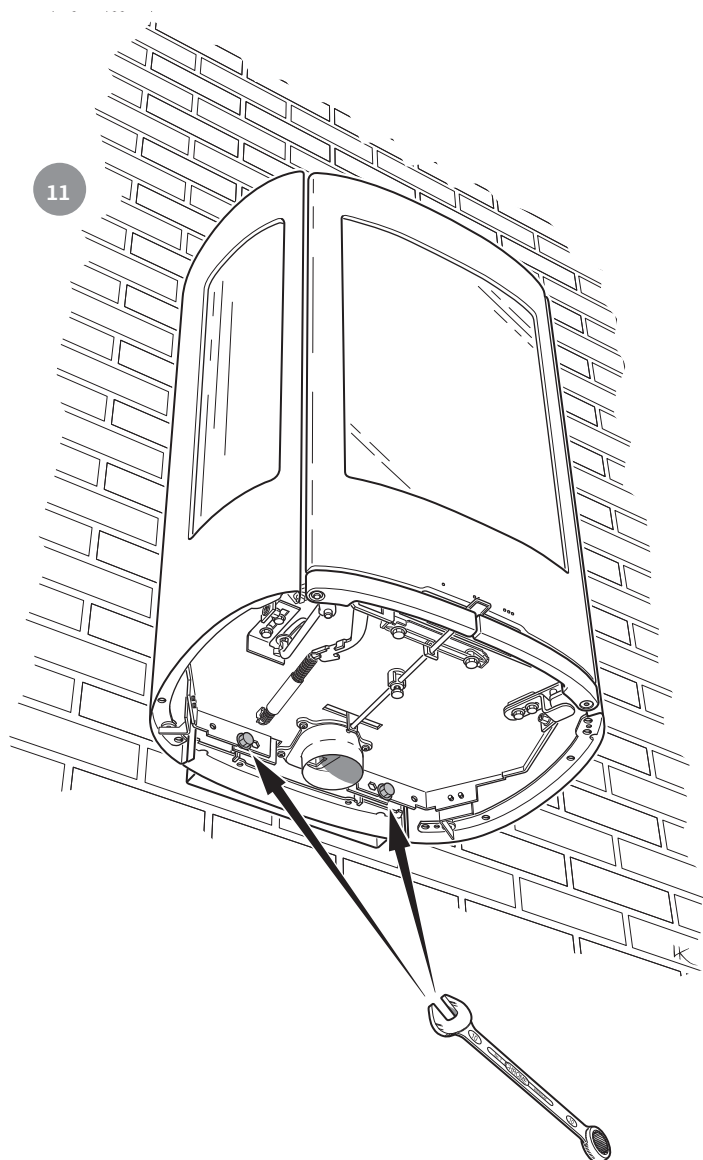

12

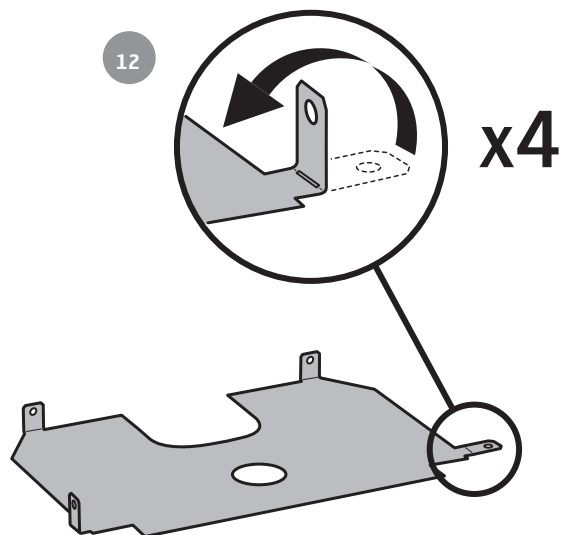

14

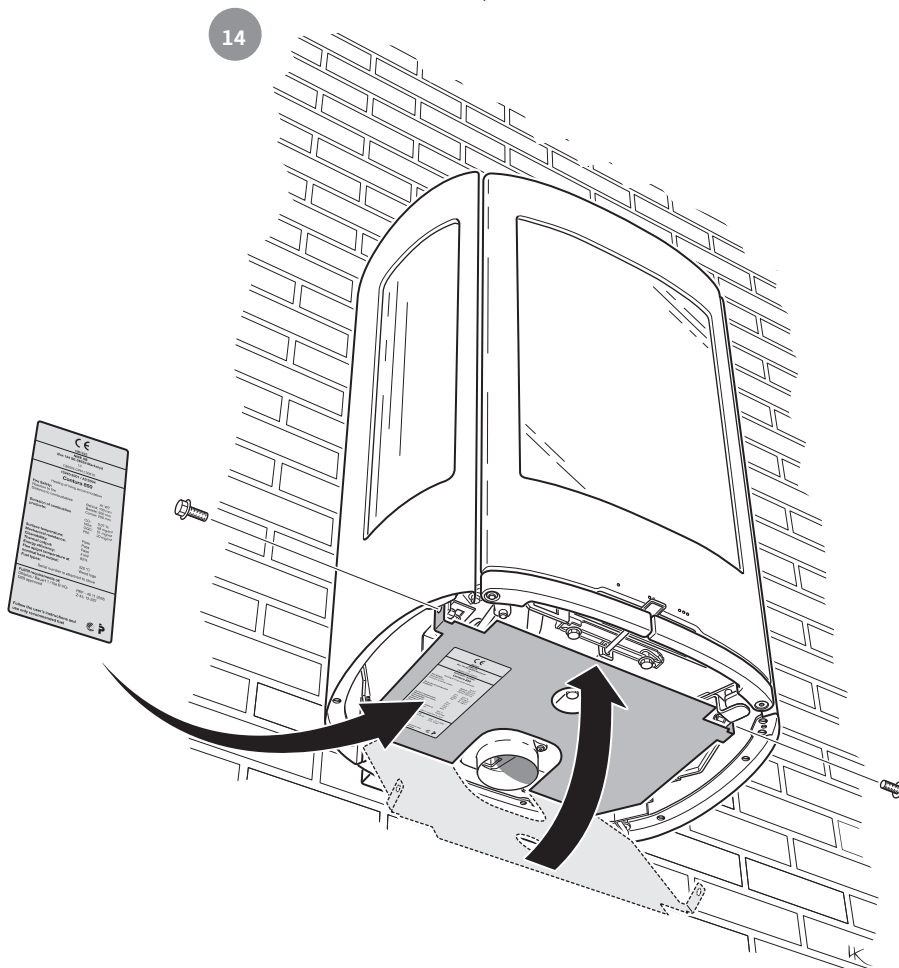


✱✱




24

15

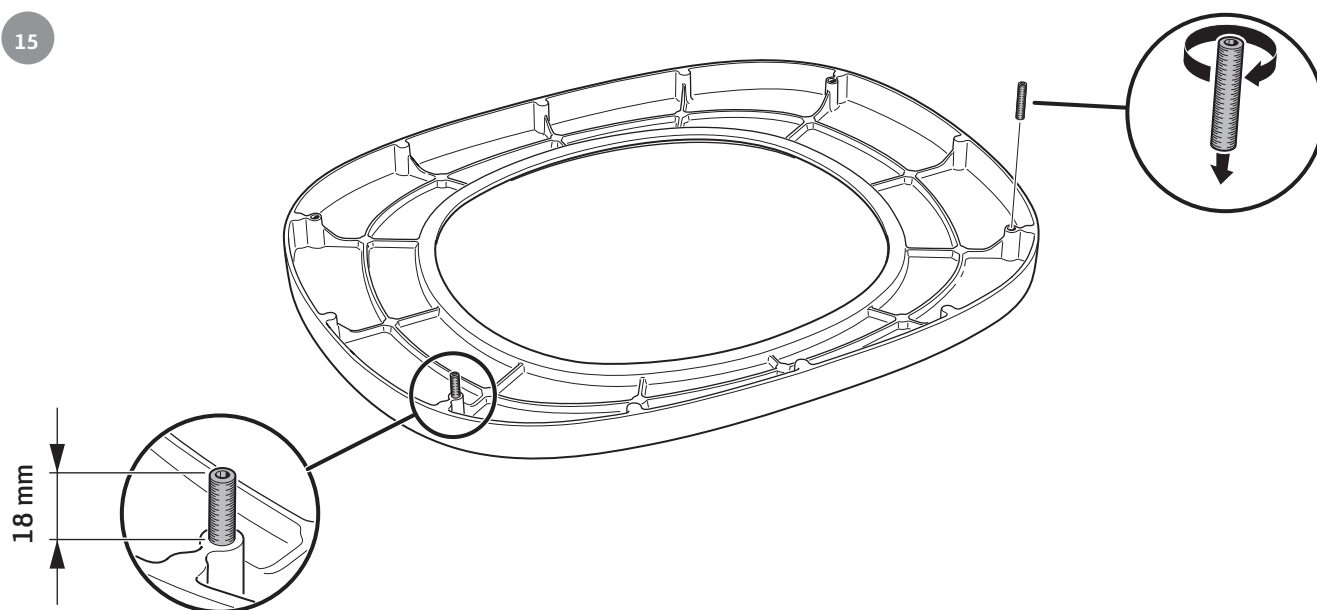

16

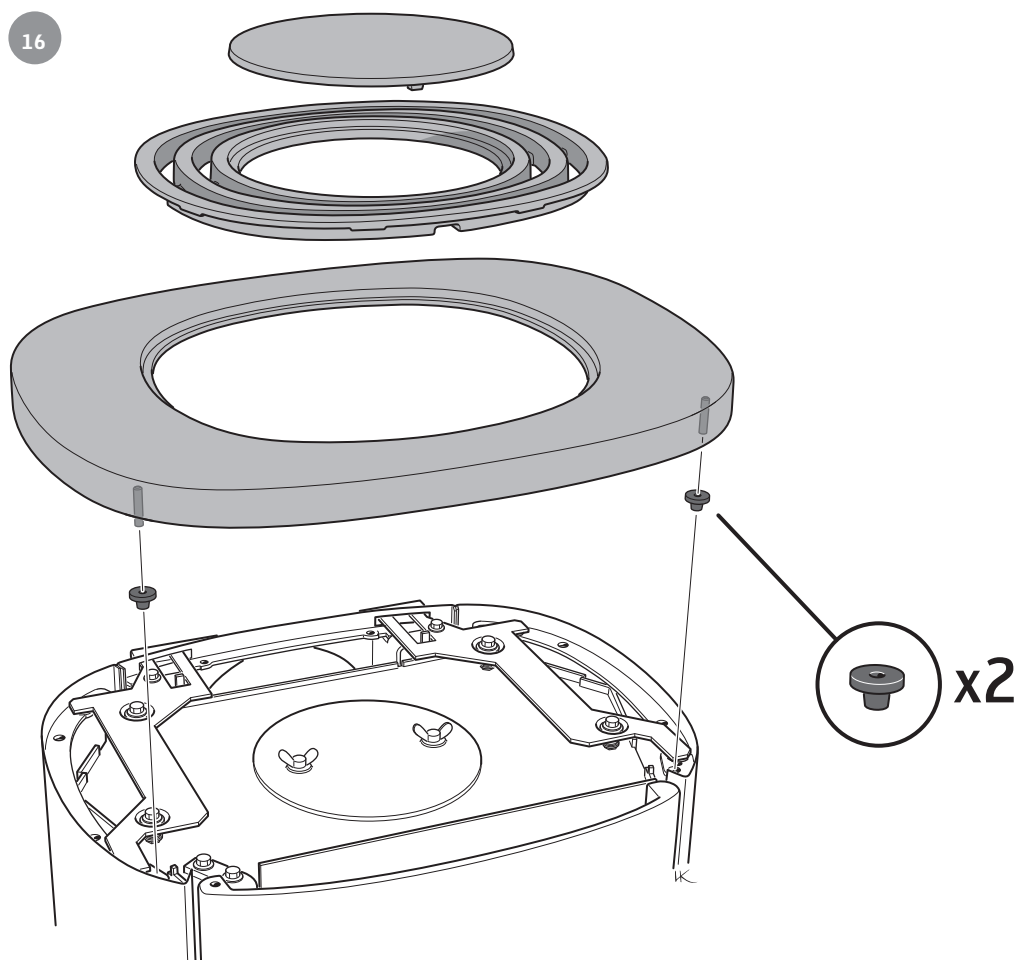

**SE** Uppställning av luckan, vid städning / service

Luckan kan spärras i öppet läge, med hjälp av låsarmen på kaminens vänstra sida. När luckan ska stängas trycks låsarmen upp igen från det spärrade läget.

DE Aufstellen der Tür für Reinigung und Service

Mithilfe des Armes an der linken Seite des Kamins kann die Tür in ihrer geöffneten Stellung arretiert werden. Beim Schließen der Tür wird der Arm wieder aus der arretierten Stellung nach oben gedrückt.

NO Låsing av døren i åpen posisjon, ved rengjøring / service

Døren kan låses i åpen posisjon, ved hjelp av låsearmen på venstre siden av ovnen. Når luken skal stenges, trykkes låsearmen opp igjen fra sperret stilling.

FR Placement de la porte, pour le nettoyage et / ou l'entretien

La porte peut être verrouillée en position ouverte, à l'aide du levier de verrouillage situé sur le côté gauche du poêle. Pour refermer la porte, déverrouiller le levier en appuyant vers le haut.

GB Door in open position, for cleaning / service

The door can be secured in the open position using the locking lever on the left side of the stove. To shut the door, press the locking lever back up from its secured position.

DK Spærring af lågen, ved rengøring / service

Lågen kan spærres i åben position ved hjælp af låsearmen på venstre side af brændeovnen. Når lågen skal lukkes, skubbes låsearmen op igen fra låst position.

FI Luukun asettaminen puhdistusta / huoltoon varten



Luukku voidaan lukita avattuun asentoon takan vasemmalla puolella olevalla lukitusvarrella. Kun luukku suljetaan, lukitusvarsi painetaan taas lukitusasennosta ylös.

IT Bloccaggio dello sportello per la pulizia / la manutenzione

Lo sportello può essere bloccato in posizione aperta con una levetta di blocco posta sotto la parte sinistra della stufa. Per chiudere lo sportello, tirare la leva di chiusura verso l'alto dalla posizione di bloccaggio.

NL Plaatsen van de deur, bij schoonmaken / onderhoud

De deur kan in geopende stand worden vastgezet met behulp van de vergrendeling aan de linkerzijde van de kachel. Bij het sluiten van de deur wordt de vergrendeling weer ontgrendeld.

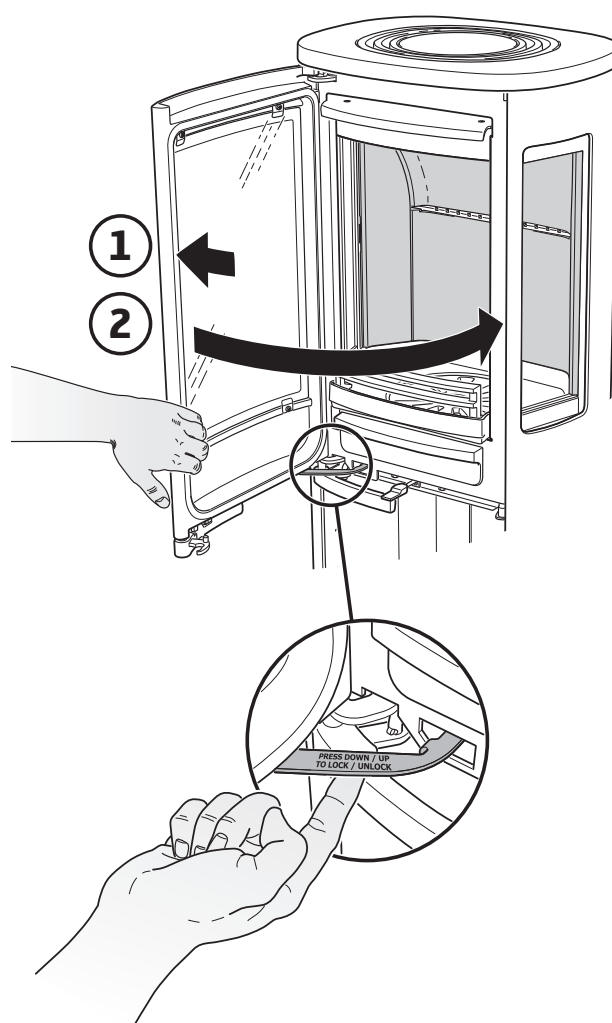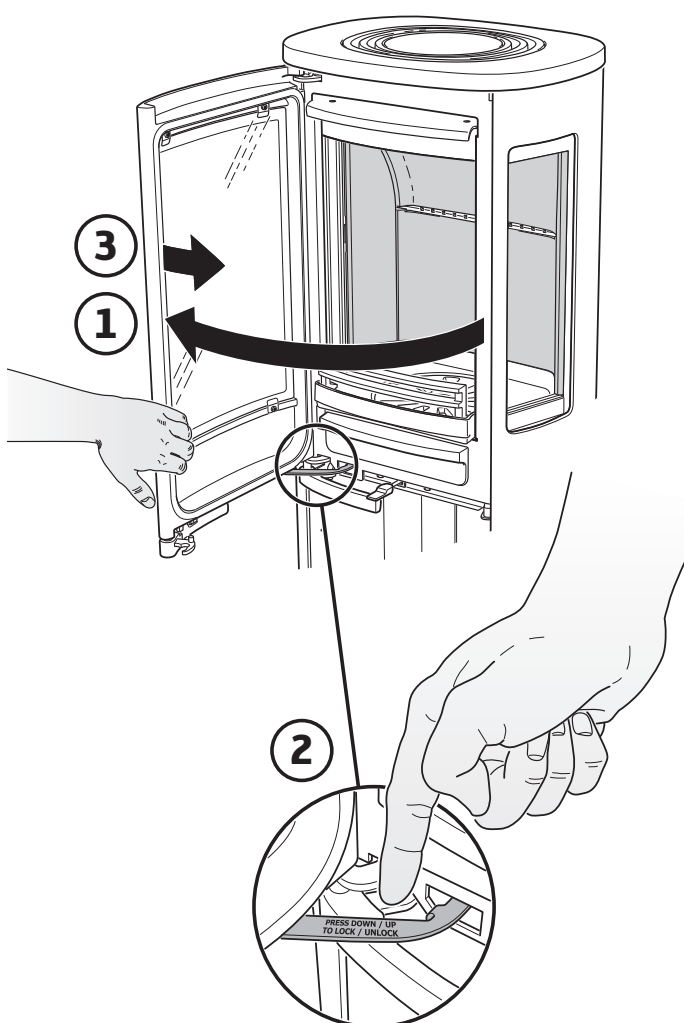


- SE** Demontera eldstadsbeklädnaden (Vermiculit)
- NO** Slik demonterer du ildstedsbekledningen (Vermikulitt)
- FR** Voici comment démonter l'habillage du foyer (Vermiculite)
- GB** How to remove the hearth surround (Vermiculite)
- DK** Sådan afmonterer du ovnbeklædningen (Vermiculite)
- IT** Come smontare il rivestimento del focolare (vermiculite)
- NL** Zo demonteert u de kachelbekleding (vermiculiet)




- SE** Hanteras varsamt!
- DE** Vorsichtig vorgehen!
- NO** Behandles forsiktig!
- FR** À manipuler avec précaution!
- GB** Handle with care!
- DK** Håndter med forsigtighed!
- FI** Käsittele varovasti!
- IT** Maneggiare con cura!
- NL** Voorzichtig hanteren!


1

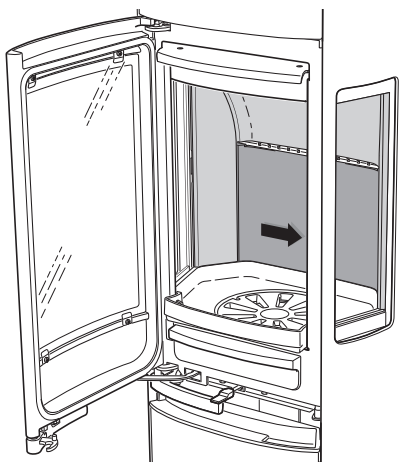


2

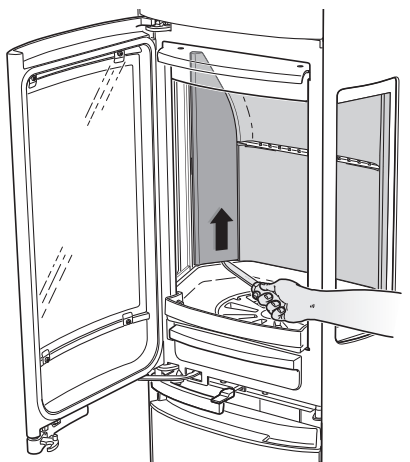


3

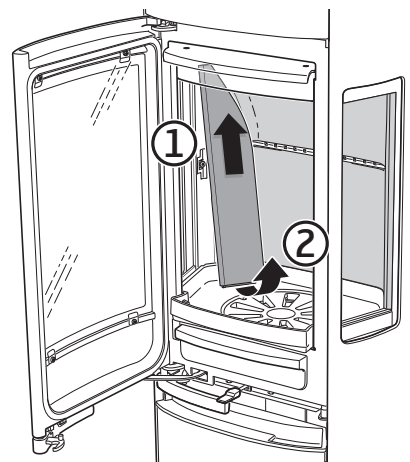


4

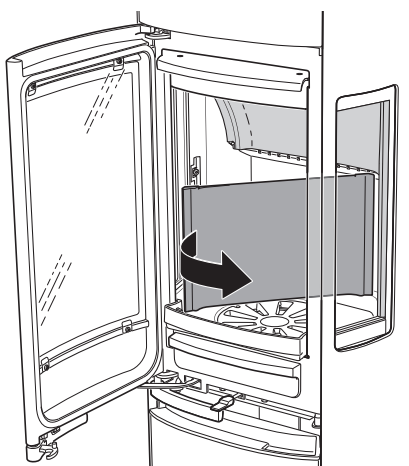

5

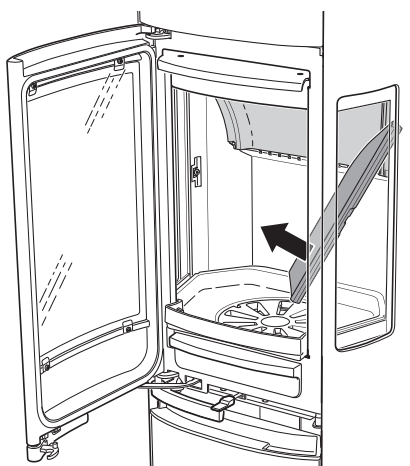


6

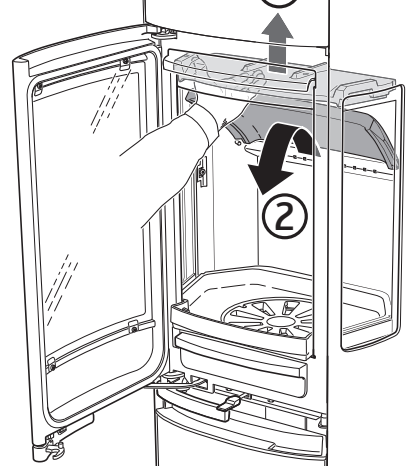




7

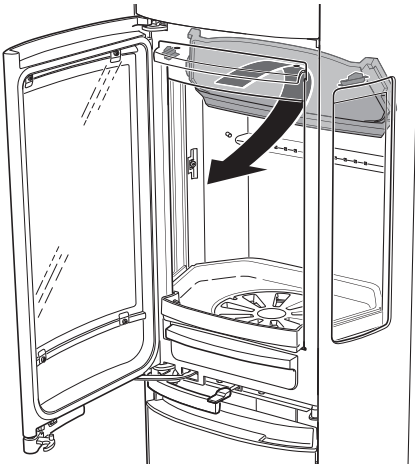

8

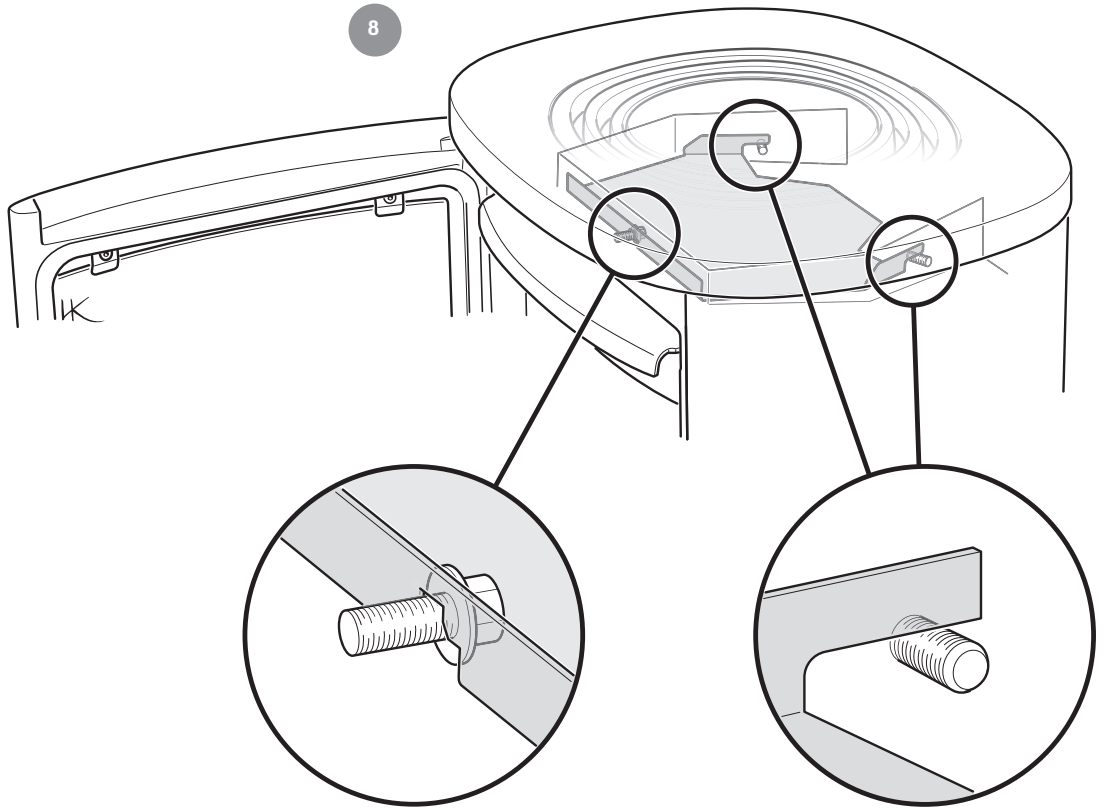

9



10

