


Installation instruction

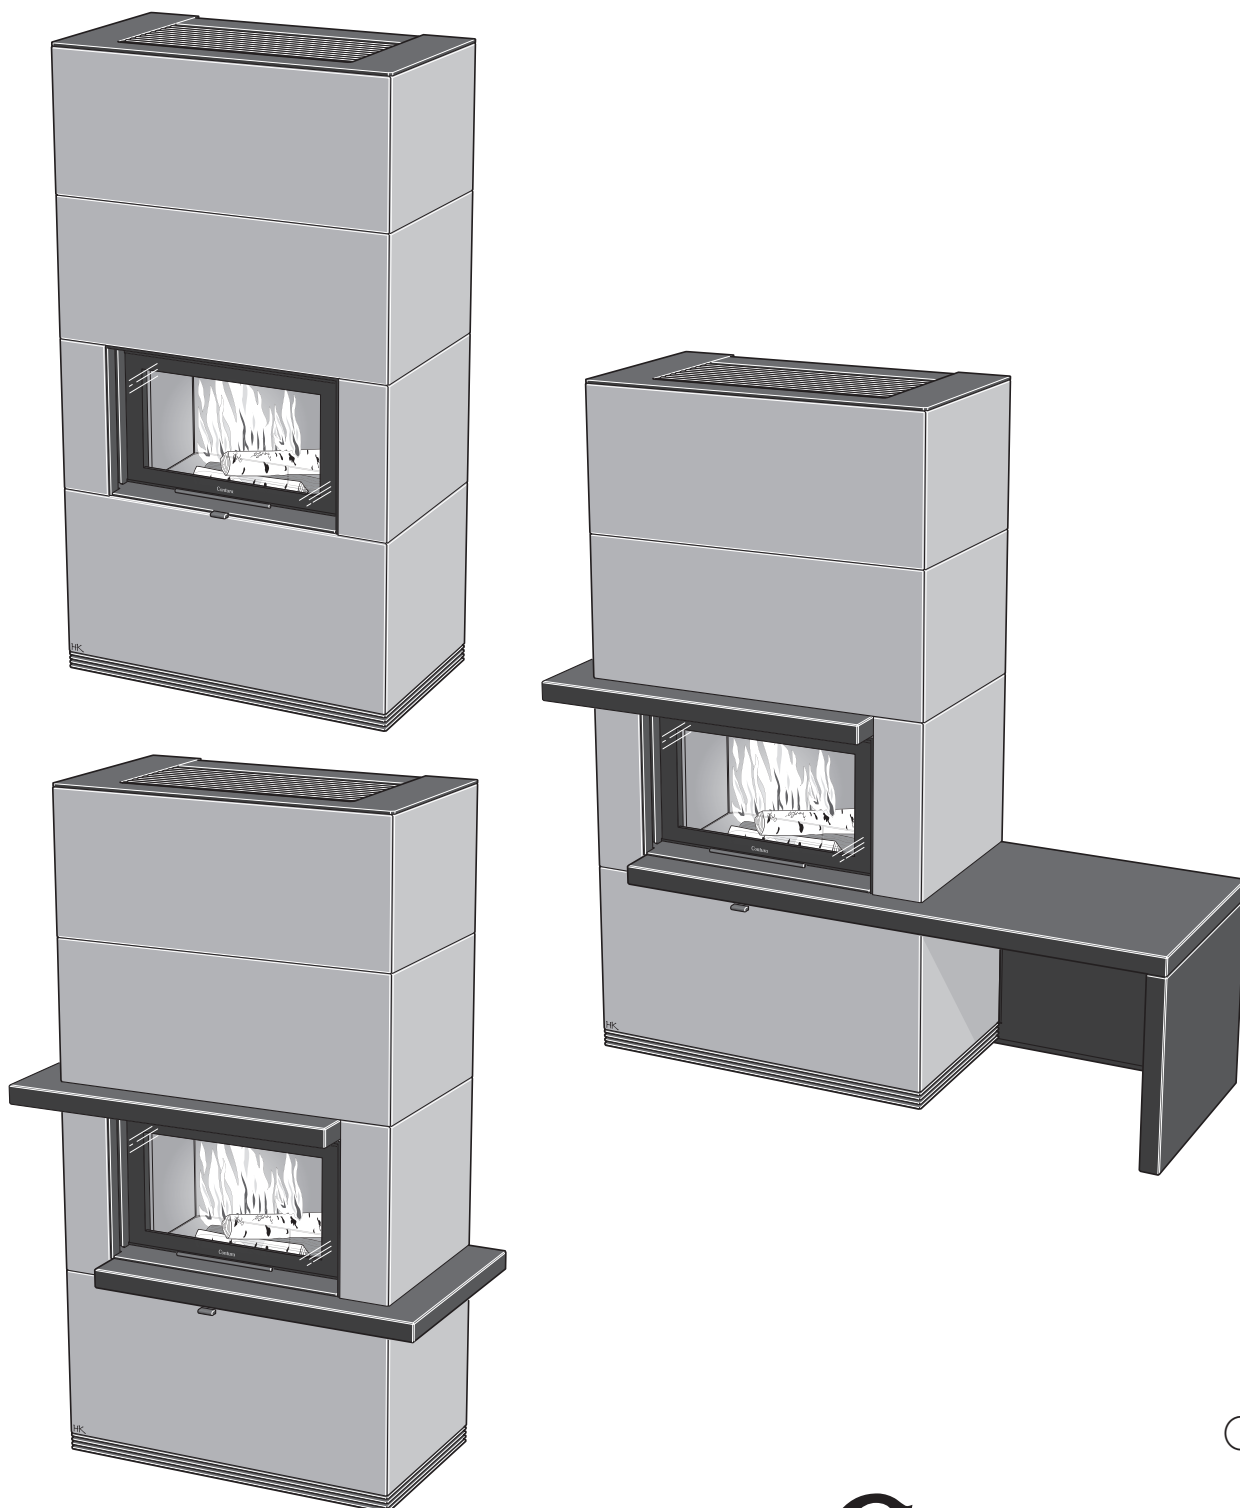

Ci31

Contura

Declaration of performance according
to Regulation (EU) 305/2011
No. Ci31-CPR-130912-SE-2

Contura

PRODUCT

Product type	Insert lit with solid biofuels
Type designation	Contura i31
Manufacturing number	See rating plate on the insert
Intended area of use	Heating of rooms in residential buildings
Fuel	Wood

MANUFACTURER

Name	NIBE AB / Contura
Address	Box 134, Skulptörvägen 10 SE-285 23 Markaryd, Sweden

CHECKS

According to AVCP	System 3
European standard	EN 13240:2001/AC:2006, EN-13240:2001/A2:2004/AC:2007
Test institute	Rein-Ruhr Feuerstätten Prüfstelle, NB 1625, has checked declared performance and issued test report no. RRF-40 13 3372

DECLARED PERFORMANCE

Essential characteristics	Performance	Harmonised technical specification
Reaction to fire	NPD	EN 13240:2001/AC:2006, EN-13240:2001/A2:2004/AC:2007
Minimum distance to combustible material	Rear: 0 mm Side: 200 mm Follow the given conditions in the installation instructions.	
Risk of falling embers	Pass	
Emissions from combustion	CO 0,07%	
Surface temperatures	Pass	
Cleaning options	Pass	
Mechanical durability	Pass	
Emissions of hazardous substances	Pass	
Nominal output	6,0 kW	
Efficiency	81%	
Flue gas temperature in connector at nominal output	283°C	

The undersigned is responsible for the manufacture and conformity with the declared performance.



Niklas Gunnarsson, Business area manager NIBE STOVES
Markaryd, September 12, 2013



A warm welcome to Contura.

A warm welcome to the Contura family. We hope you will get a great deal of pleasure from your new stove. As a new owner of a Contura stove, you have secured a product with timeless design and long service life. Contura also has a combustion process that is both environmentally friendly and efficient, for the best heat production.

Read through these installation instructions carefully before installation. Read how to best light your stove in the lighting instructions.

List of Contents

Technical specifications	180
Surround	181
Chimney	182
Supply of combustion air	183
Installation distances	184
Positioning the insert	186
Assembling the stand	188
Assembling the surround – without shelves/bench	191
Assembling the surround – with shelves	197
Assembling the surround – with bench	204
Assembling grate and top	214

NOTE:

Report the installation of a fireplace to your local authority.

The owner of the house is personally responsible for ensuring compliance with the mandatory safety requirements and must have the installation approved by a qualified inspector. Your local chimney sweep must also be informed about the installation as this will affect the routines for regular chimney-sweeping services.

WARNING!

The stove becomes very hot

During operation, certain surfaces of the stove become very hot and can cause burn injuries if touched. Also, take heed of the strong heat radiated through the door glass. Placing flammable material closer than the safe distance indicated may cause a fire. Smoulder combustion can cause quick gas ignition with the risk of damage to property and personal injury.

Technical specifications

Model	i31
Output	4-9 kW
Nominal output	6 kW
Efficiency	81 %

Model		Ci31A	Ci31T	Ci31S
Weight (kg)		350	425	385
Shelves:	+ 50 kg			
Bench & Shelf:	+ 145 kg			
Powerstone (option):	+ 200 kg			
Protective screen (option):	+ 15 kg			
Width (mm)	910			
Depth (mm)	500			
Height (mm)	1650 / 1750			

Connector diameter Ø150 mm ext.

European standard EN-13240

DIN plus


Bauart 1

Part 15a B-VG

Test report no.: RRF-40 13 3372

SINTEF: 110-0405

Approved for installation in
Smoke Control Area by DEFRA

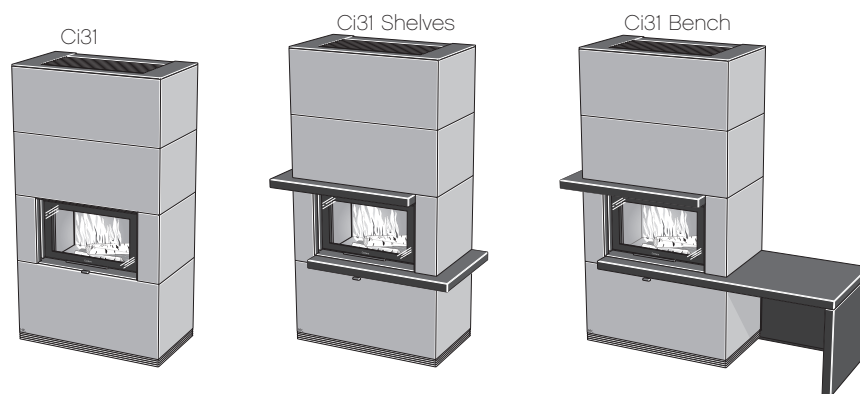

General

This manual contains instructions about how Contura i31 must be assembled and installed. More information about the insert is available in the separate installation instructions.

To ensure the function and safety of the hearth, we recommend that installation is carried out by an authorised technician. Our Contura dealers can recommend suitable technicians, information about our dealers can be found at www.contura.eu

Instructions for lighting are also supplied with the insert. Read them carefully and keep them safe for future use.

Application to local authority

Before installing a stove or erecting a chimney, it is necessary for you to make an application for permission to your local authority. Ask your local authority for advice regarding regulations and the application.

Structural support

If the fireplace is to be positioned on a wooden joist, a structural engineer should evaluate the load capacity of the floor. When the gross weight exceeds 400 kg, reinforcement of the wooden joists is usually necessary.

Hearth plate

Due to the risk of falling embers, a flammable floor must be protected by a hearth plate. It must extend 300 mm in front of the stove and 100 mm on each side of the stove, or have a 200 mm extension on each side of the opening. The hearth plate can consist of natural stone, concrete, metal or glass. A glass hearth plate is available as an accessory for these models.

Wall behind

If your Contura i31 is to be installed against a combustible wall, the wall must be protected by a firewall or by the integrated protective screen which is available as an option in some markets. The following material requirements are made of the firewall:

The building material must not be combustible.

The thermal conductivity coefficient $\dot{\epsilon}$ may be a maximum of 0.14 W/mK. The thickness of the building material must always be at least 100 mm. In cases where the building material's insulation properties are given as a U-Value, this must be a maximum of 1.4 W/ m²K.

List of suitable materials:

Aerated concrete $\lambda = 0.12-0.14$

Vermiculite $\lambda = 0.12-0.14$

Calcium silicate $\lambda = 0.09$

Contact your chimney sweep for advice in choice of other materials. Remember that even a non-combustible wall may require protection if it is a load bearing wall or has combustible material behind it.

Surround

Only handle the stone with clean hands or gloves. Handle the stone carefully so as not to damage fragile corners and edges.

The stone is a natural material, which means that there may be certain irregularities and variations in its appearance. Clean the stone with a damp cloth. Soapy water can be used if necessary. To avoid abnormally large gaps and uneven lines, it is important that the stove and steel stand are straight and stable. Adjust and align it carefully before hanging the stone. During assembly, check

that all the stone sections are straight and that all stones are of a uniform height. Use shims if necessary.





After assembly is complete some adjustment of the insert feet can improve the joint between the insert and the surround. The internal fit of the stone can also be adjusted using the stand feet. All feet must be contact with the base after any adjustment.




Shims



Sections 3 and 4:
Height 370 mm.
Sections 3 and 4 consist of similar panels.

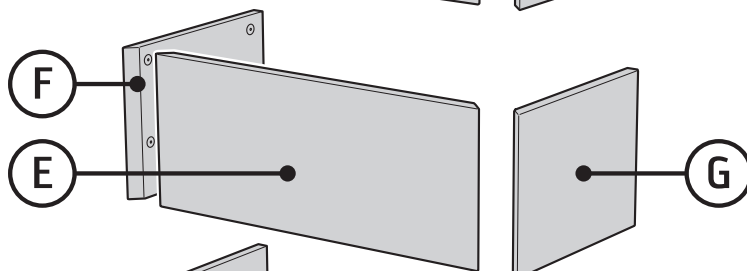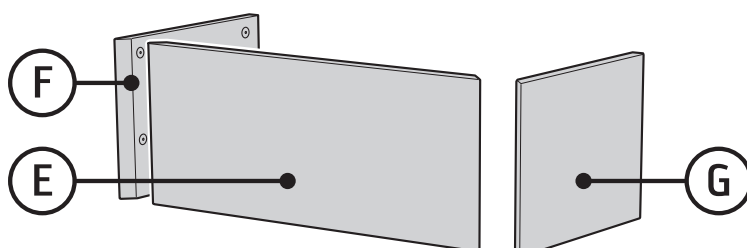

Section 2:
Height 400 mm (not shelves / bench).
Height 450 mm (with shelves / bench).
Supplied packaged separately.

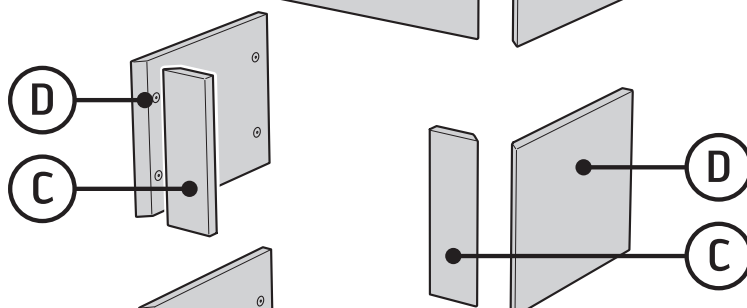

Section 1:
Height 450 mm.

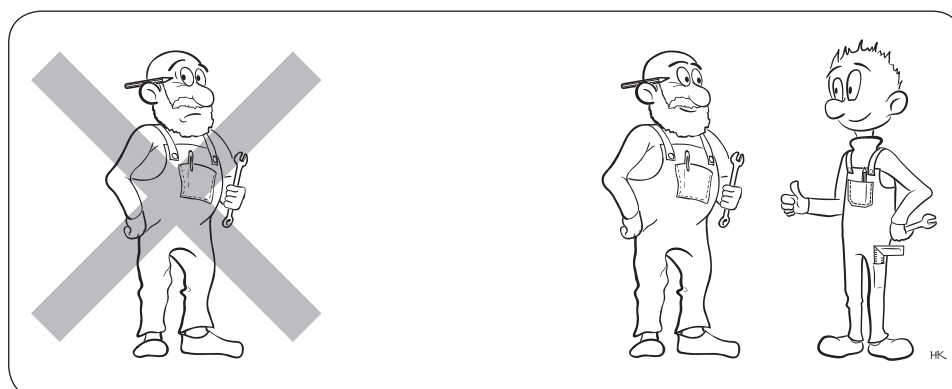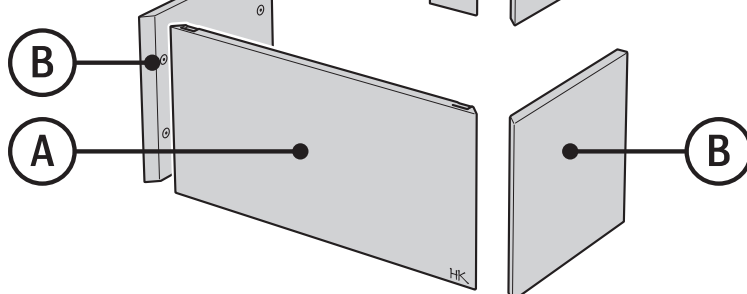

Chimney

The stove is type approved in accordance with EN 13240 and must be connected to a chimney dimensioned for at least 350°C the external connection diameter is Ø150 mm.

The insert requires a draft in the chimney of at least -12 Pa. The draft is affected both by the length and area of the chimney, and by how well sealed it is. Minimum recommended chimney length is 3.5 m and suitable cross section area is 150-200 cm² (Ø140-160 mm in diameter). Note that a flue with sharp bends and horizontal routing reduces the draught in the chimney. The maximum horizontal flue is 1 m, on the condition that the vertical flue length is at least 5 m.

Carefully check that the chimney is sealed and that there is no leakage around soot hatches and flue connections.

Make sure that the connector gasket does not work loose when the connection pipe is placed on the connector. If further sealing material is required, heat-resistant sealant may be used.


It must be possible to sweep the full length of the flue and the soot hatches must be easily accessible.

If two fireplaces are connected to the same chimney flue, the stove must be equipped with self-closing door, see insert instructions.

Rearward connection


If a protective screen is selected, this must be installed before making the chimney connection.

For rearward connection it is recommended to use a 45°+45° angle with soot hatch and with the centre at least 285 mm (without shelves/bench) respectively 335 (with shelves/bench) above the connector.

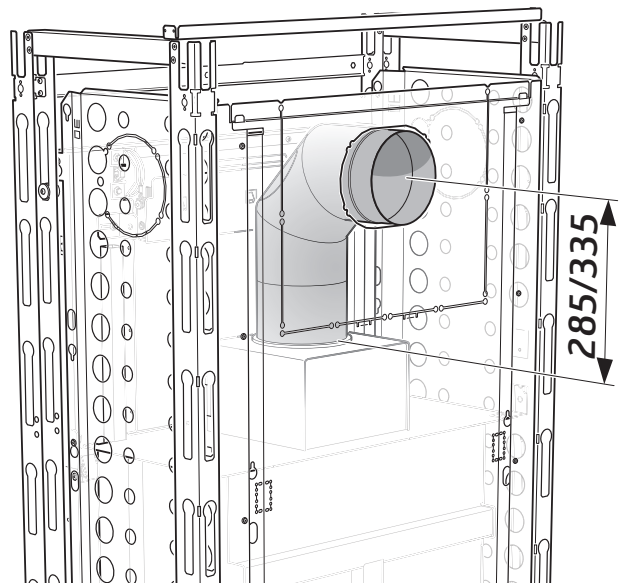

Top connection

Create an opening in the top grate by using the shorter grate profiles, see page 38. Cover the gap with a cuff.

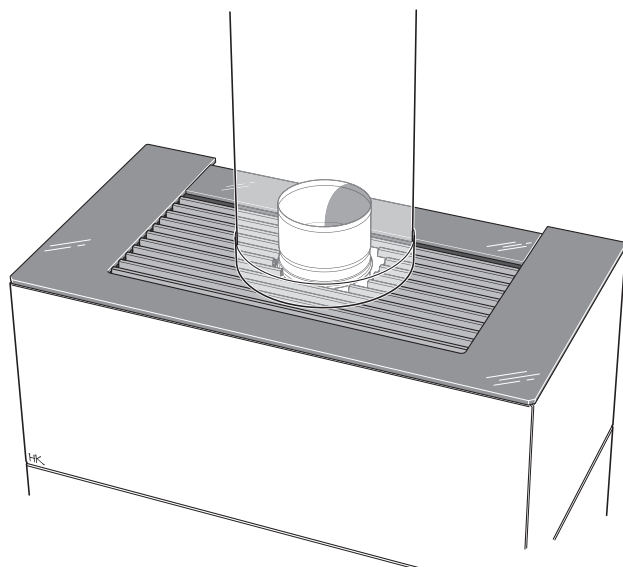

Supply of combustion air




Supply of combustion must be provided. Combustion air can be provided directly via a duct from outside, or indirectly via a vent in the outer wall of the room where the stove is placed. The amount of combustion air that is used for combustion is approx. 25 m³/h. Some installation alternatives are shown to the right. The air duct connection on the stove has an external diameter of Ø100 mm.

In hot areas the duct should be insulated with 30 mm mineral wool covered with a moisture inhibitor (aluminium tape). It is important that the lead-in, between the pipe and the wall (or floor), is sealed using jointing compound.

A 1 m length of condensation-insulated ducting for combustion air is available as an accessory.





Knockout

To insert the combustion air hose through the floor panel, remove the knockout.

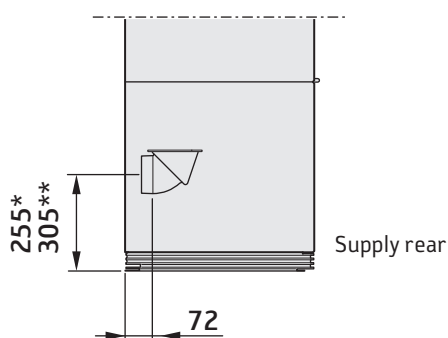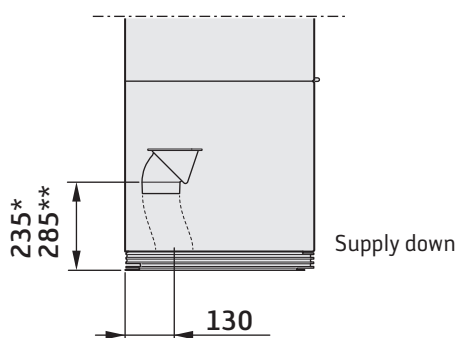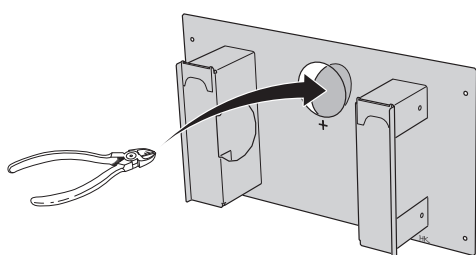

* Without shelves/ bench

** With shelves/ bench

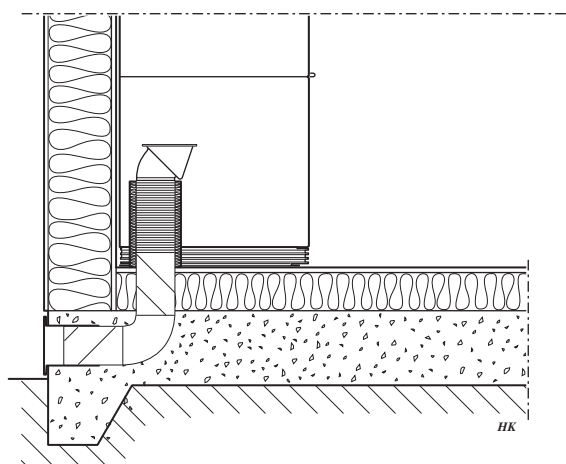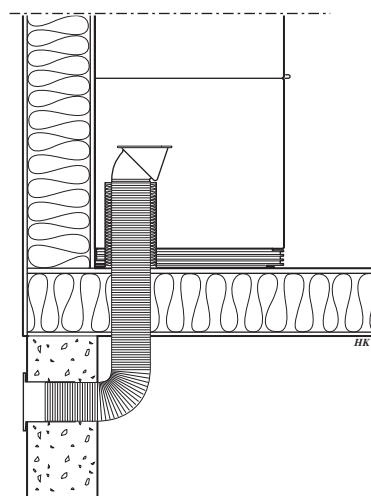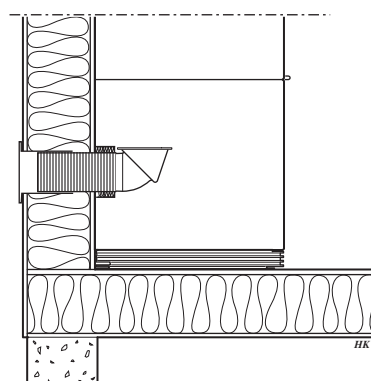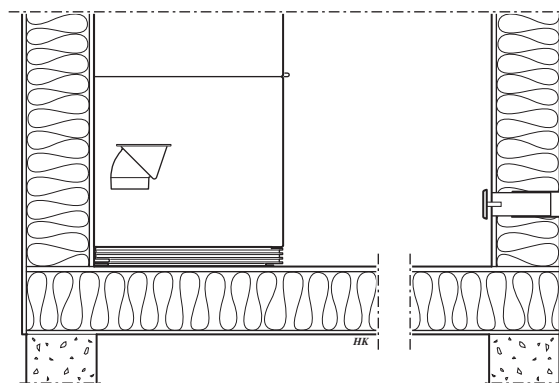

Installation distances


Ci31

Without shelves/ Bench

Important!

The dimension diagrams only show the minimum permitted installation distances for the stove. When connecting to a steel flue, also note the safety distance requirements of



the flue. The minimum distance to combustable parts of the building or interior decoration in front of the stove must be at least 1.5 m.

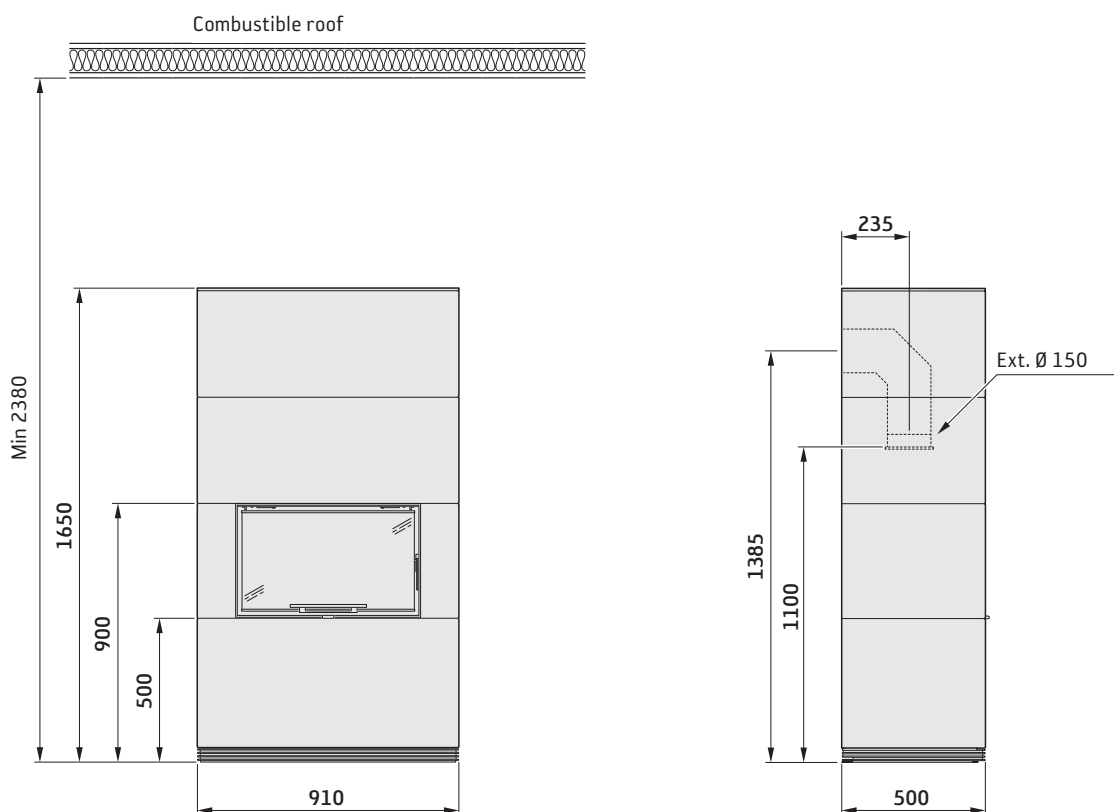

For placement against combustable rear walls, a built-in protective screen (option in some markets), or an external firewall that protects the wall behind is required. Material requirements for firewalls according to the section "Walls behind" on page 180.

Ci31

With shelves/ Bench

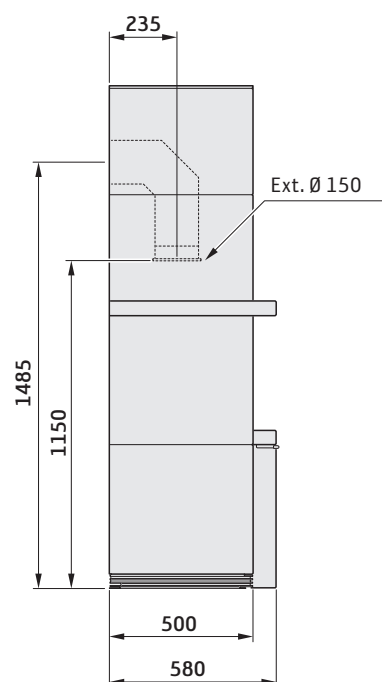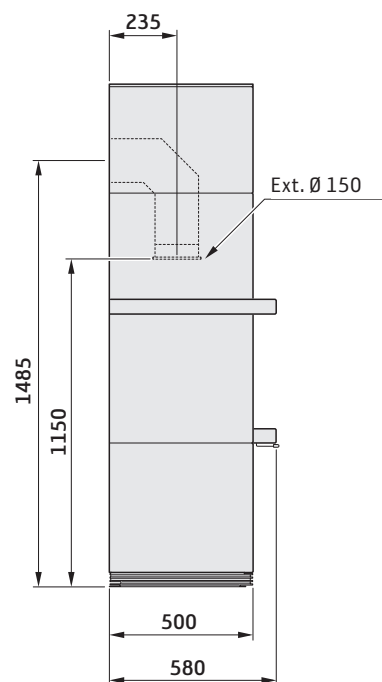


Positioning the insert



If the protective screen is selected – read these instructions before installing the insert or chimney.

Position the floor section and check that the minimum permitted distance to combustible material is kept. Measure to the centre of the floor section.


The rear edge of the floor section will align with the complete rear edge of the surround.

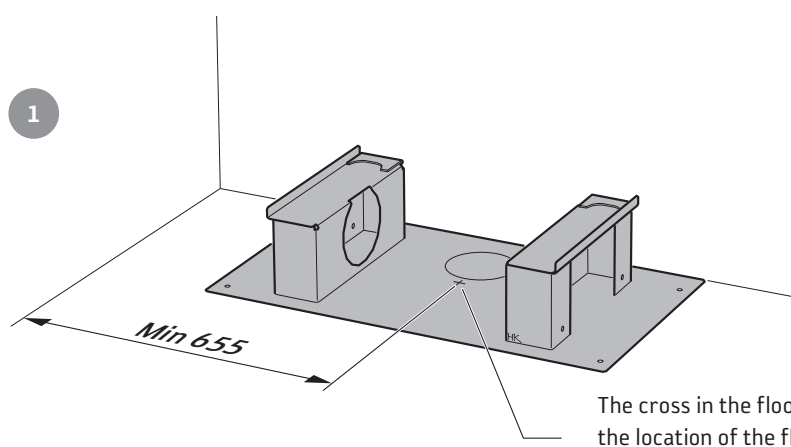


The stove can be positioned tight to the wall behind.

When installing against non-vertical walls and to facilitate installation it is recommended that a small gap is left between the wall and stove. Lay the floor section a slight distance from the wall behind, and align the position of the holes in the ceiling for the chimney lead-in with the same dimensions.

2

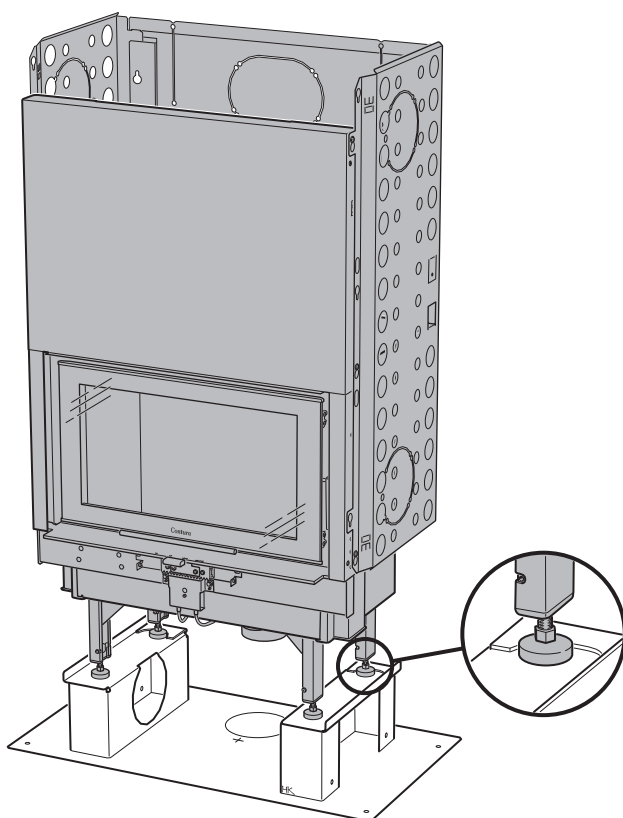

Place a spirit level on the moulding below the door, and adjust the front feet to the specified measurement from the floor to the moulding's lower edge and until the spirit level is straight.

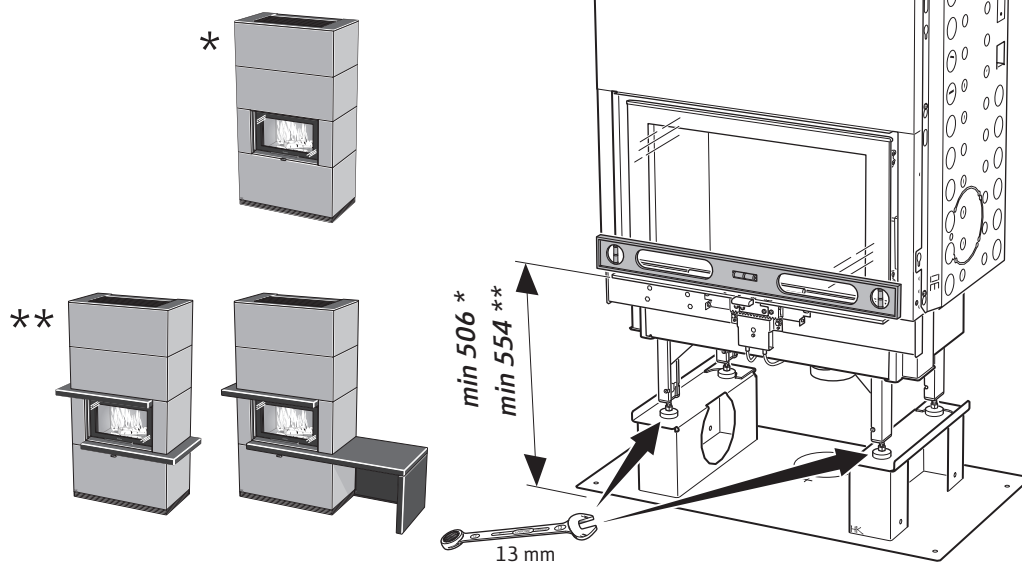


Position the spirit level as illustrated and adjust the rear feet until the stove is level.




Check that the transport locking device of the counterweight is removed according to the insert instructions before assembling the surround.

- With combustion air hose as option – now connect according to separate instructions.

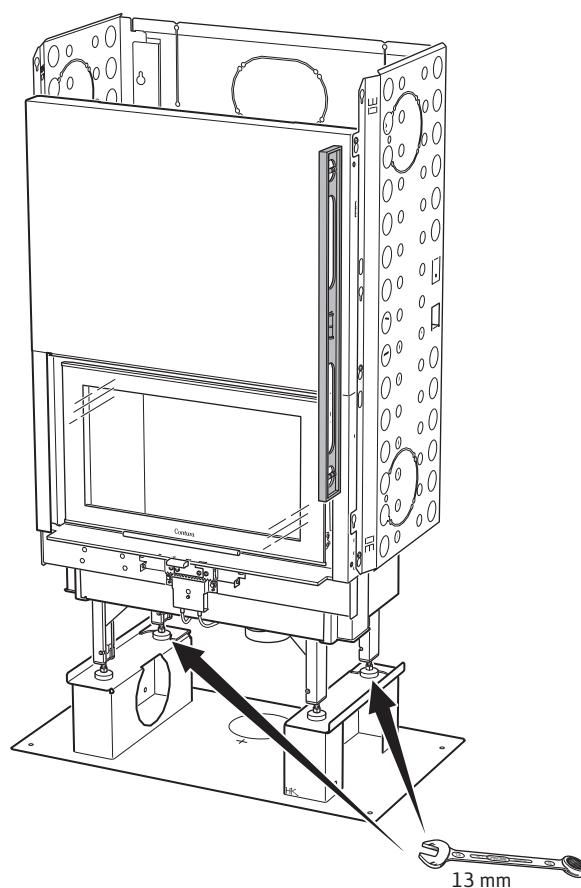


Assembling the stand


1

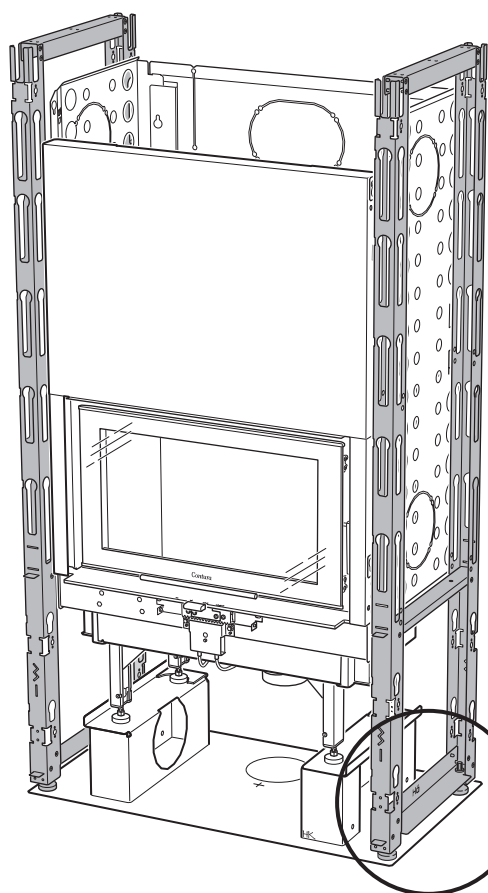


Note the difference between the right and left stand frame. The lower brace must protrude on the outside and forwards, and provide support surfaces for the stones.

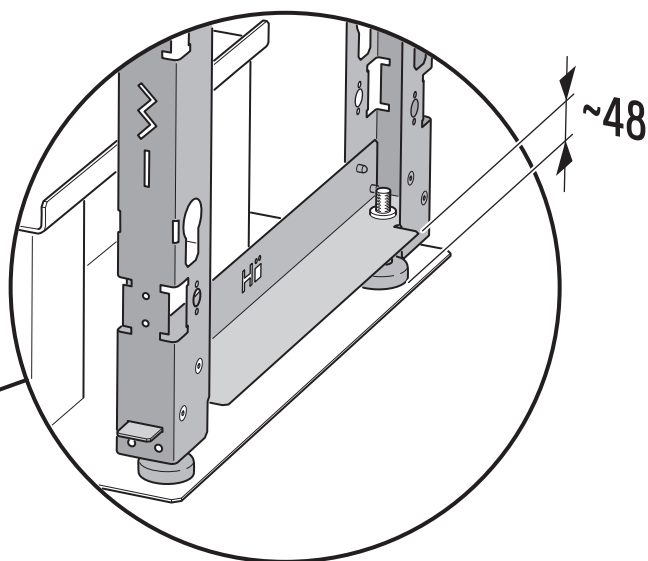


2

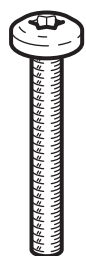



x 2
M5 x 40
T25

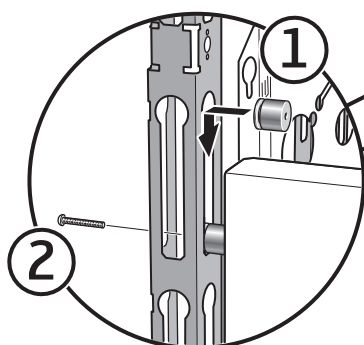

x 2
M6 x 20
Allen screw 4
(Tightened from inside)

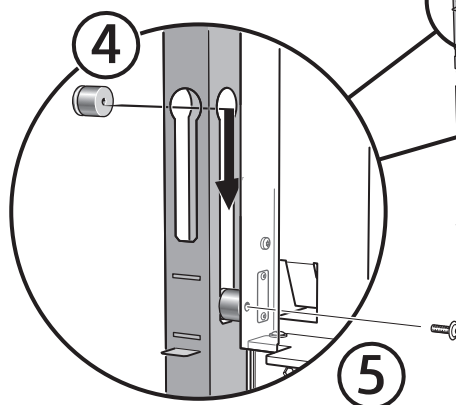


5

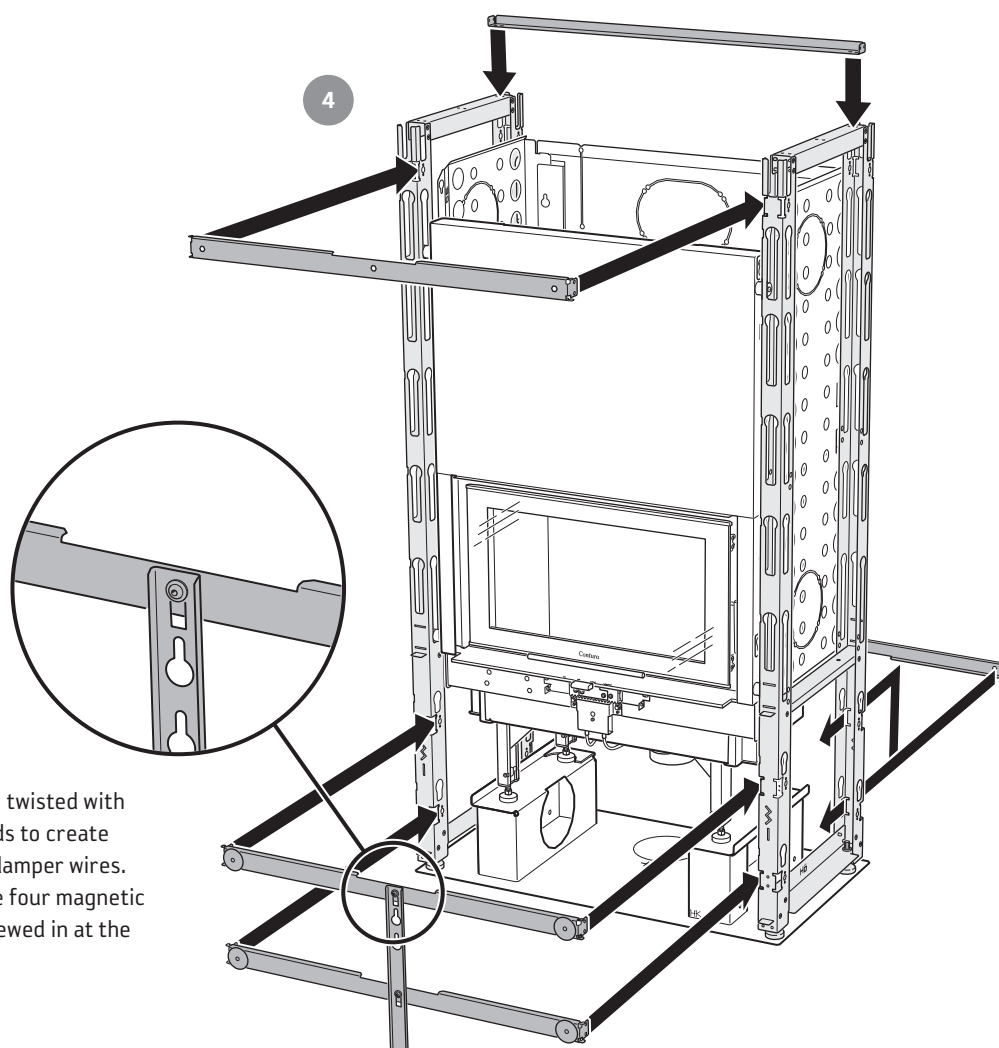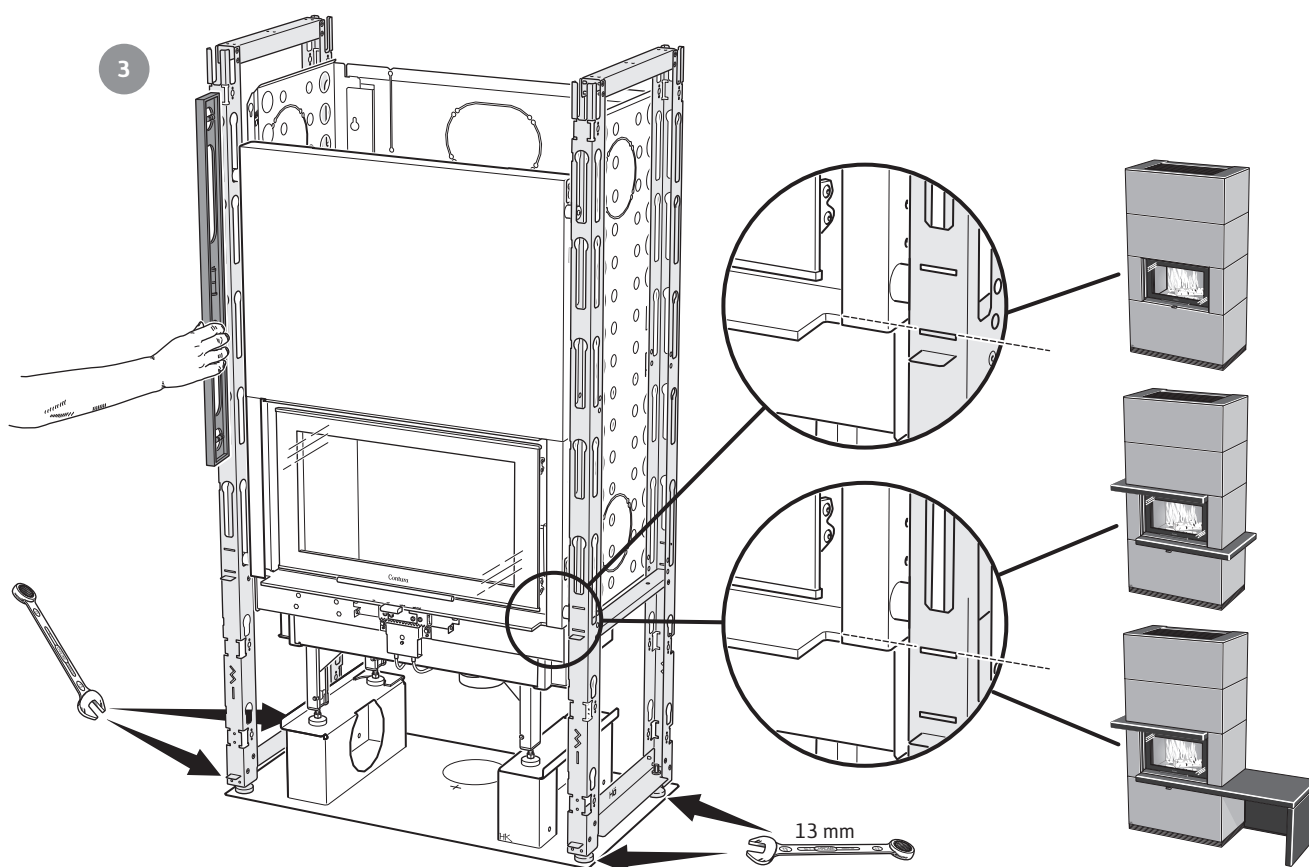

This brace must be twisted with the cut-out upwards to create clearance for the damper wires. Also check that the four magnetic mountings are screwed in at the bottom.

5

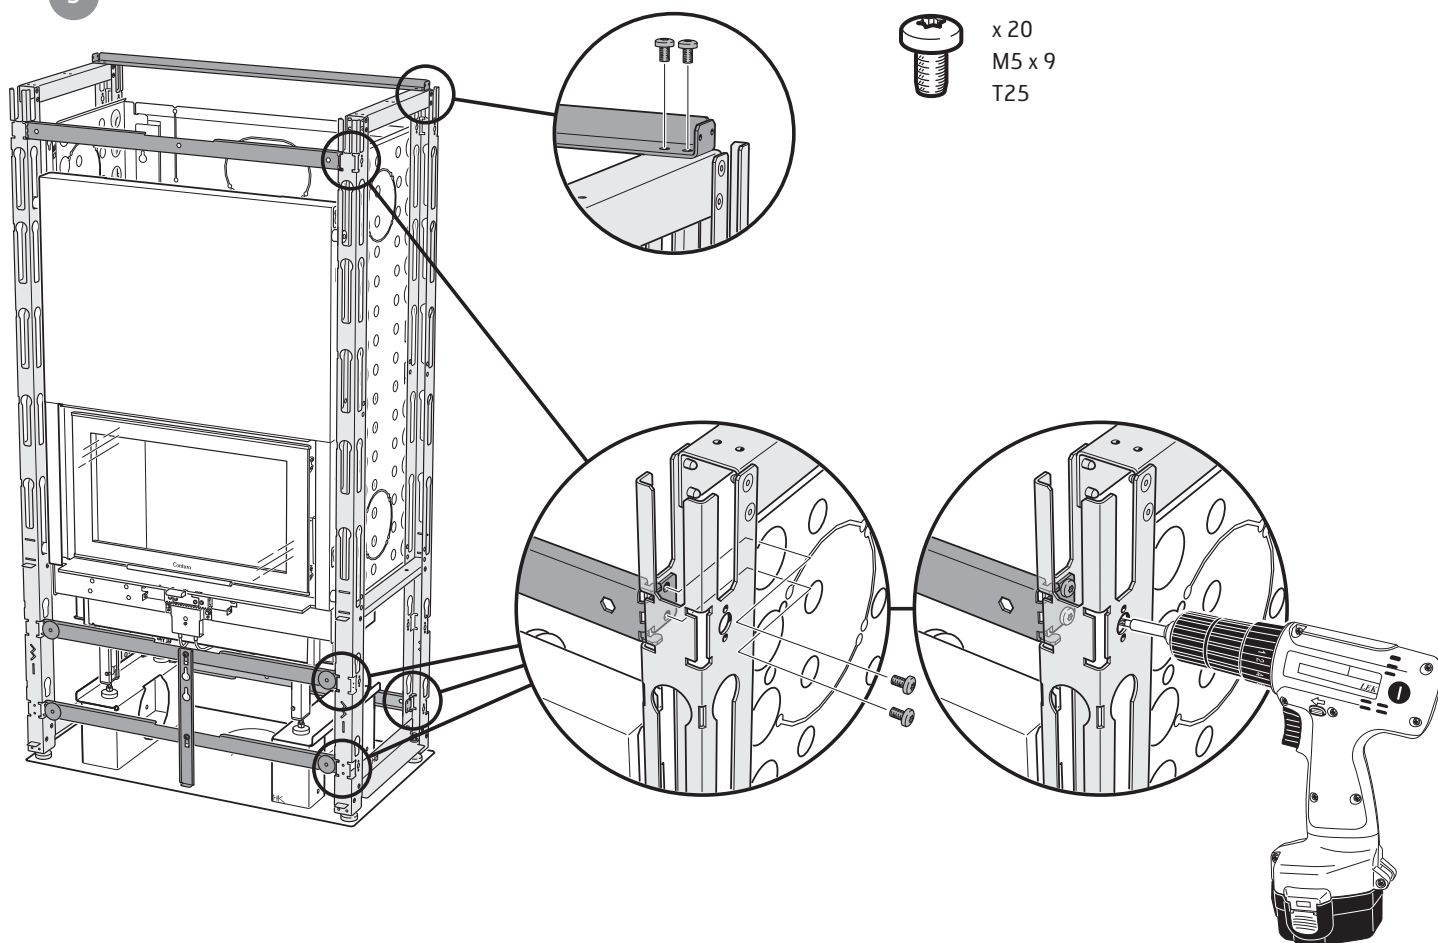


Ensure that the disc base can be pushed around the stand. Adjust the base height with the rubber feet. On heavily sloping floors the insert and stand may need to be raised further.

Then reposition the base until all stones are in place.

Check that there is a 30 mm gap all the way between the rear of the stand and wall behind.


6

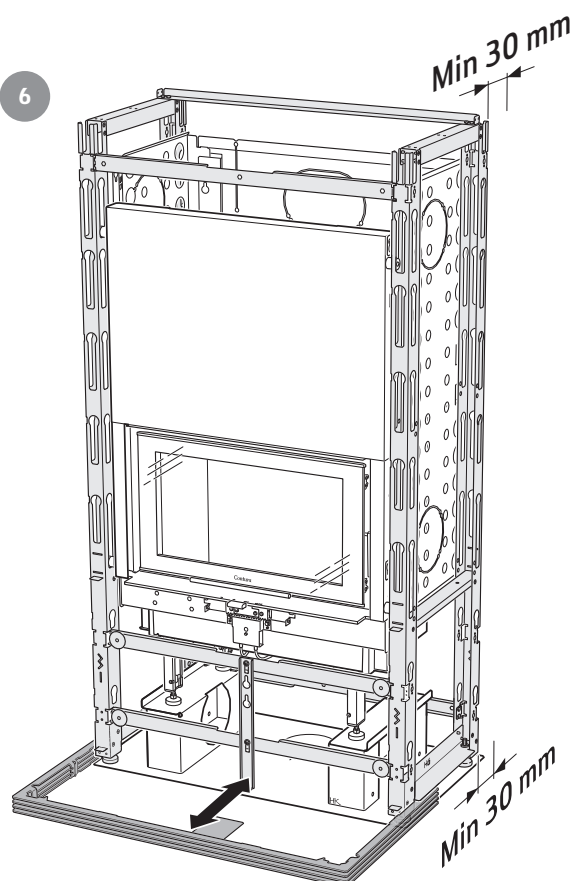



- With protective screen as option – now connect according to separate instructions.
- Connect the chimney – upwards or rearwards, follow the chimney manufacturer's instructions.
- With Powerstone as option – position the heat tank according to the insert's instructions.

Assembling the surround – without shelves/bench

1

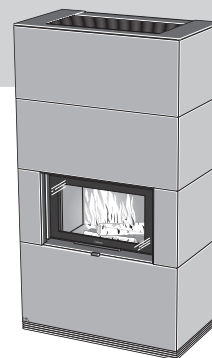


2

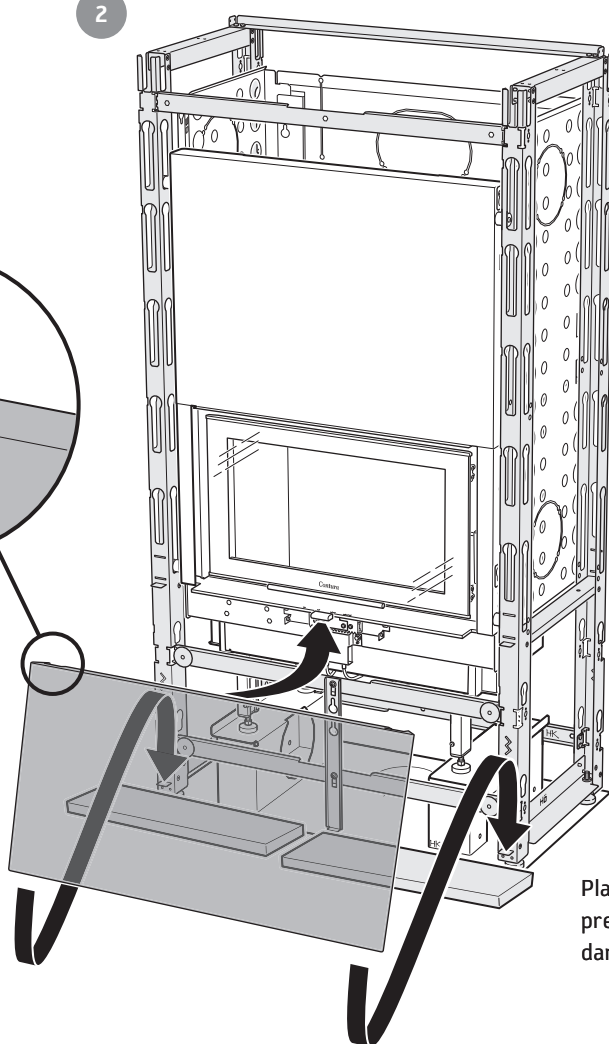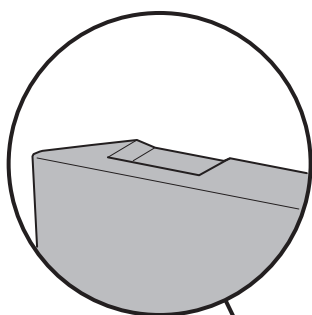

Place a foam sheet on the floor to prevent the stone corners from becoming damaged when handling.

3

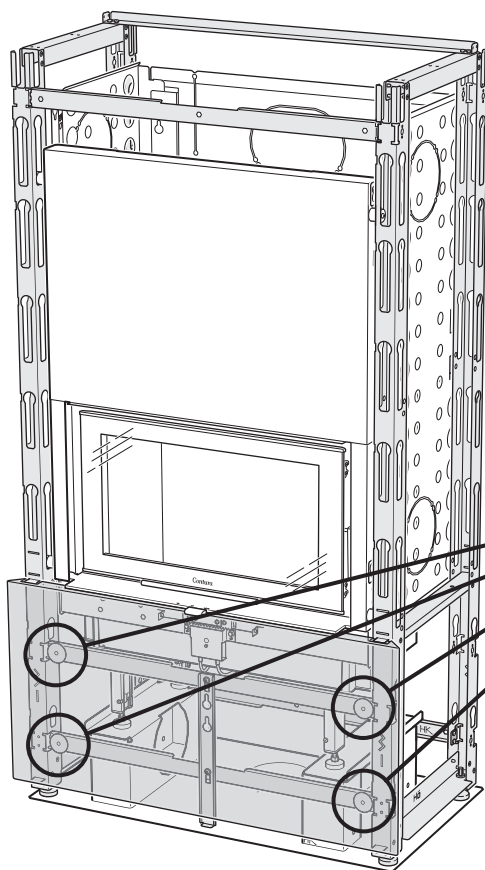


The stone must lie flush against the stand.




x 2
M6 x 20
Allen screw 4

This panel can be removed for servicing. Lock it in place by inserting two screws through the moving catch (A) in the front panel. Do not tighten the screws – it must be possible to move the catch upwards to detach the panel.


4

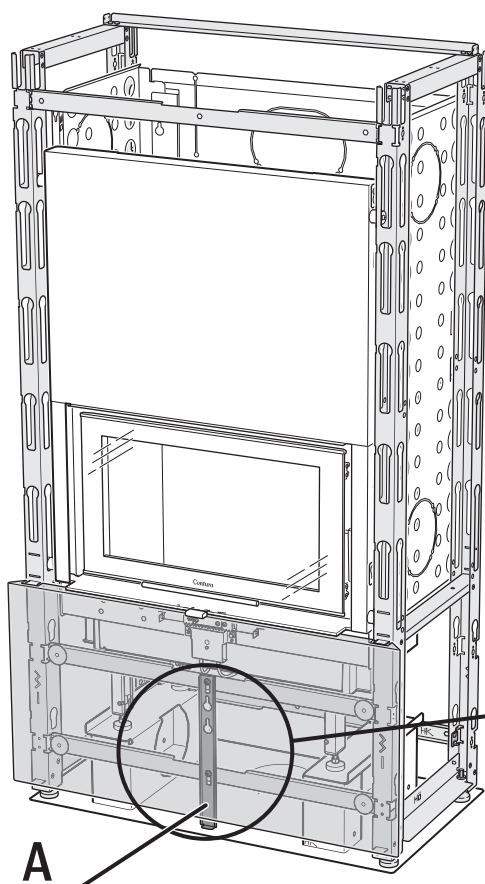

A

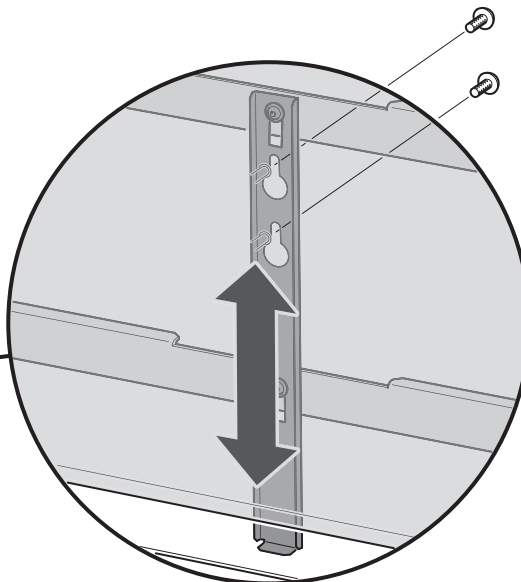


5

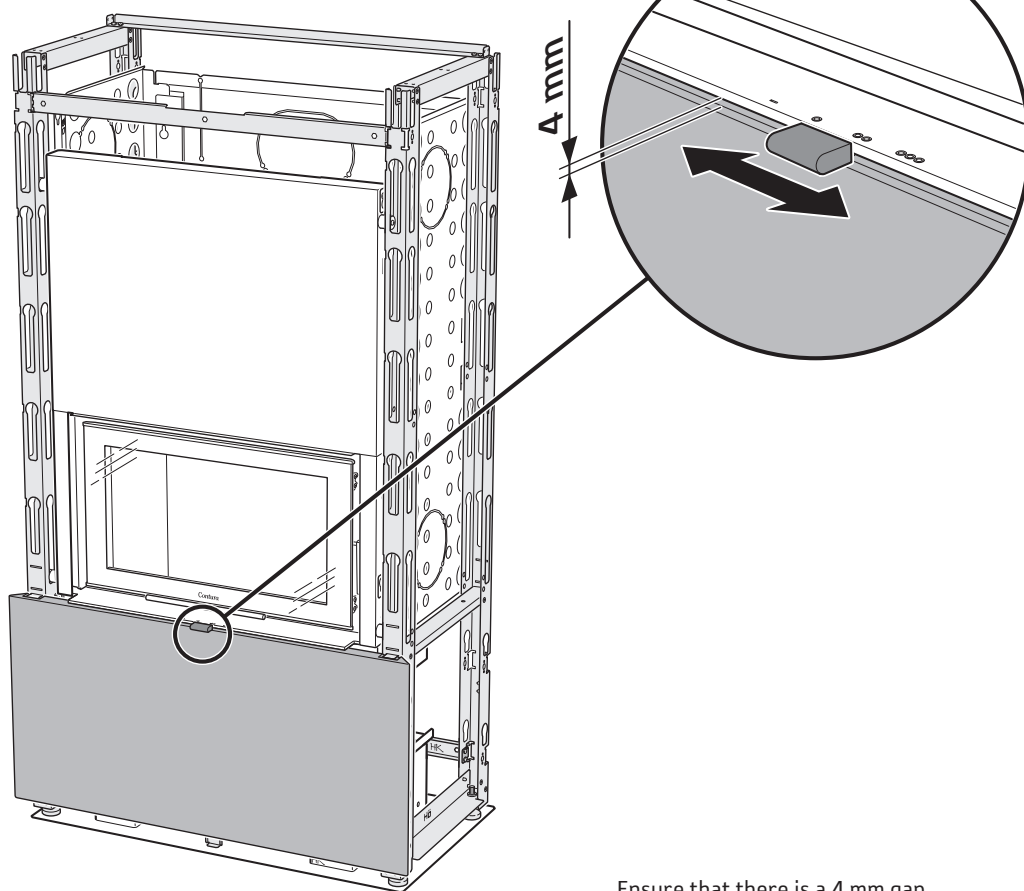




Ensure that there is a 4 mm gap between the stone and insert so that the damper can move freely.

6

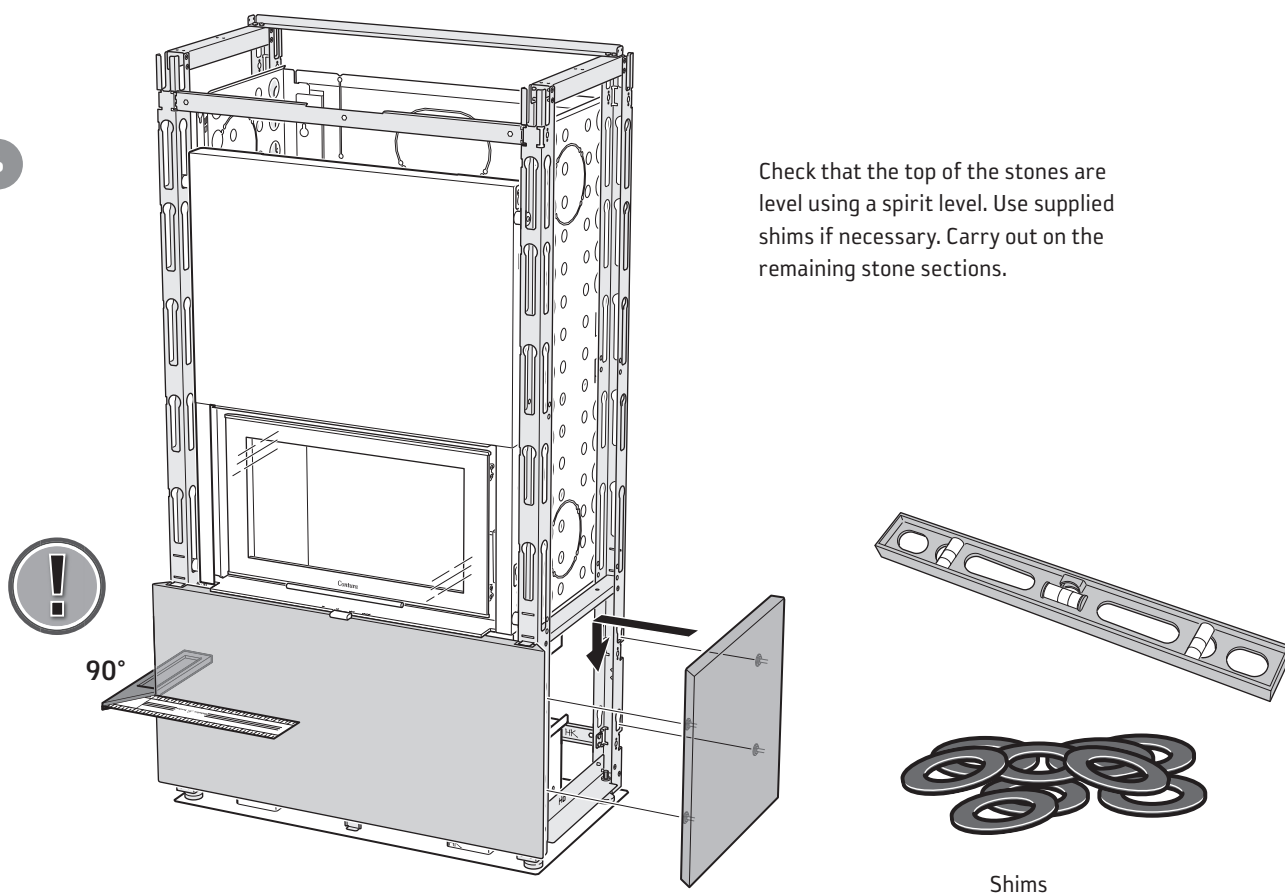


Check that the top of the stones are level using a spirit level. Use supplied shims if necessary. Carry out on the remaining stone sections.


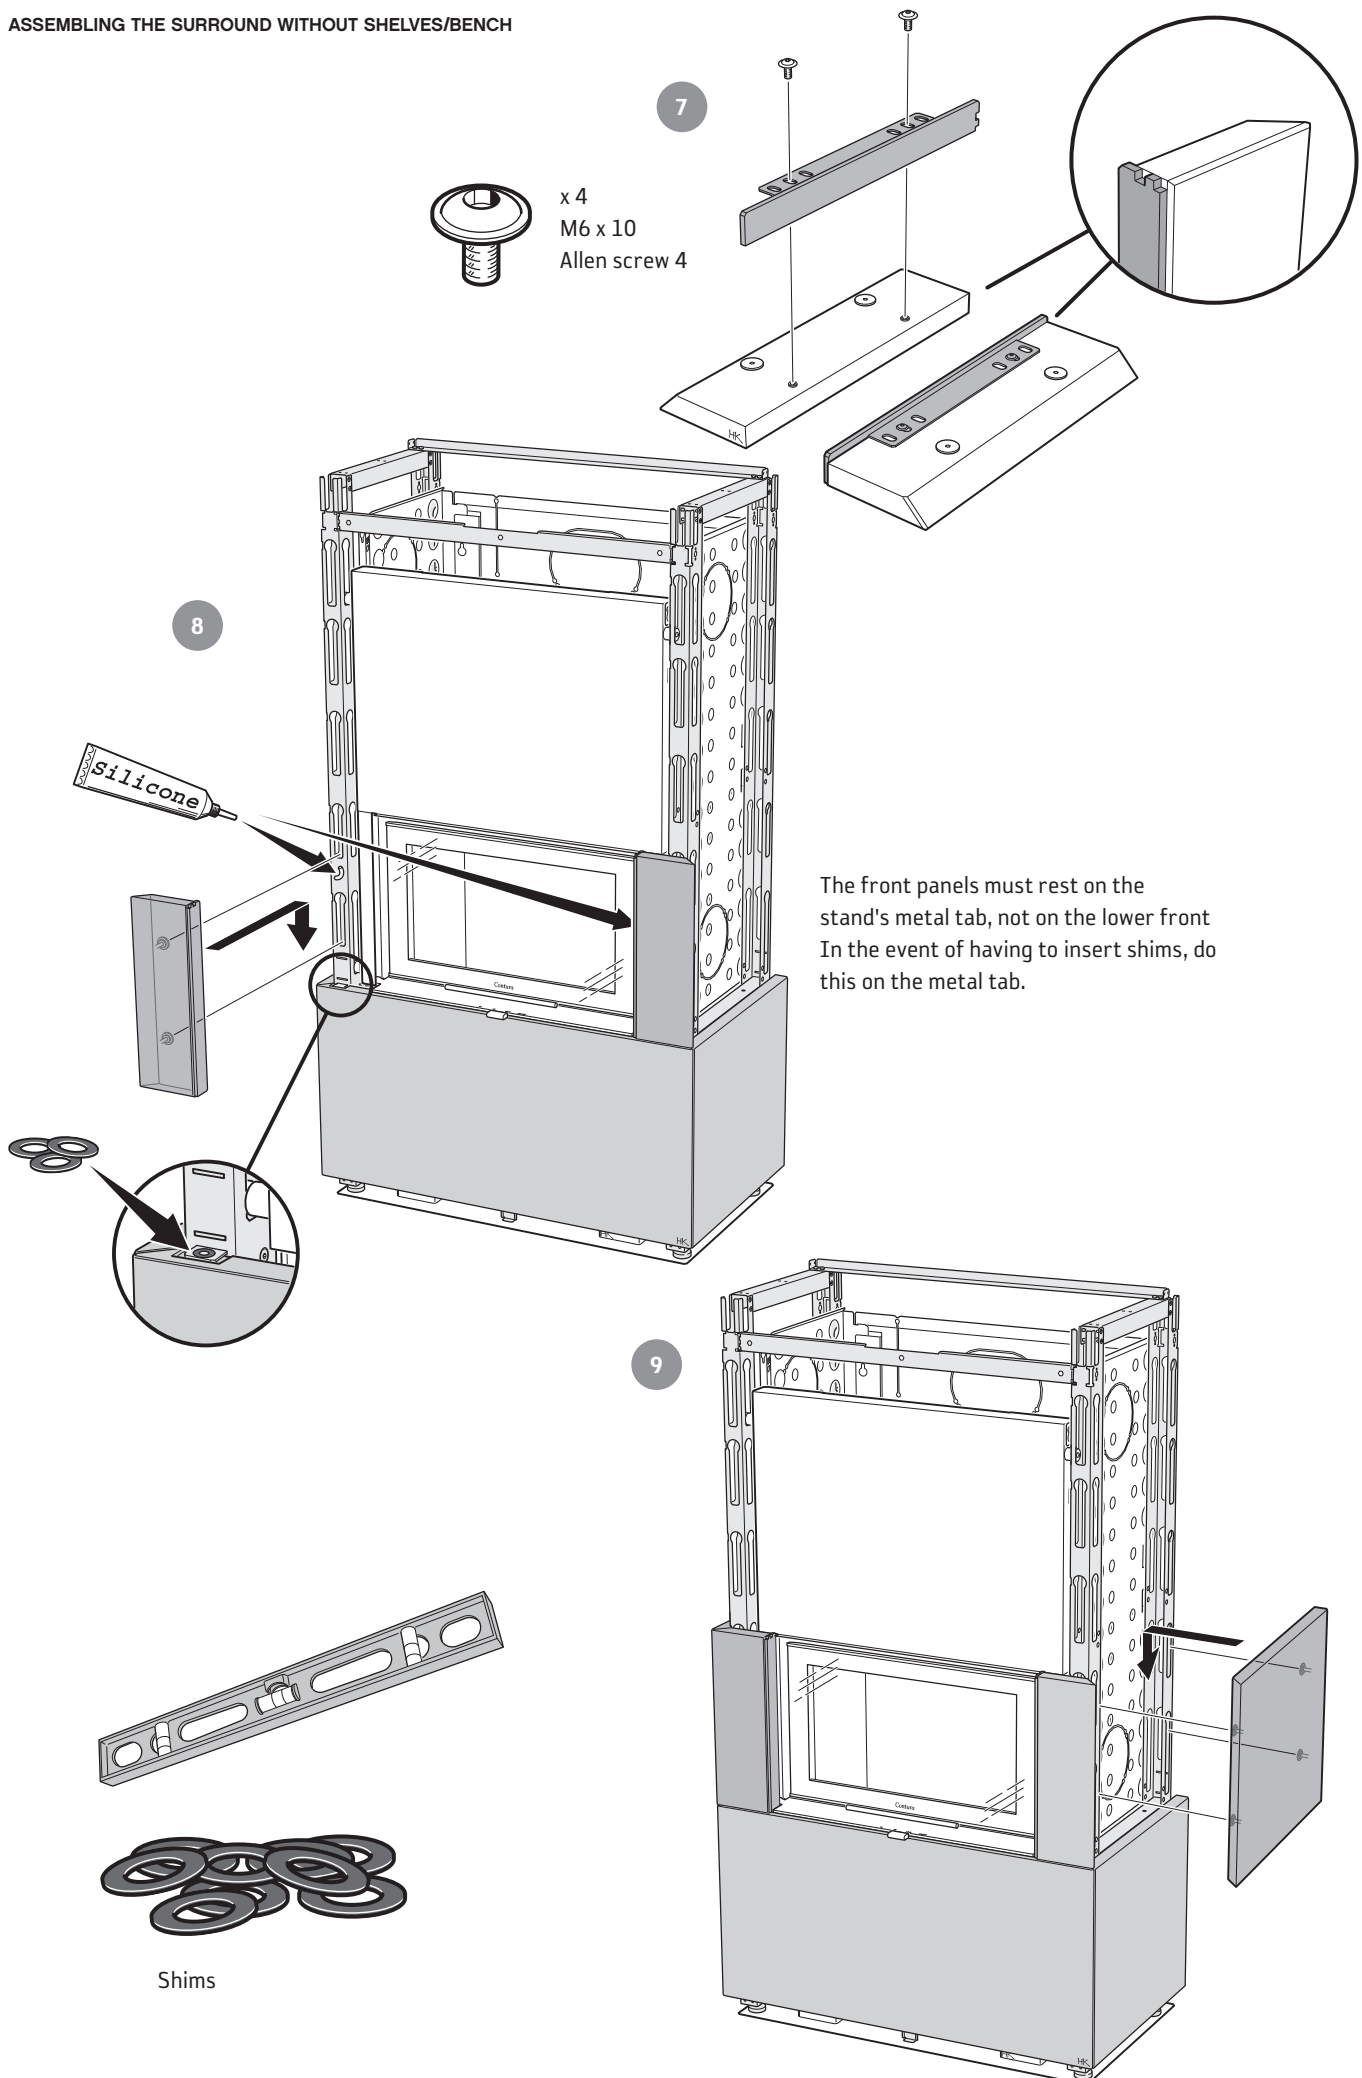


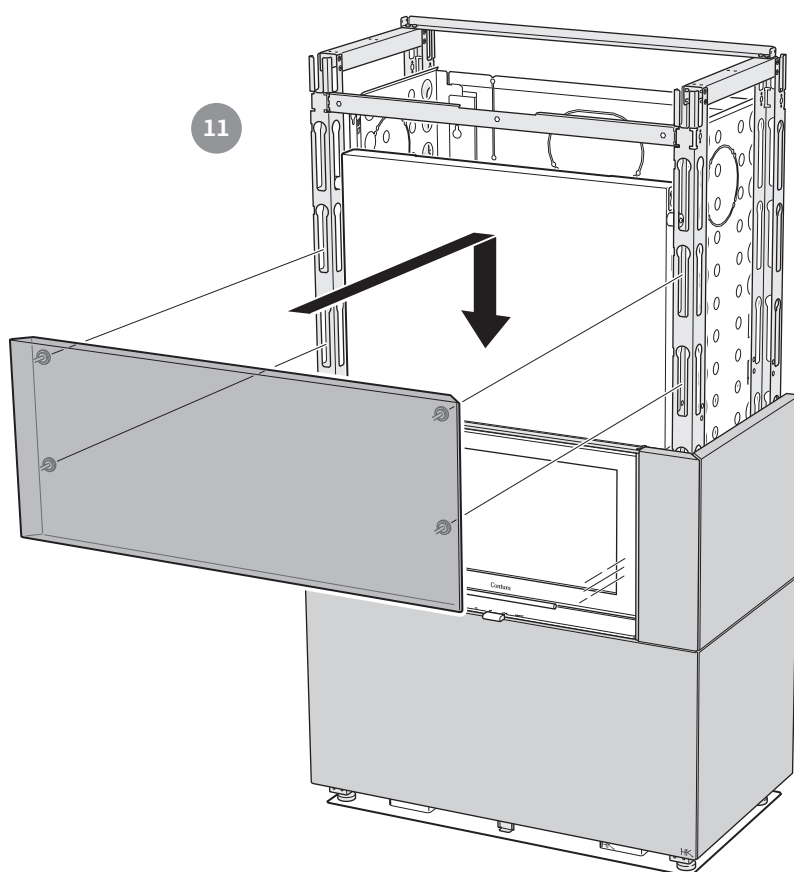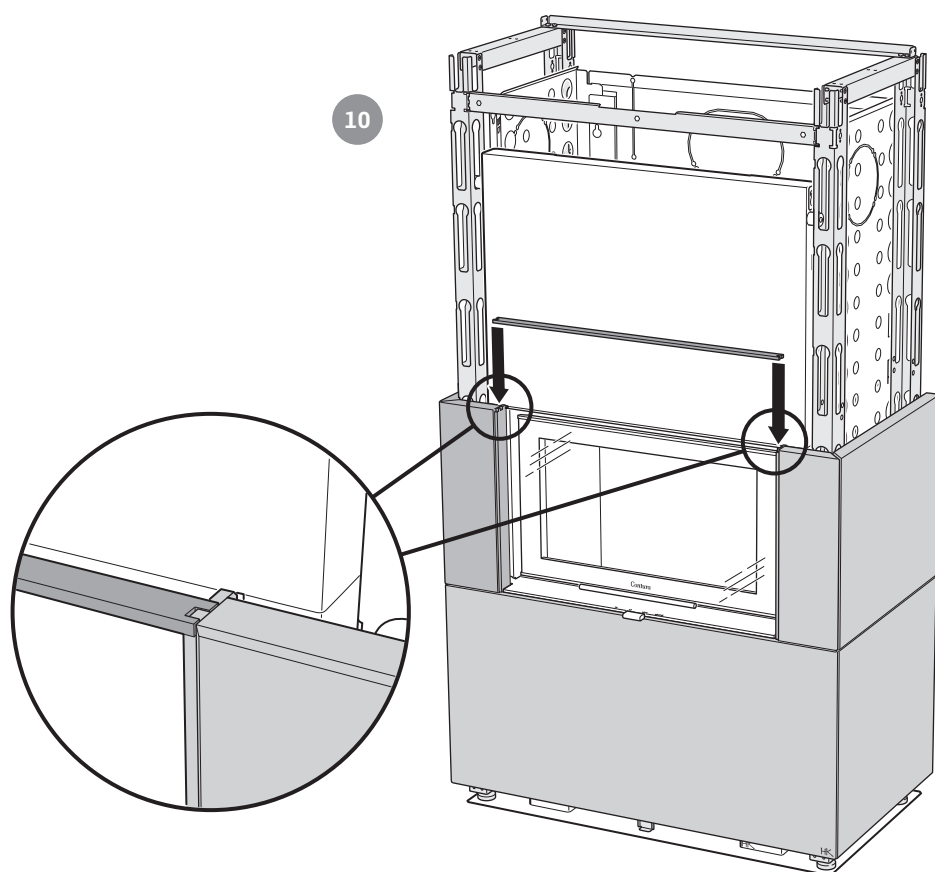

12

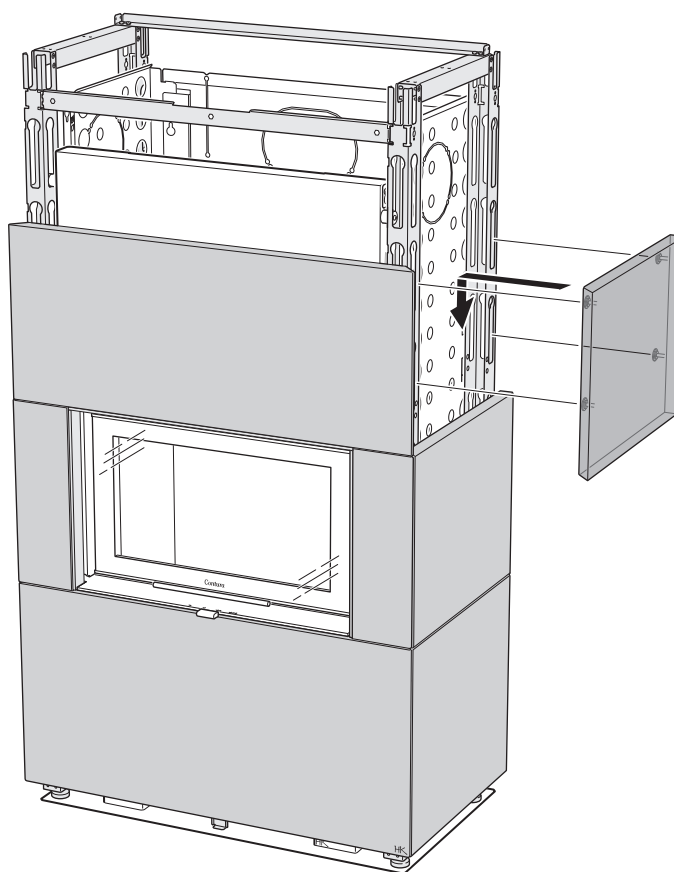


13

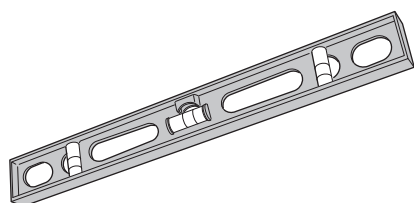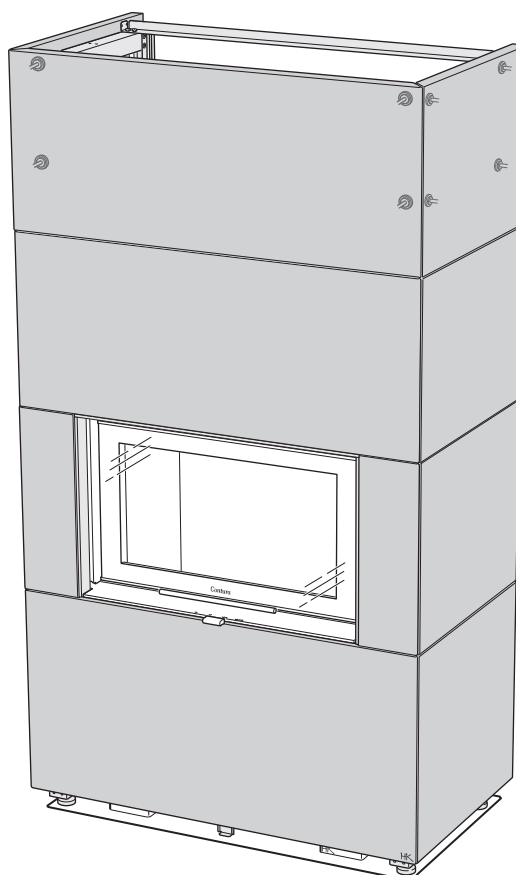


Shims

Final installation:
See page 214


Assembling the surround – with shelves

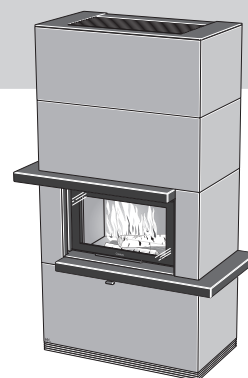

1

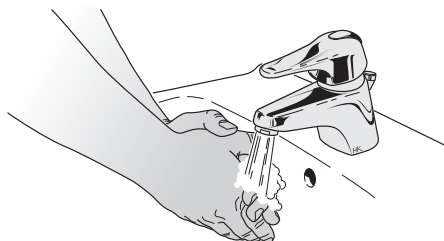

2

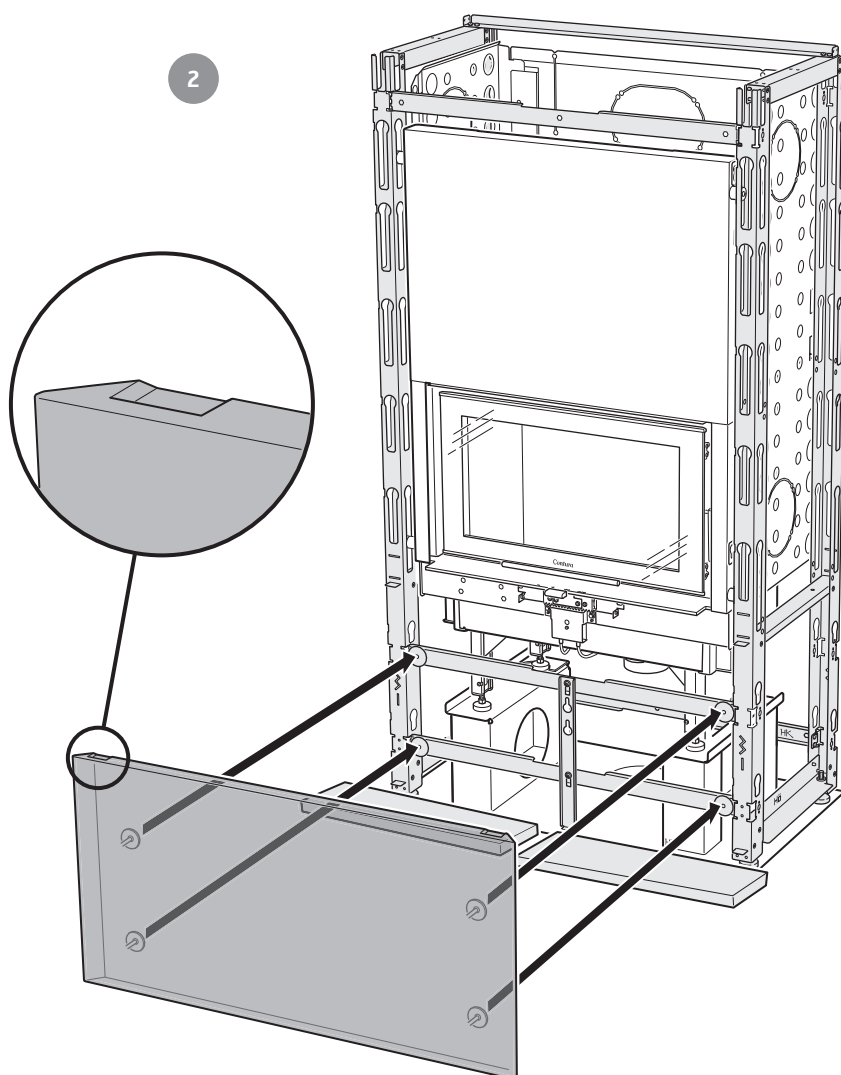



Place a foam sheet on the floor to prevent the stone corners from becoming damaged when handling.

Without Shelves/ Bench

With Shelves

With Bench

3

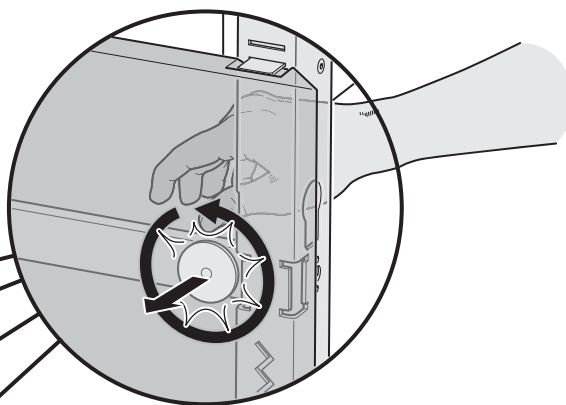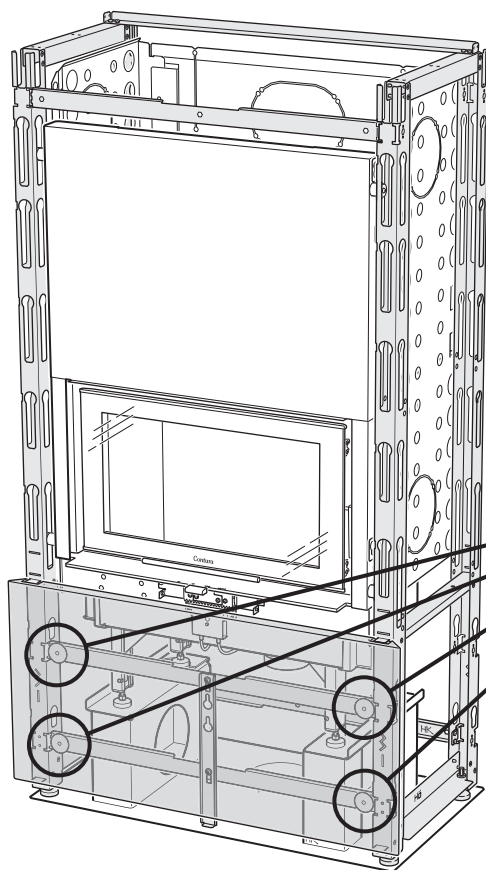


The stone must lie flush against the stand.






x 2
M6 x 20
Allen screw 4

4

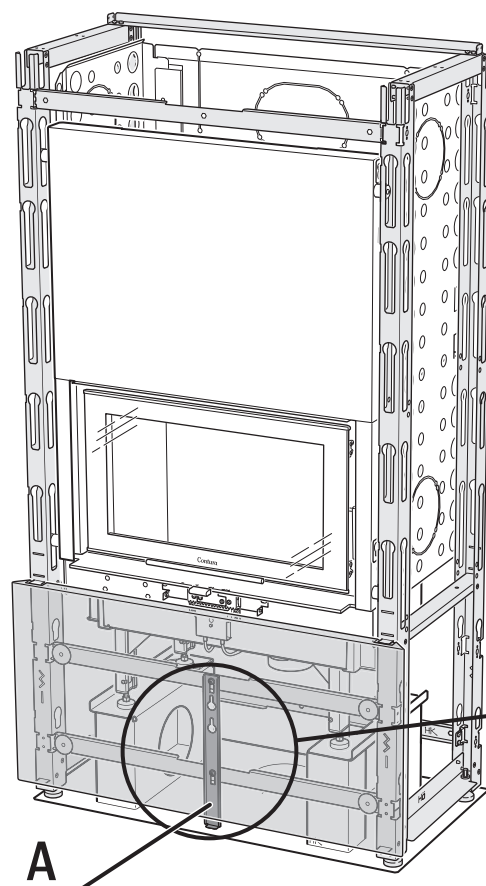


This panel can be removed for servicing. Lock it in place by inserting two screws through the moving catch (A) in the front panel. Do not tighten the screws – it must be possible to move the catch upwards to detach the panel.

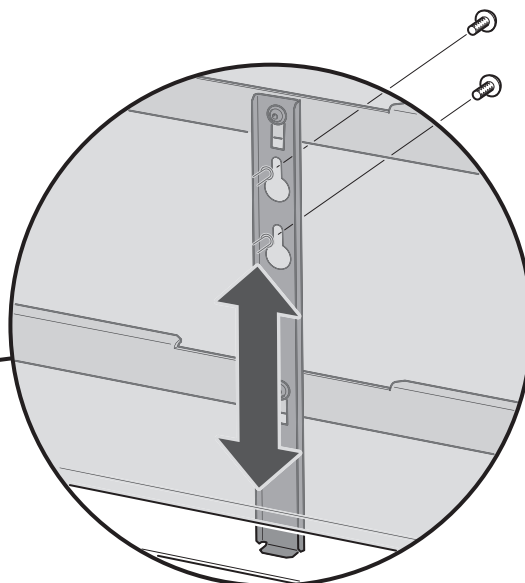

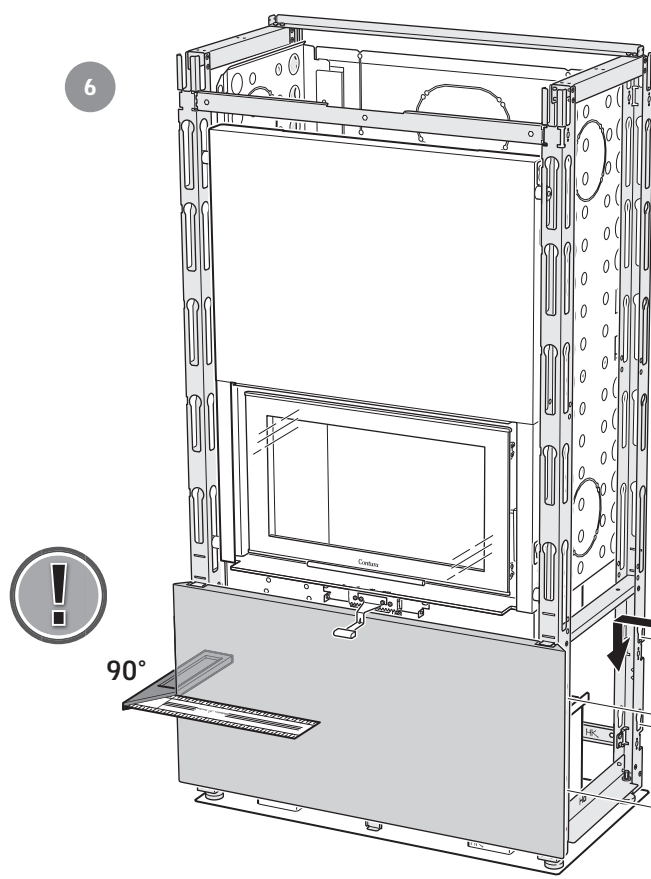
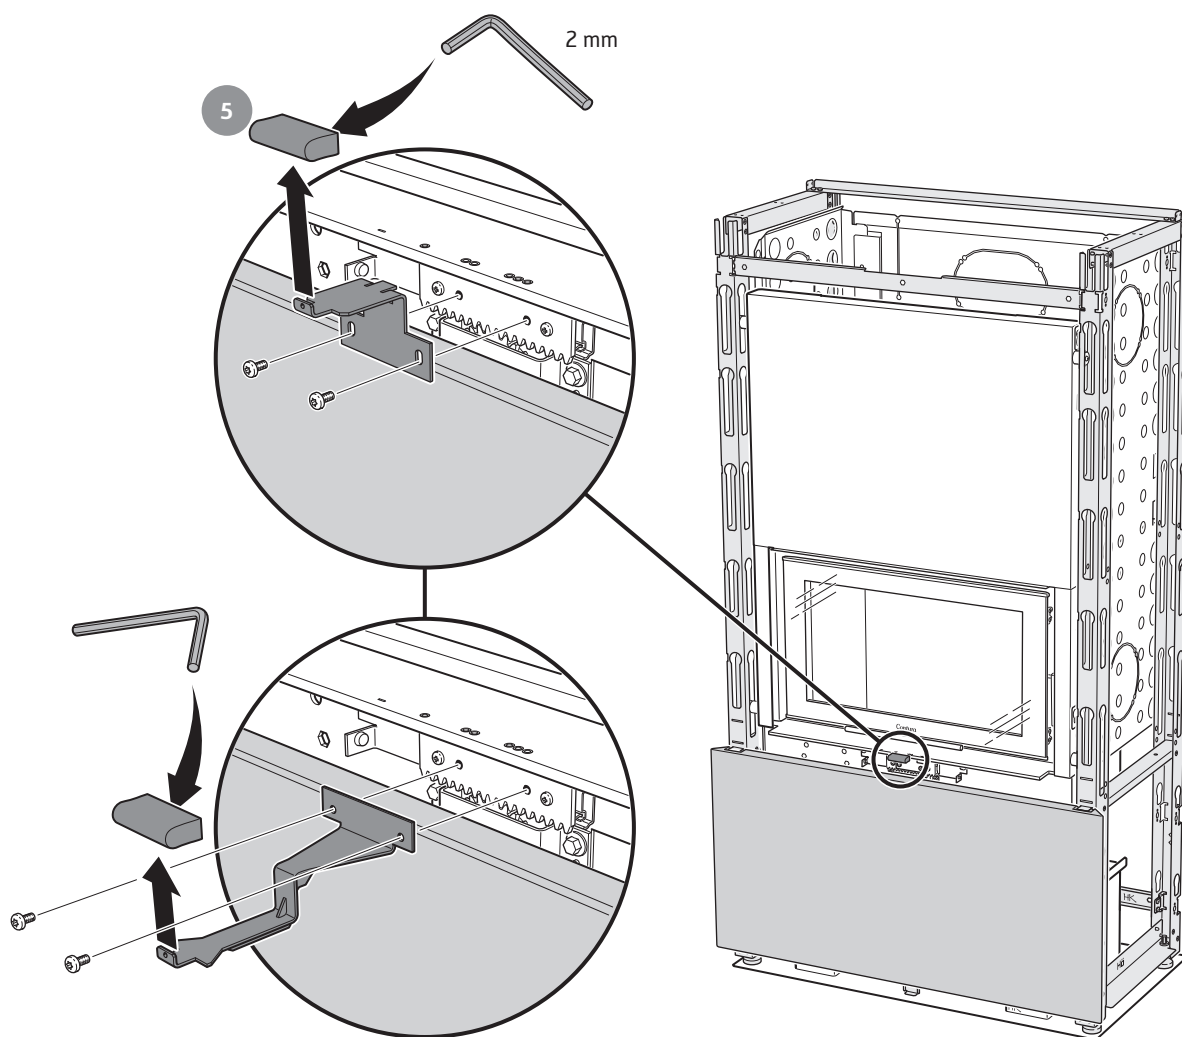


Check that the top of the stones are level using a spirit level. Use supplied shims if necessary. Carry out on the remaining stone sections.

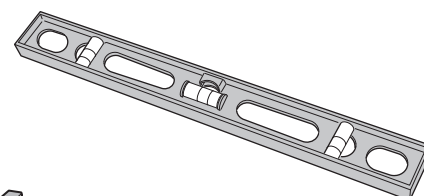

Shims


7

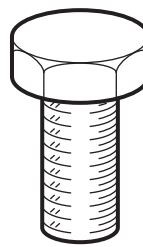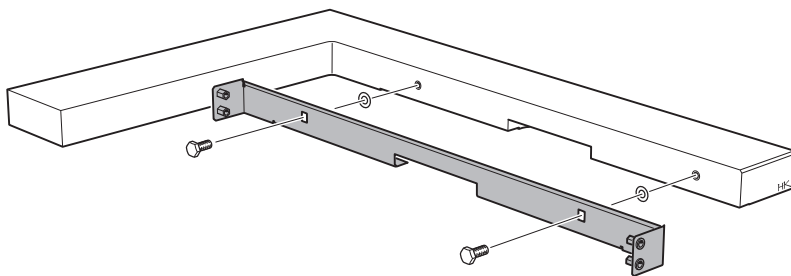


x 2
M10 x 20
Allen 16 mm

Do not tighten the screws completely in order to allow some lateral adjustment of the shelf after installation.


8

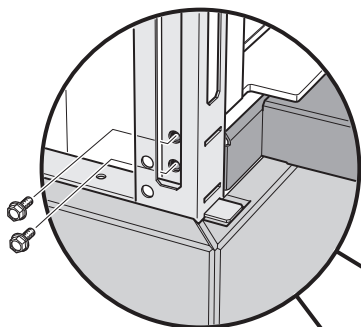


x 4
M6 x 16
Allen 10 mm

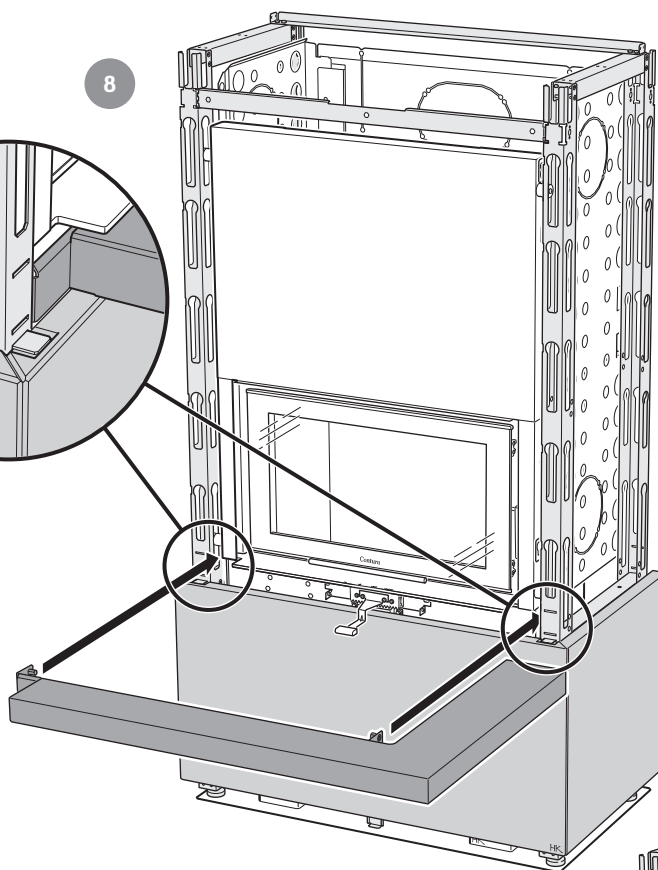


9

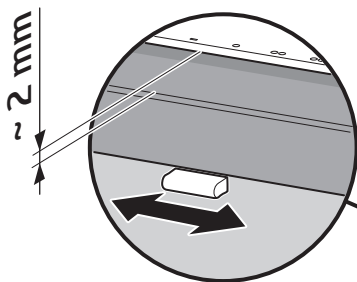



Ensure that there is a gap of about 2 mm between the shelf and insert and that the damper can move freely.

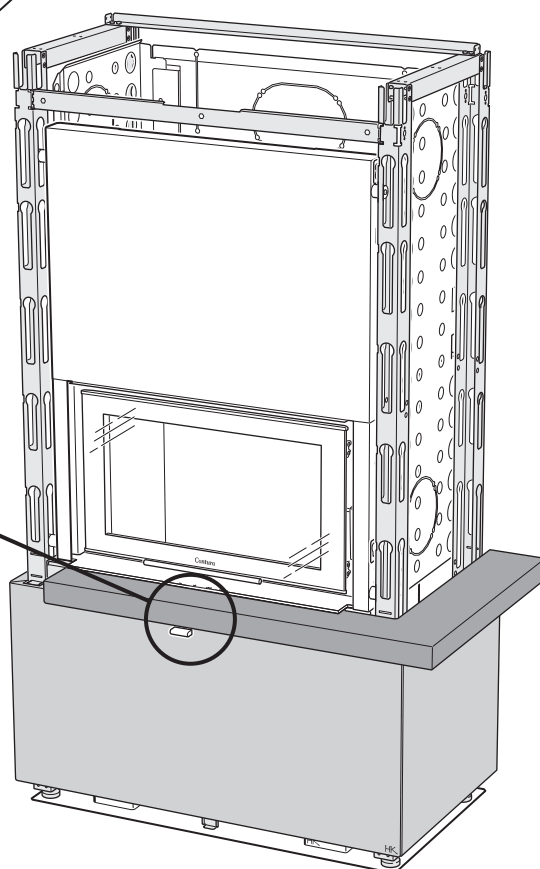


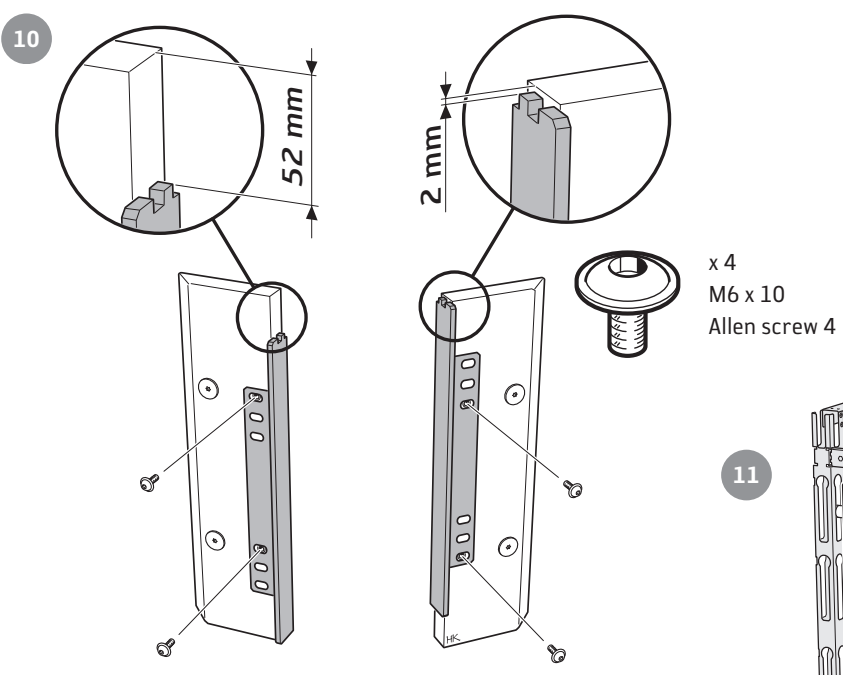


11

The front panel must rest on the stand's metal tab, not on the lower front. In the event of having to insert shims, do this on the metal tab.

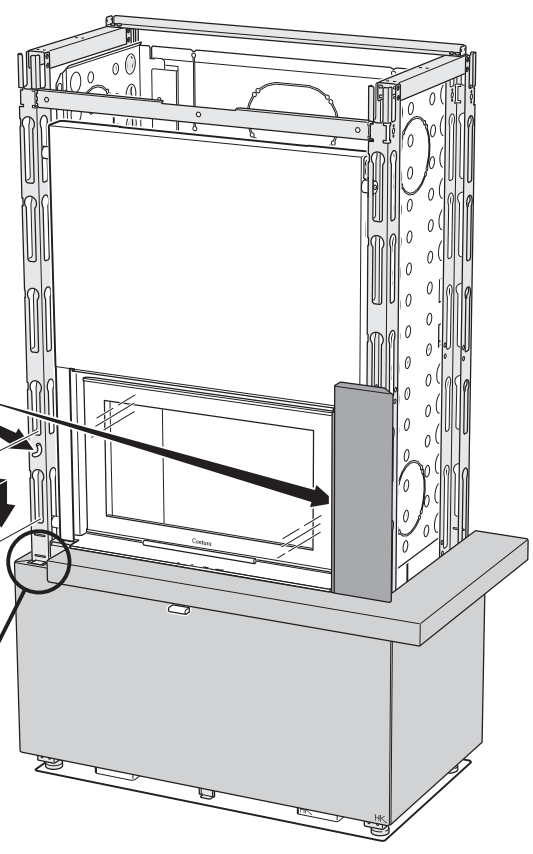



12

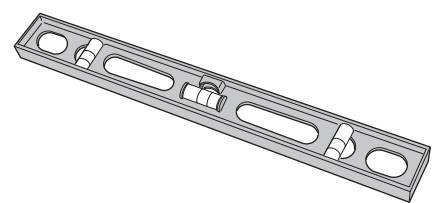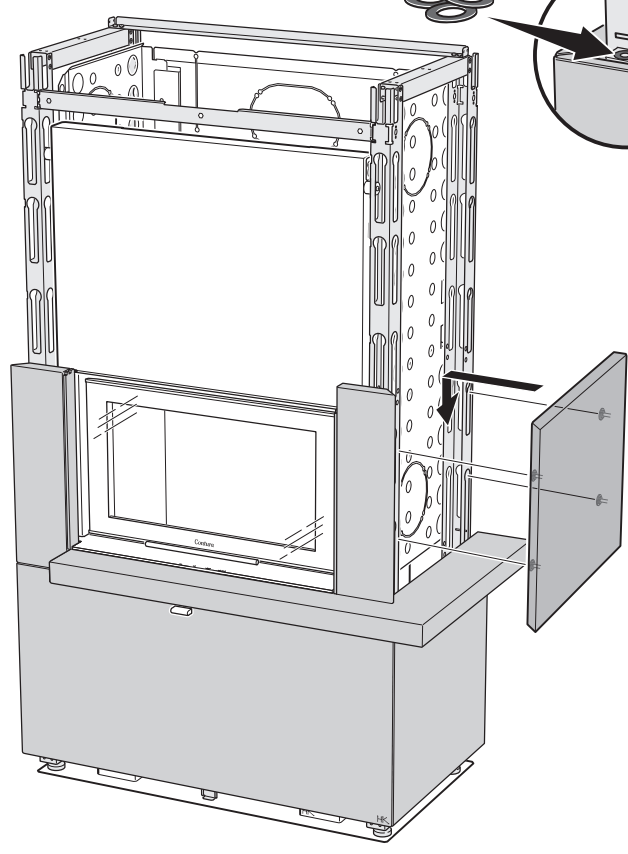



Shims

13

Check that the frame moulding does not bend downwards.

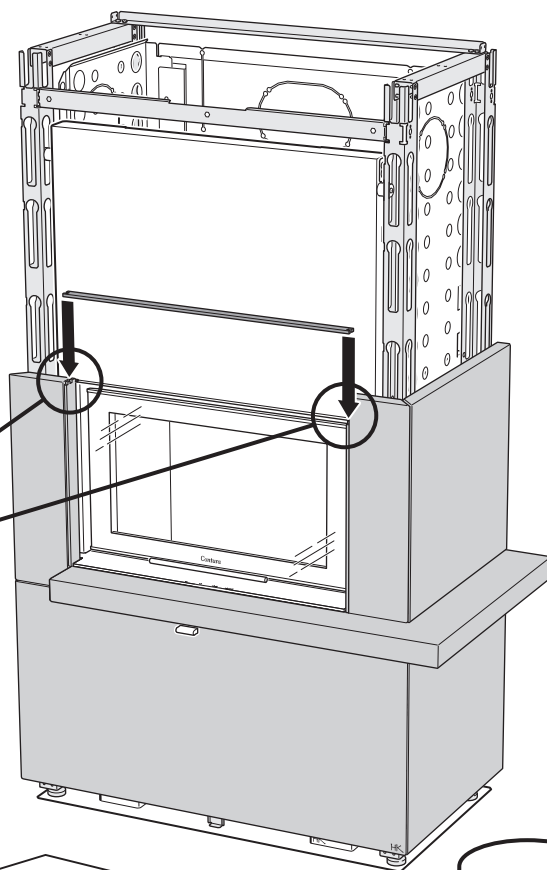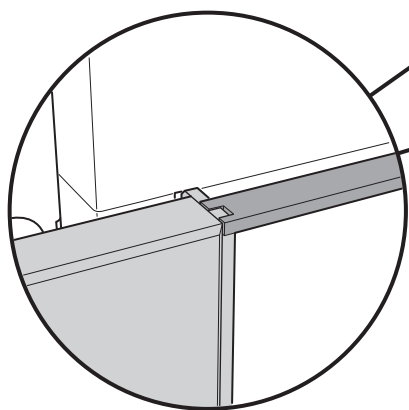




14

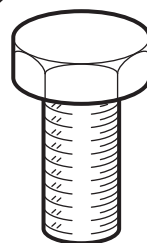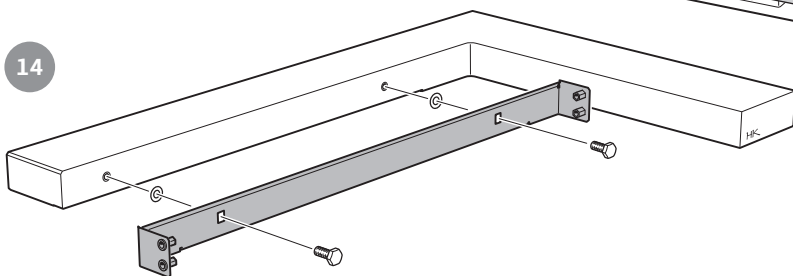

x 2
M10 x 20
Allen 16 mm




Do not tighten the screws completely in order to allow some lateral adjustment of the shelf after installation.

15

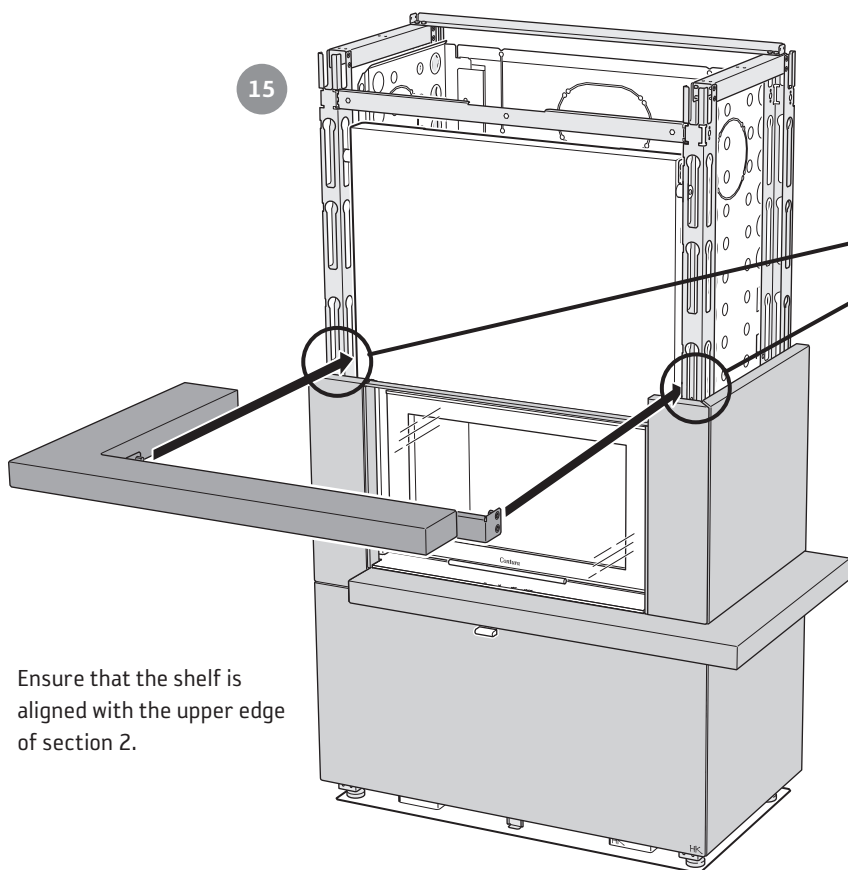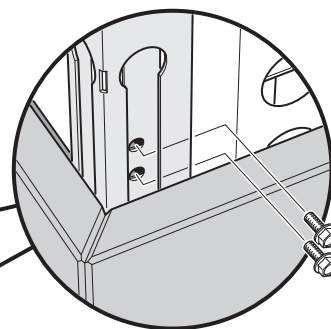

x 4
M6 x 16
Allen 10 mm

Ensure that the shelf is aligned with the upper edge of section 2.

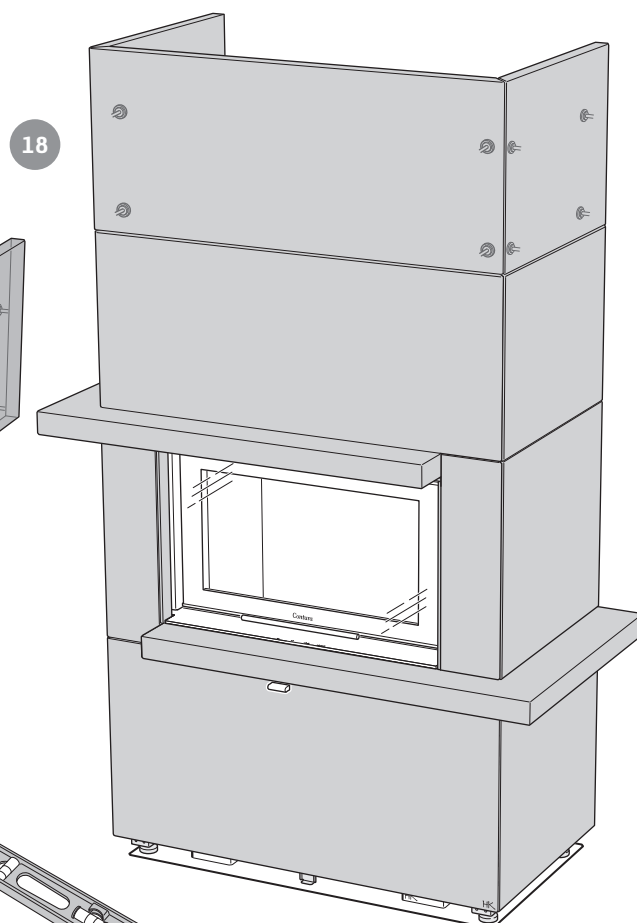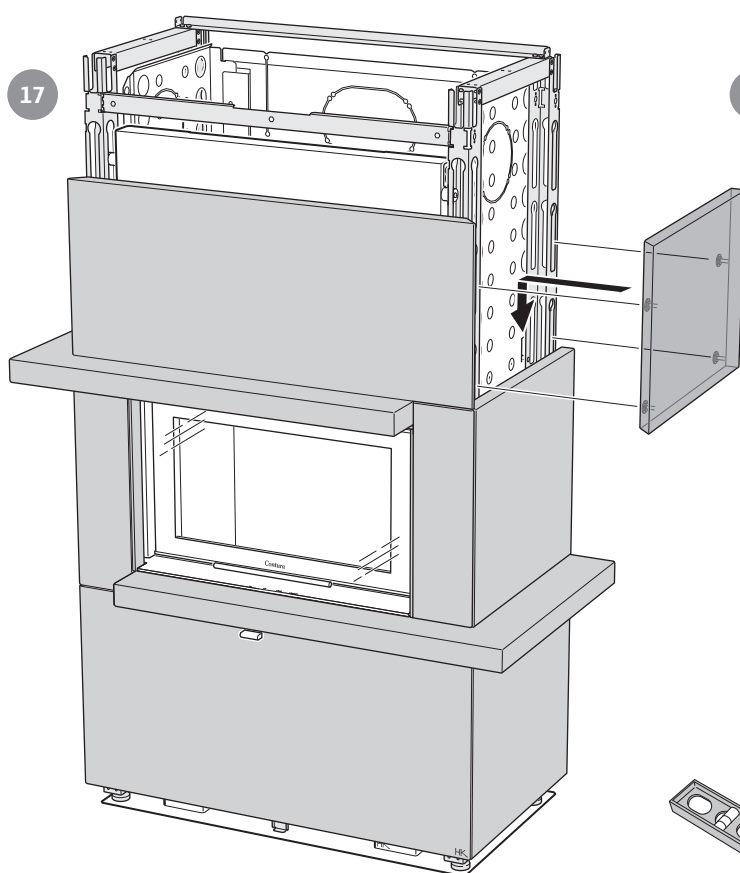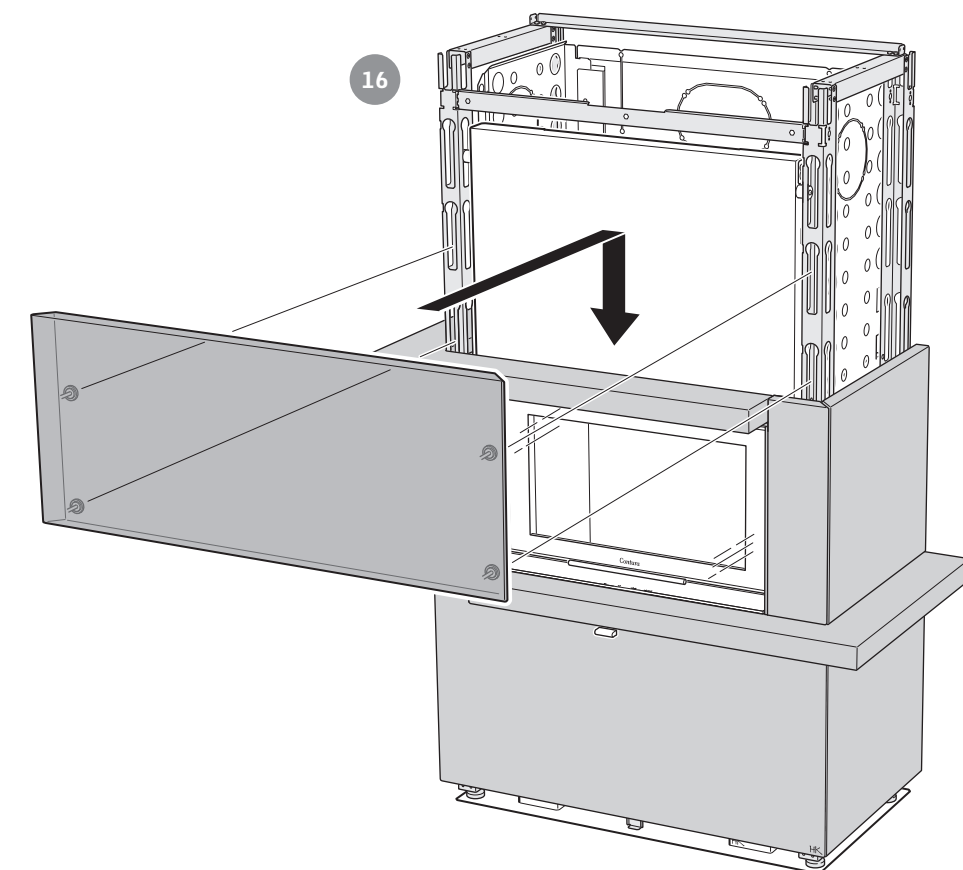

Final installation: See page 214

Shims


Assembling the surround – with bench

Without Shelves/ Bench



With Shelves

With Bench

1

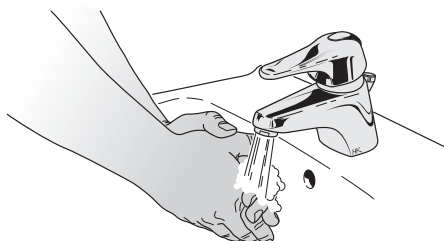


2

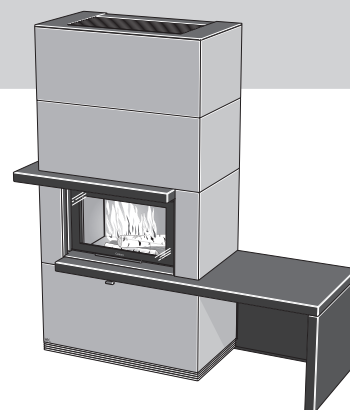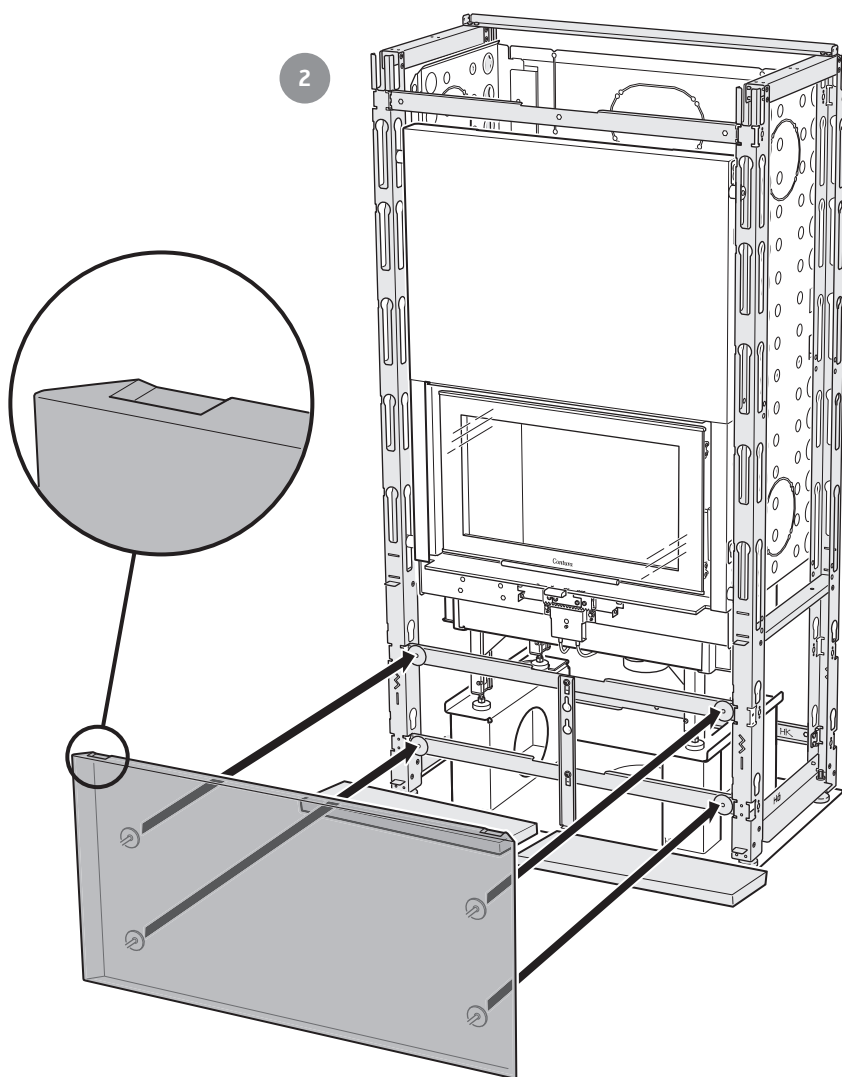

Place a foam sheet on the floor to prevent the stone corners from becoming damaged when handling.

3

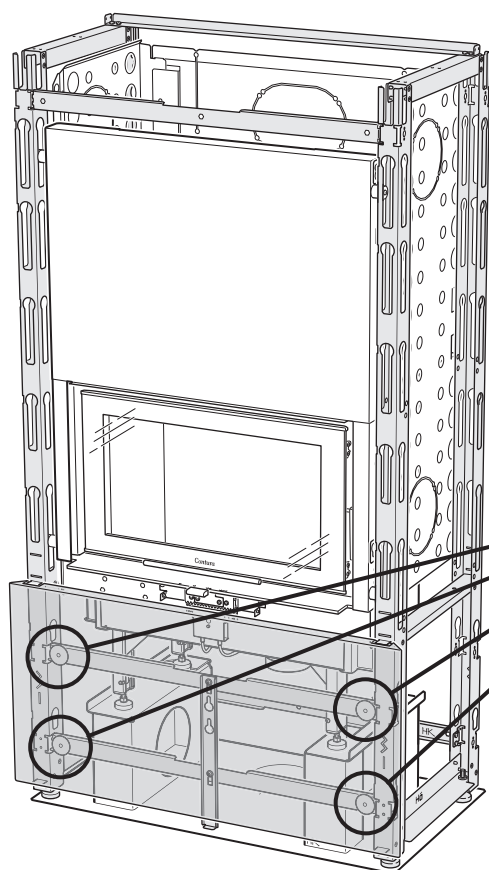


The stone must lie flush against the stand.






x 2
M6 x 20
Allen screw 4

4

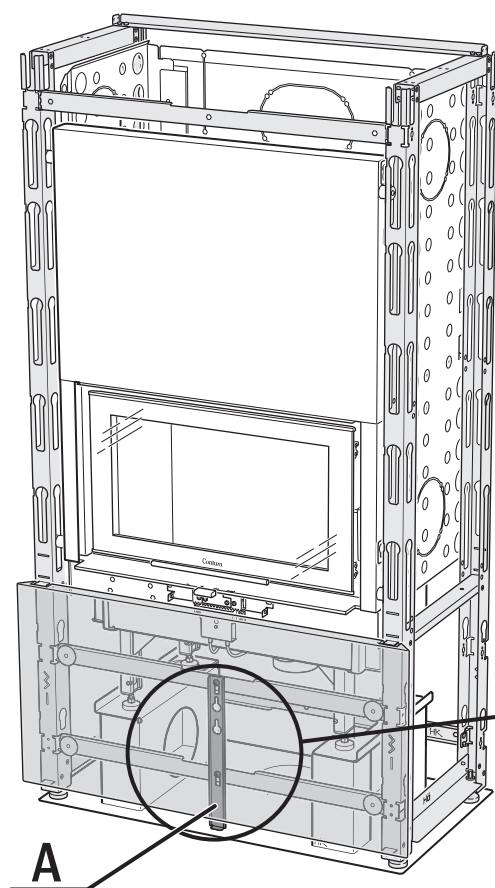


This panel can be removed for servicing. Lock it in place by inserting two screws through the moving catch (A) in the front panel. Do not tighten the screws – it must be possible to move the catch upwards to detach the panel.

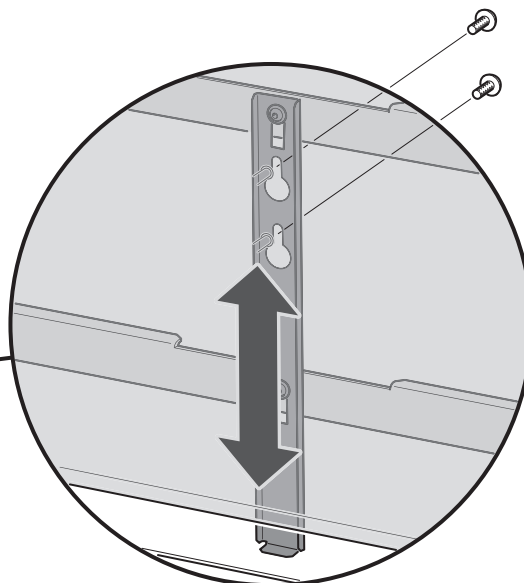


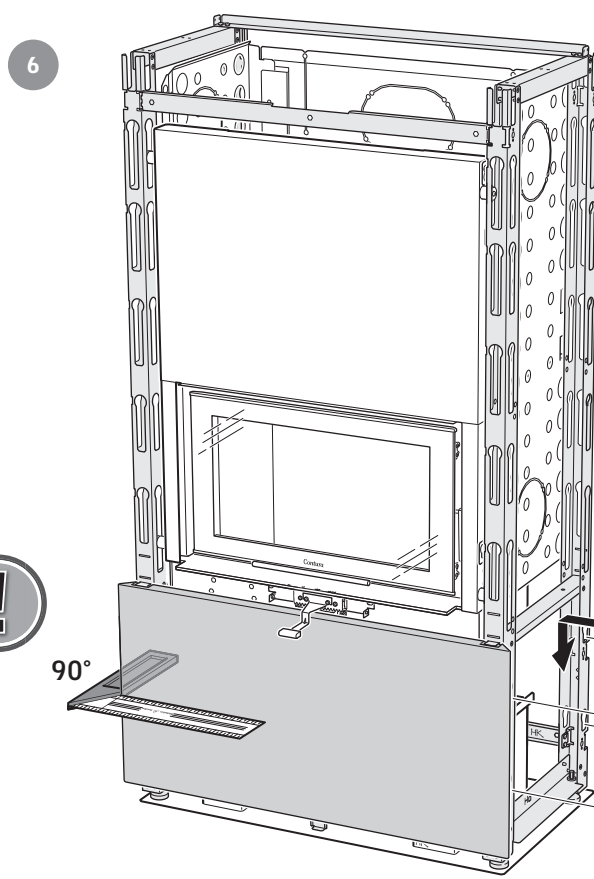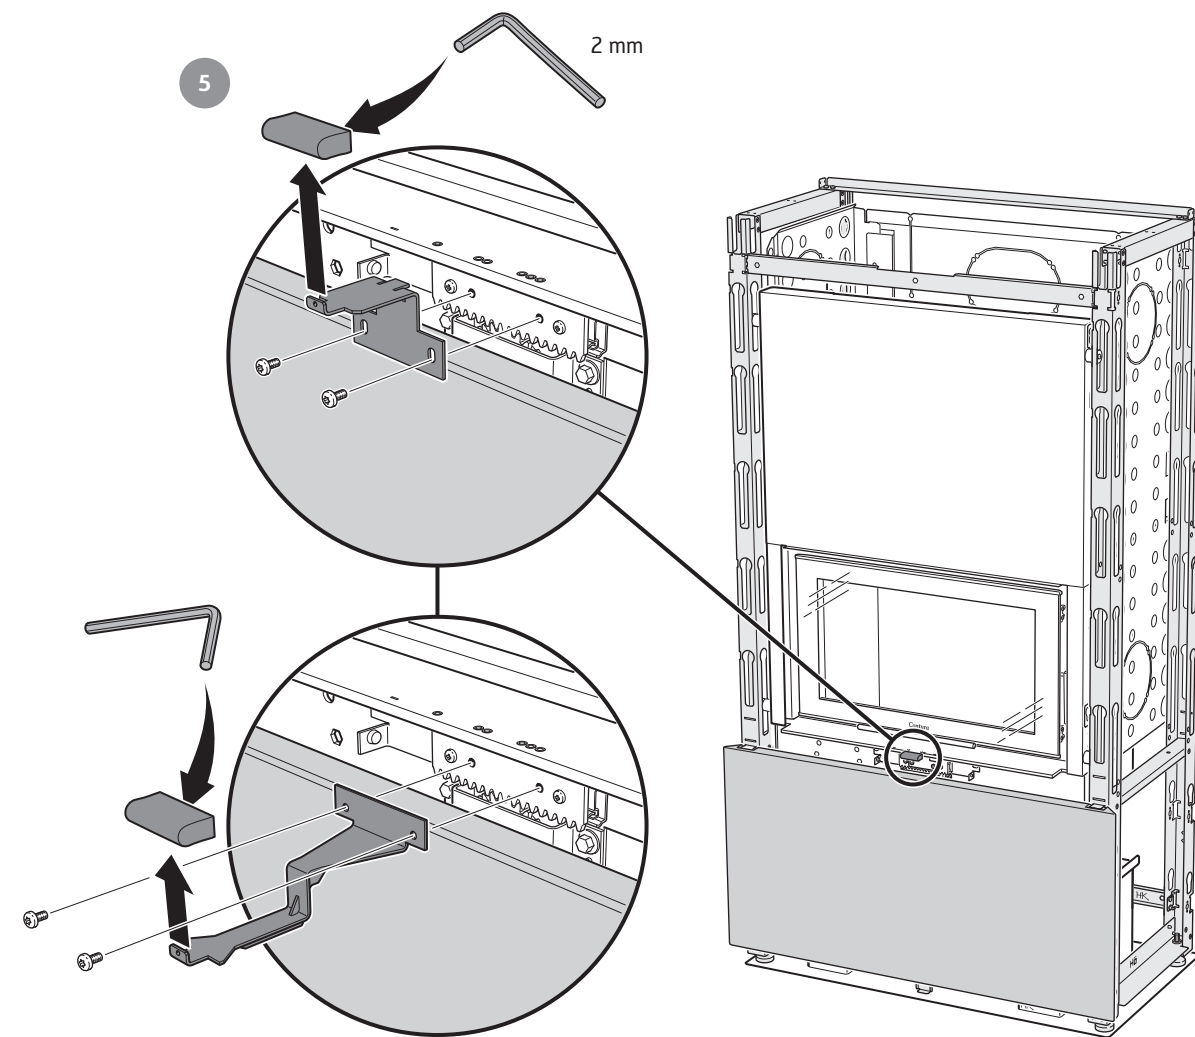


Check that the top of the stones are level using a spirit level. Use supplied shims if necessary. Carry out on the remaining stone sections.

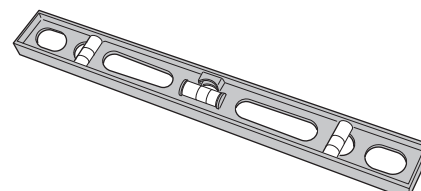


Shims



x 4
M6 x 16
Allen 10

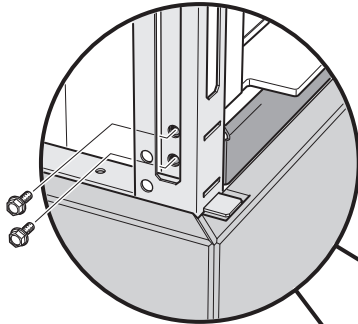

7


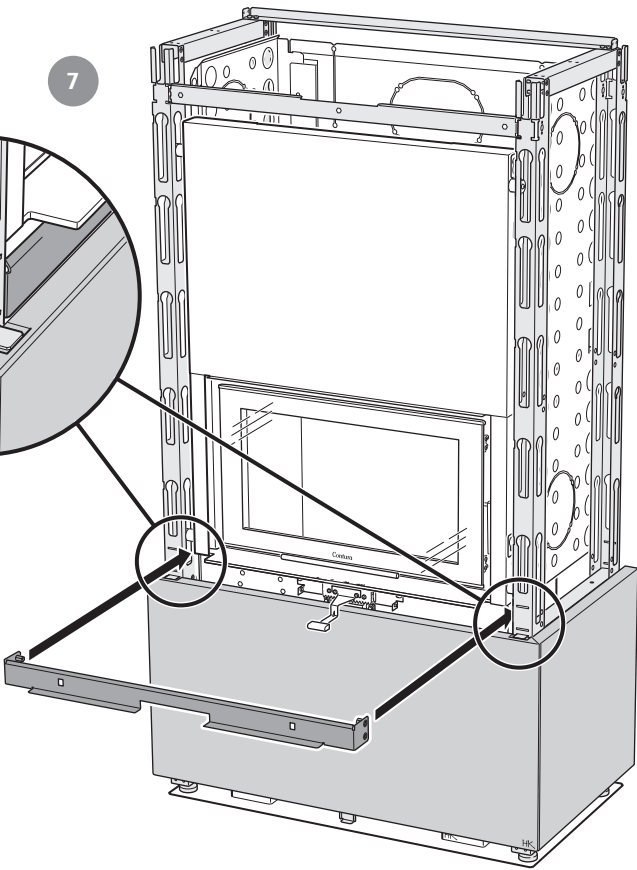


Without Shelves/ Bench

With Shelves


With Bench

8

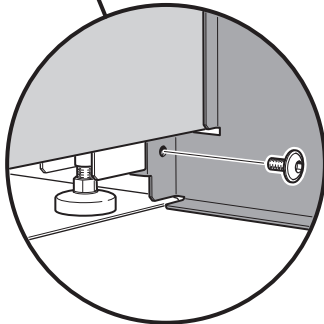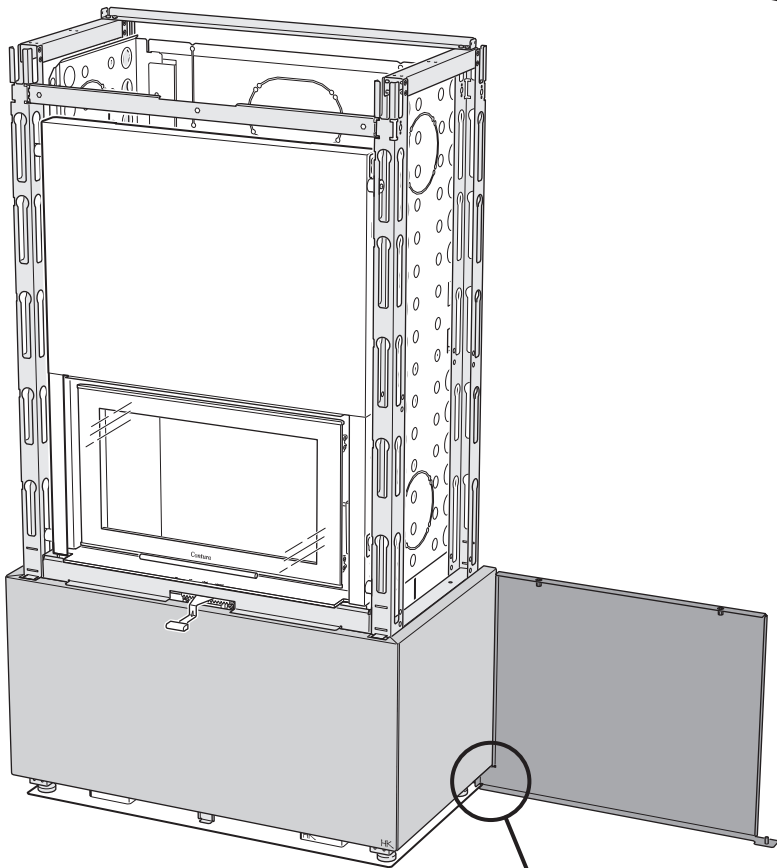


x 1
M6 x 16
Allen screw 4


9


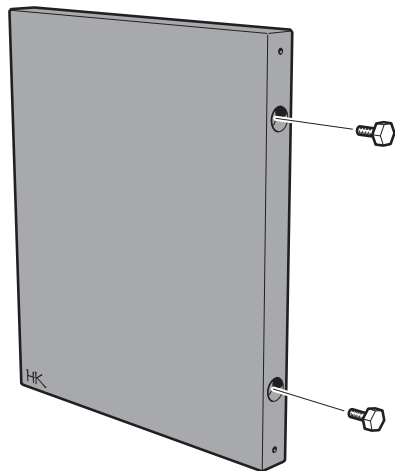


10

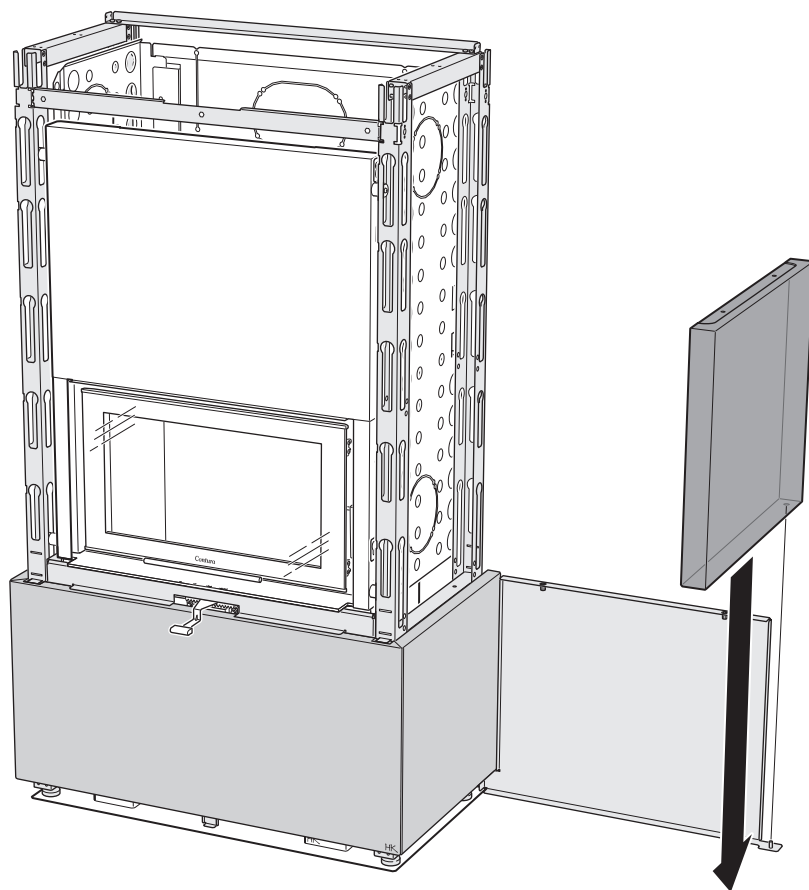


11

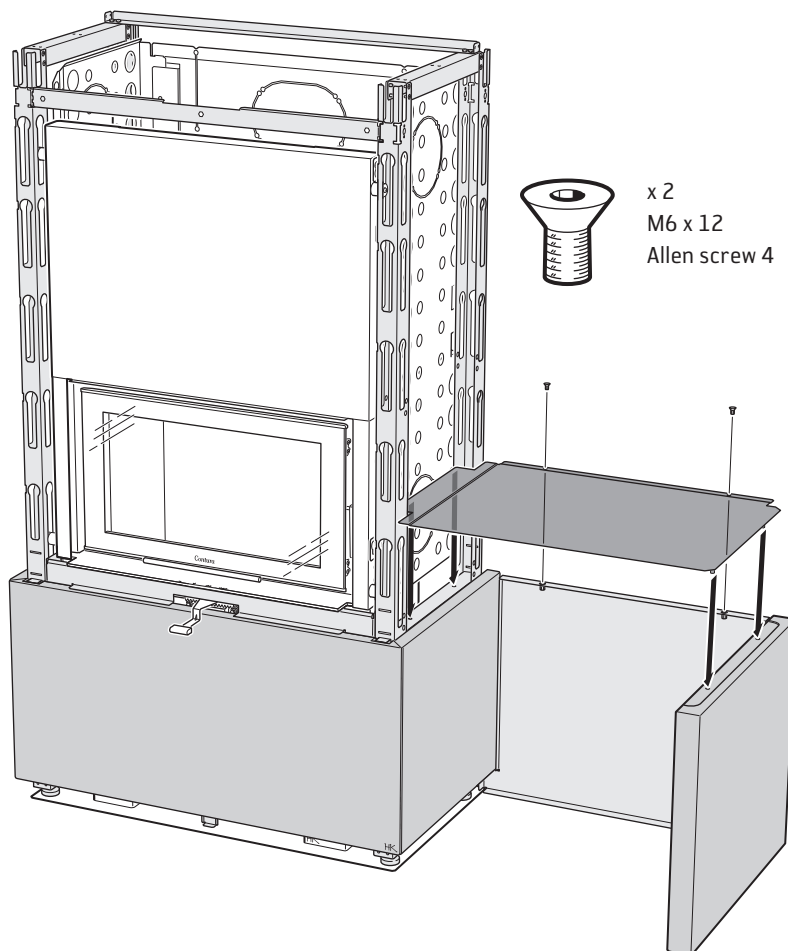

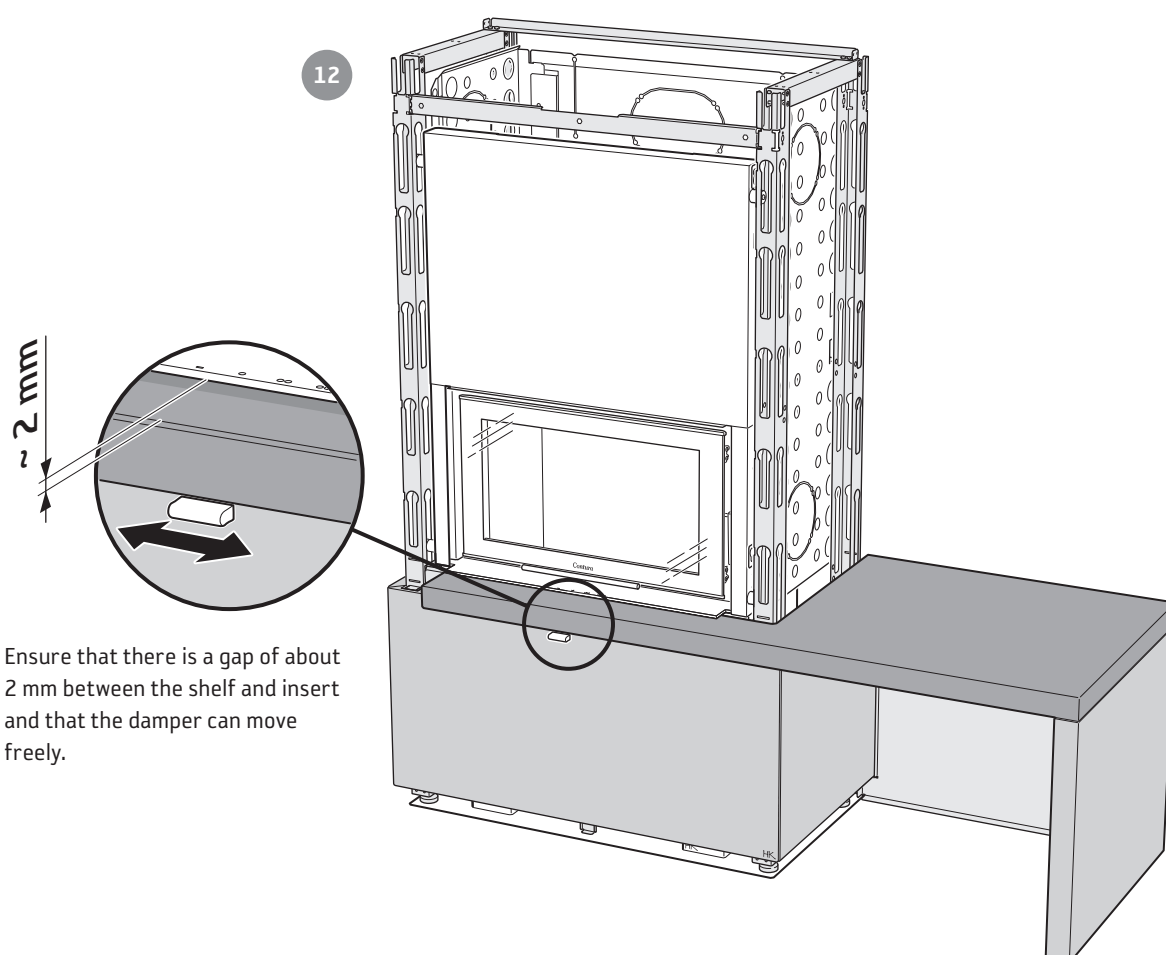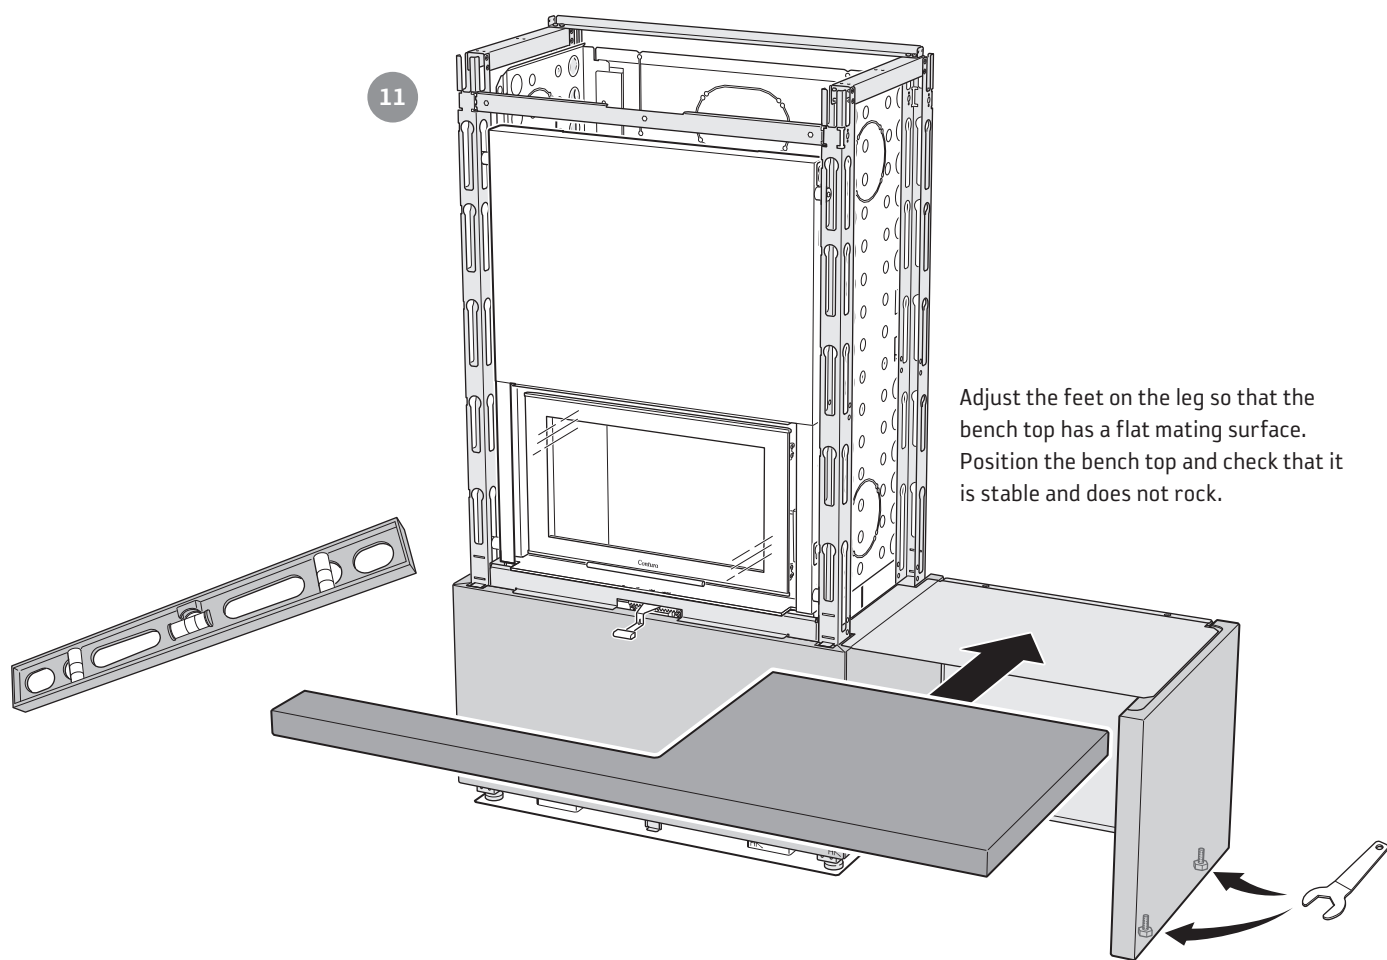

13

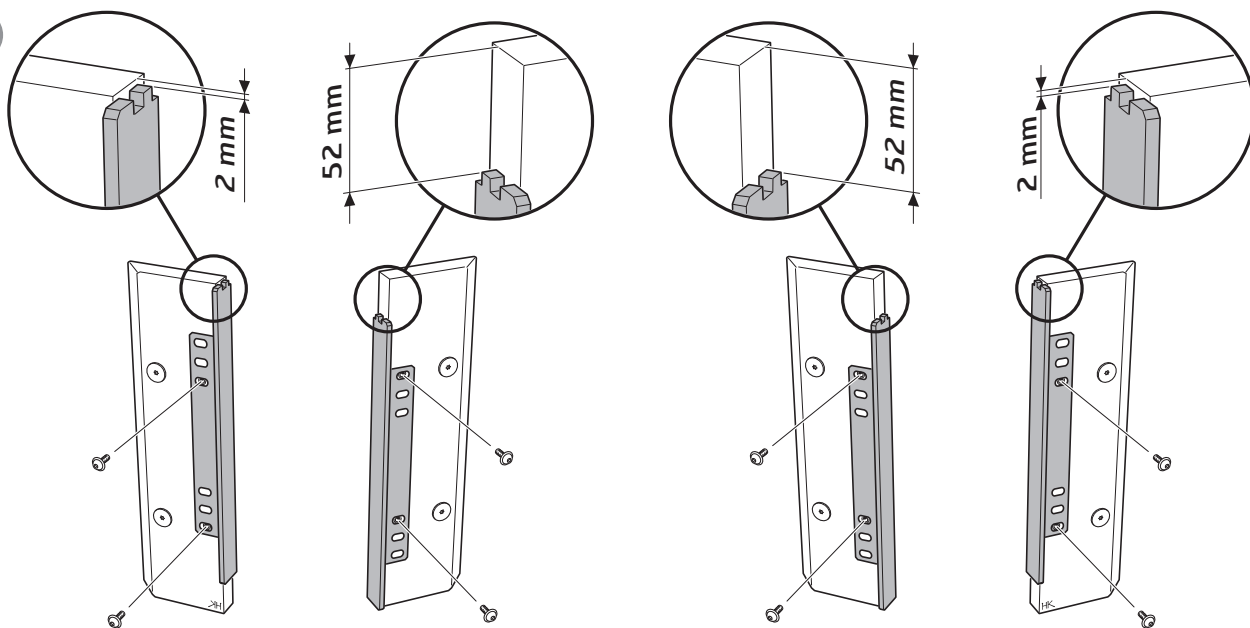

Left-hand bench version

Right-hand bench version




x 4
M6 x 10
Allen screw 4




x 4
M6 x 10
Allen screw 4

14

The front panel must rest on the stand's metal tab, not on the lower front. In the event of having to insert shims, do this on the metal tab.

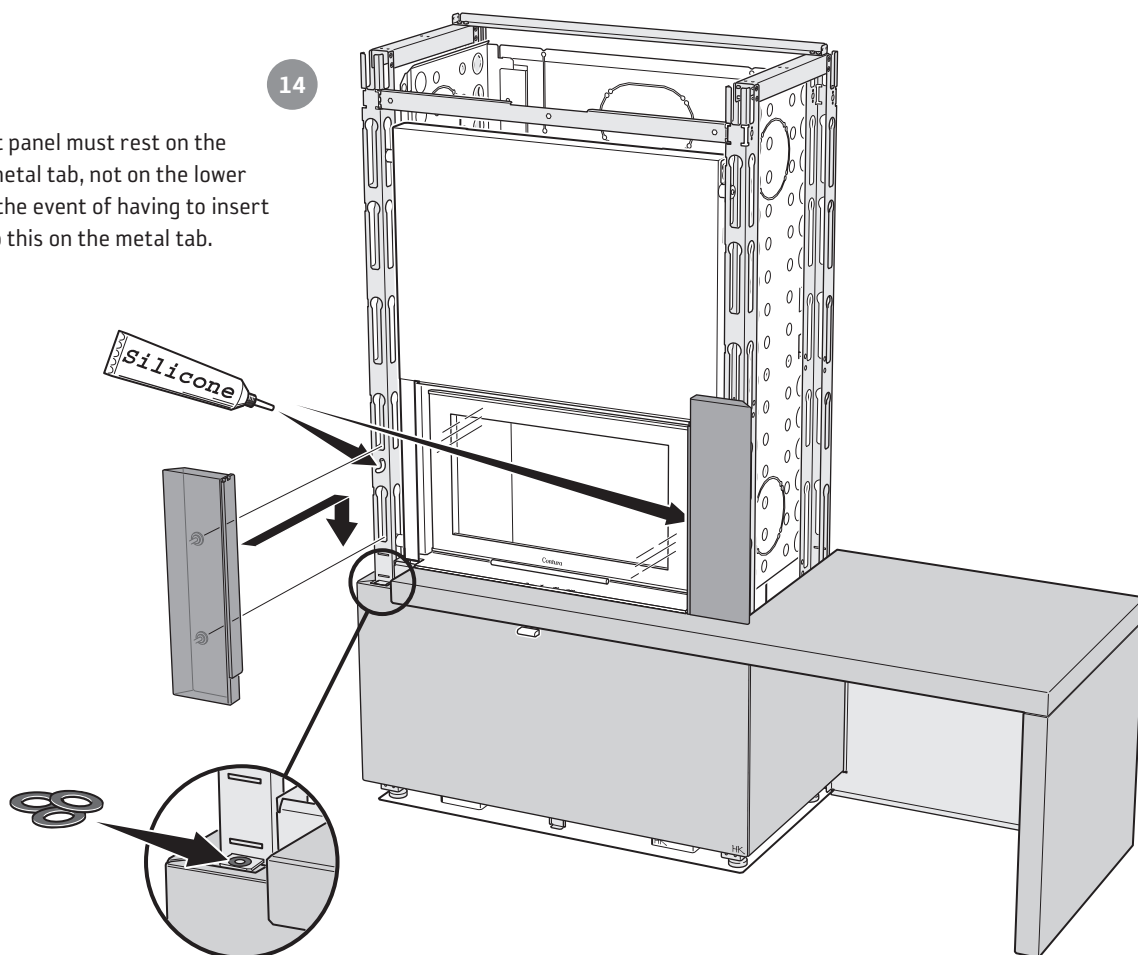


15


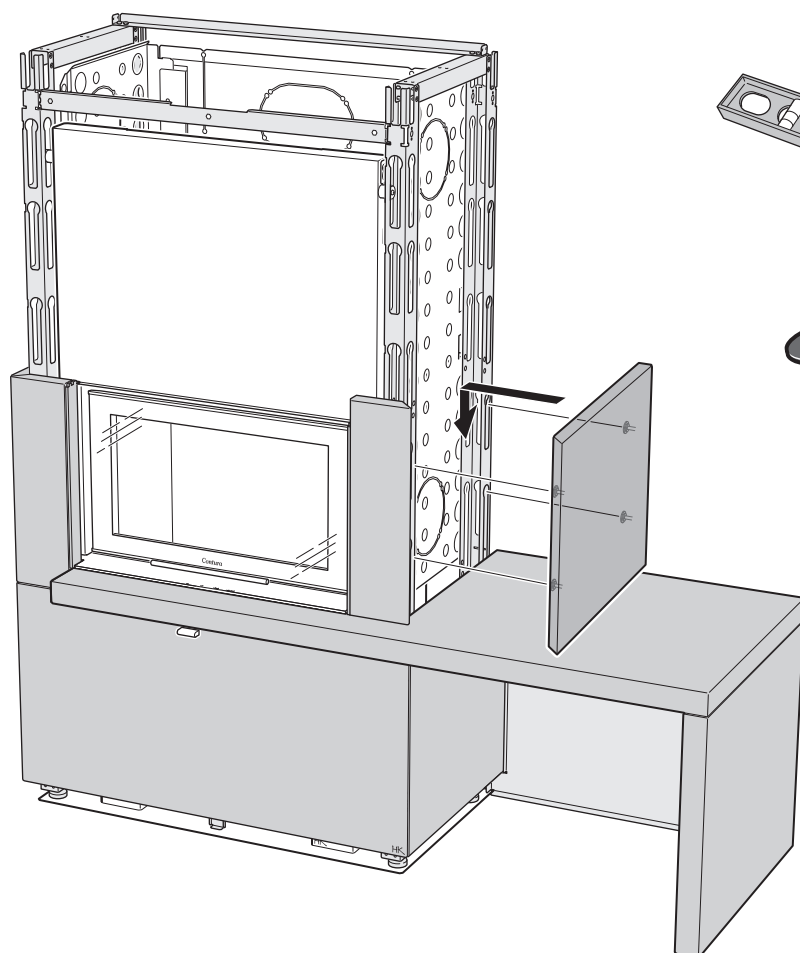


Shims


16

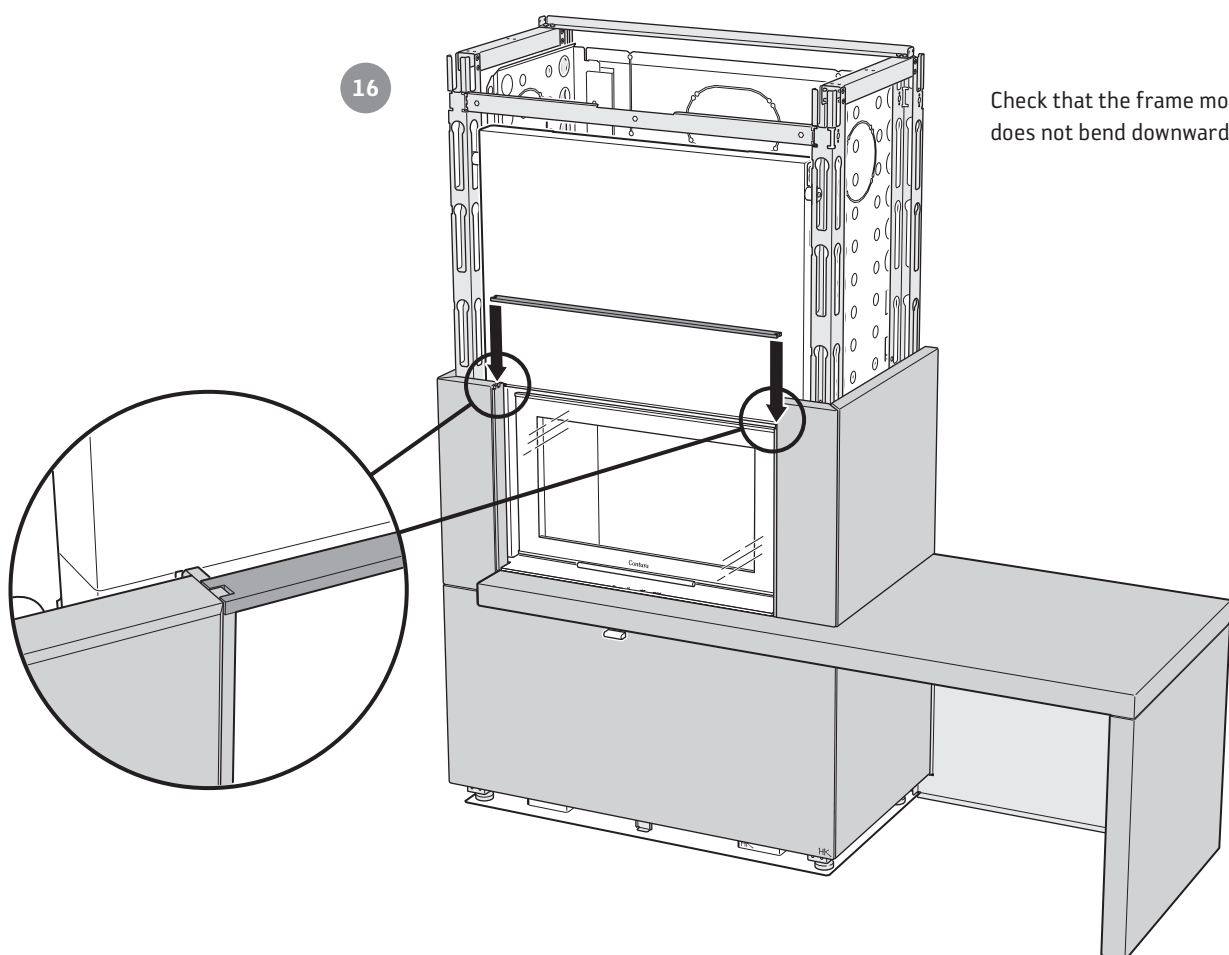

Check that the frame moulding
does not bend downwards.

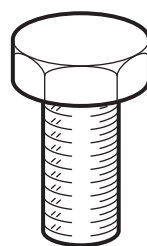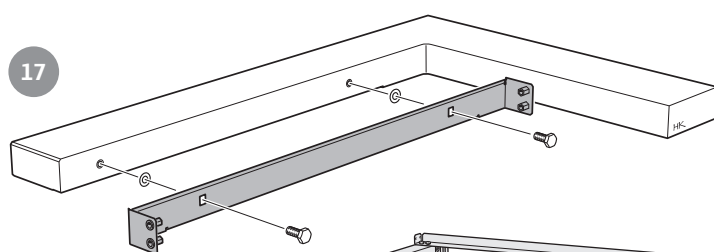


x 2
M10 x 20
Allen 16 mm

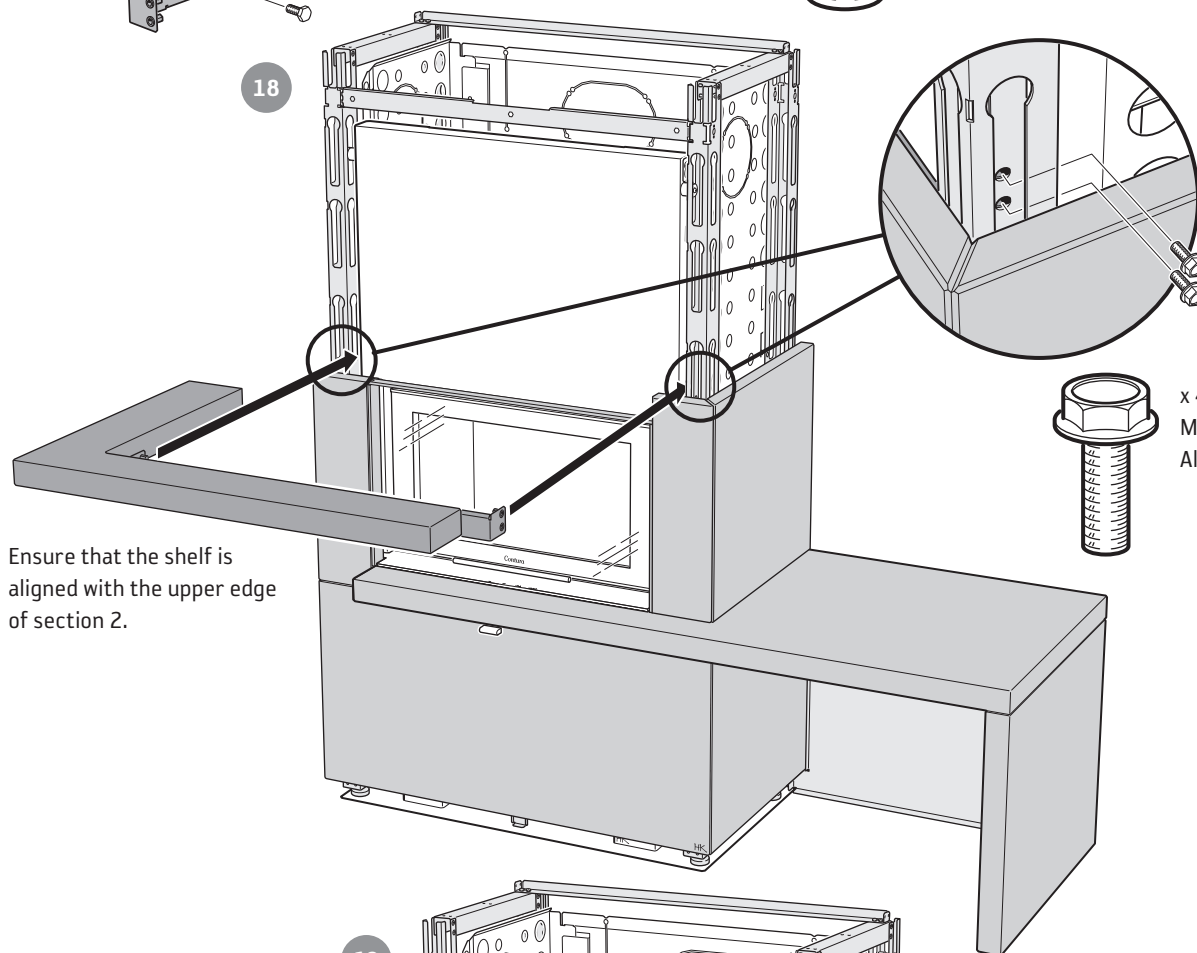


Ensure that the shelf is aligned with the upper edge of section 2.



x 4
M6 x 16
Allen 10 mm

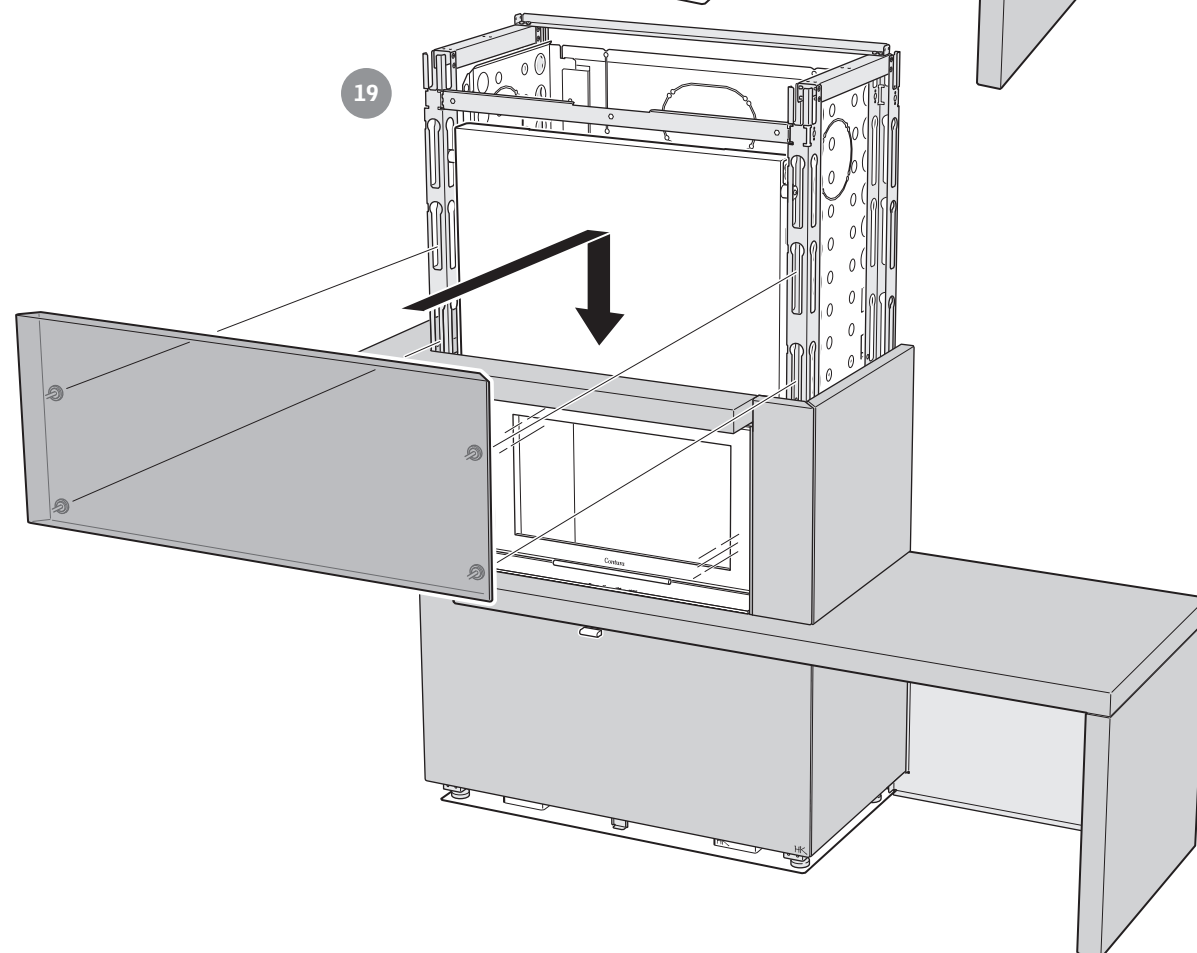


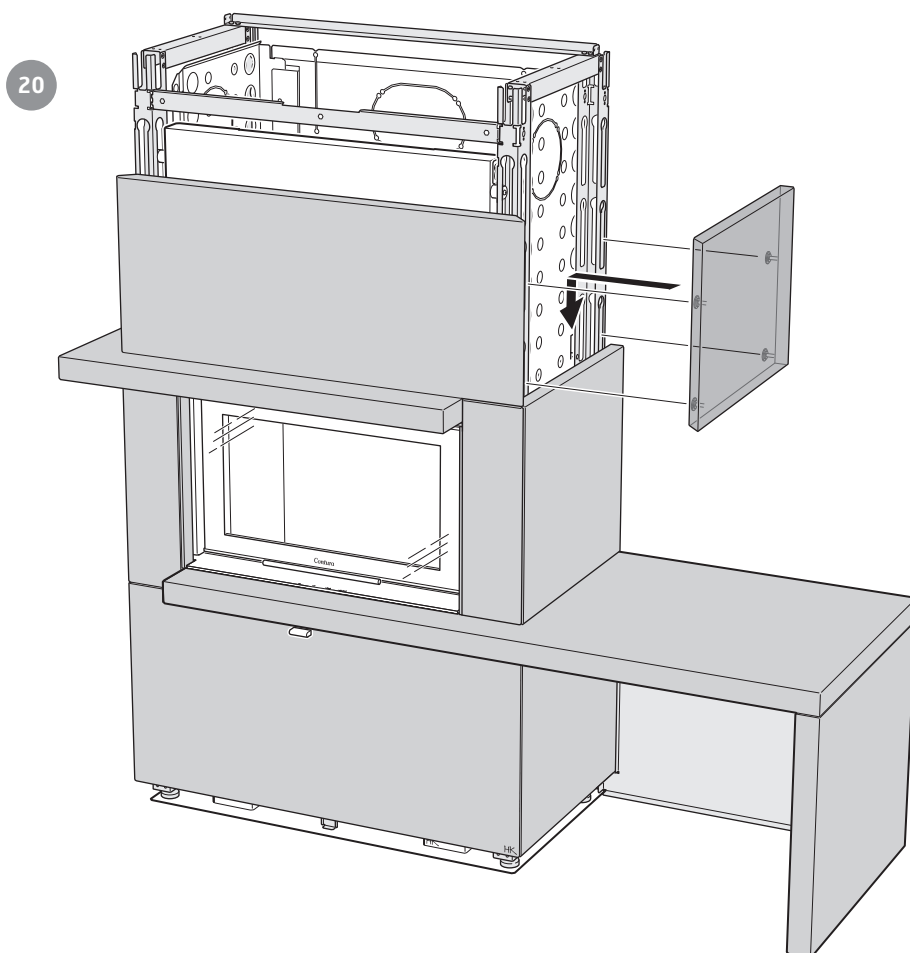

Without Shelves/ Bench

With Shelves

With Bench

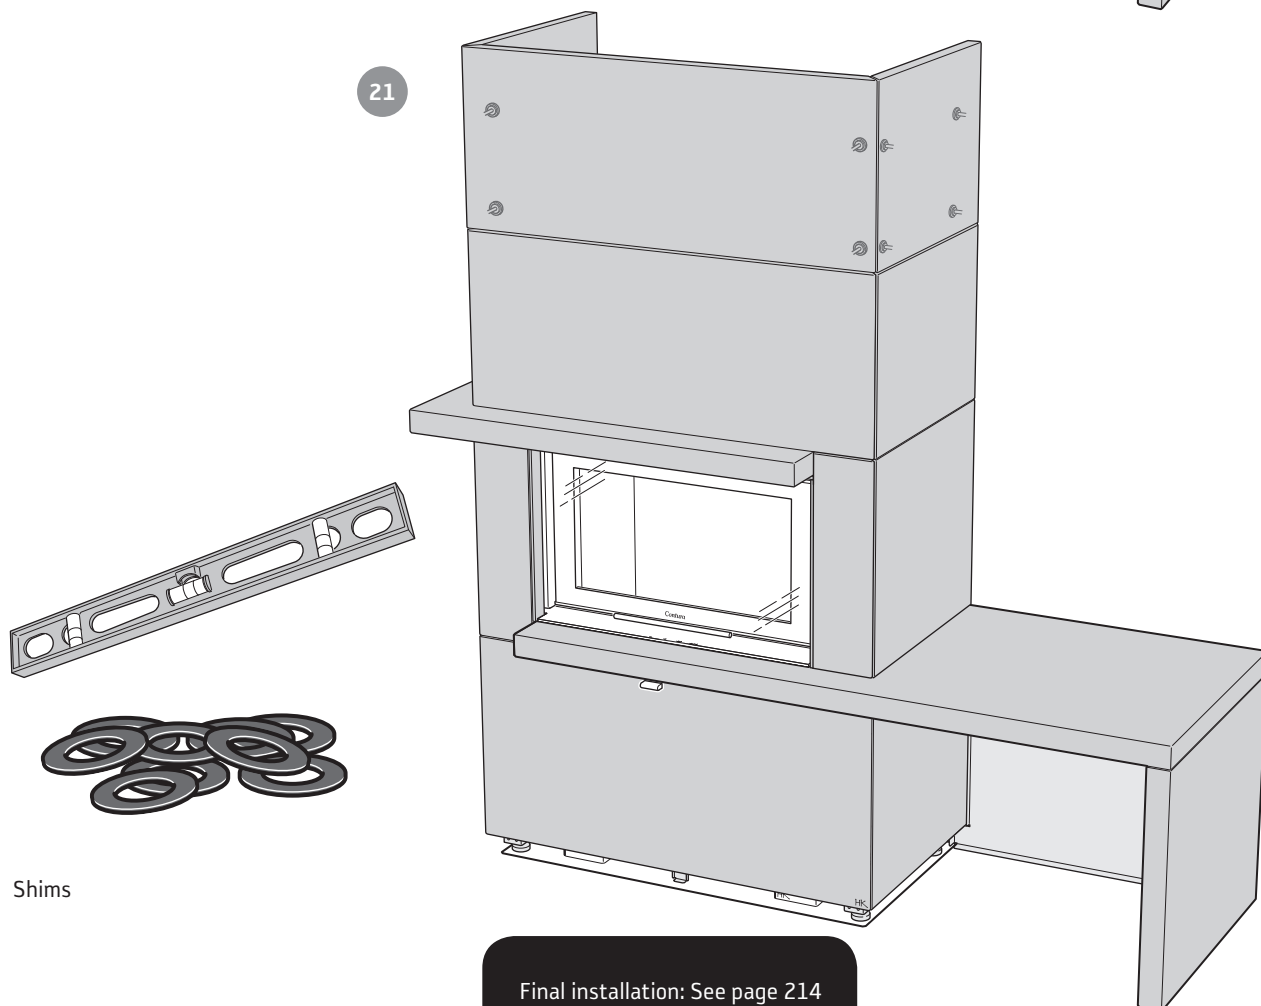

Shims



Final installation: See page 214



Assembling grate and top

For rear connection







x 4
M6 x 10
Allen screw 4

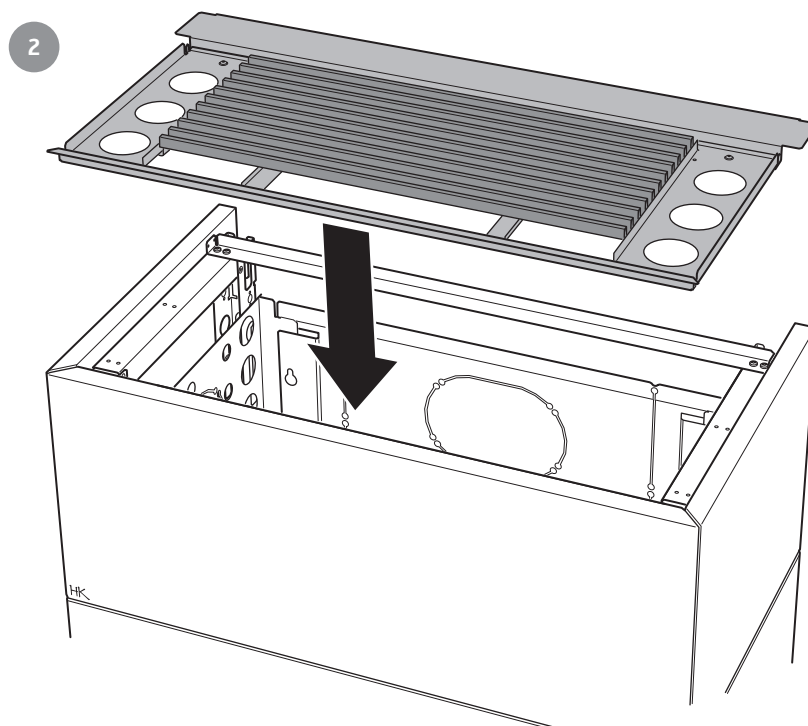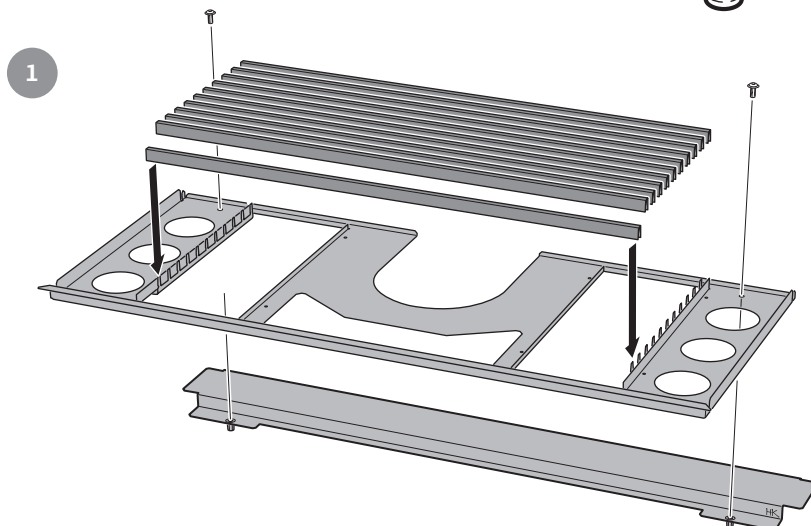


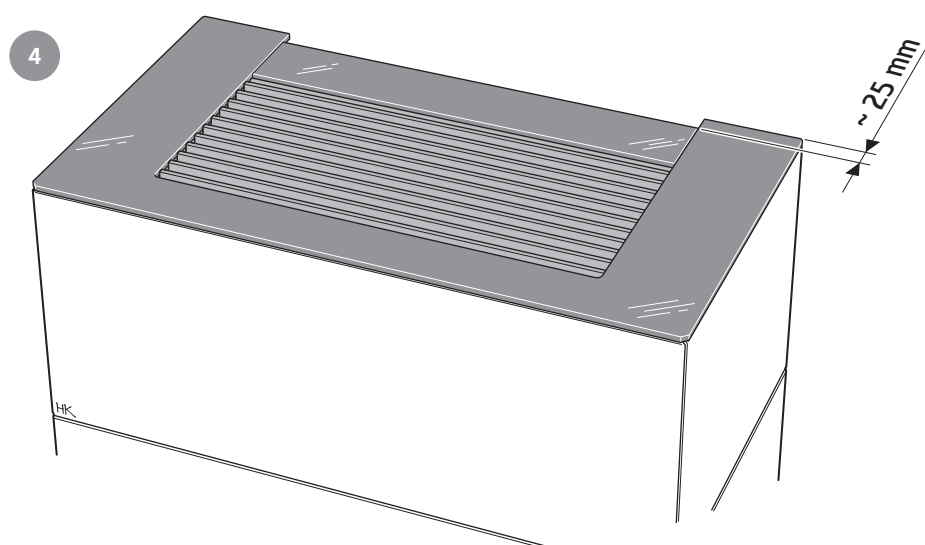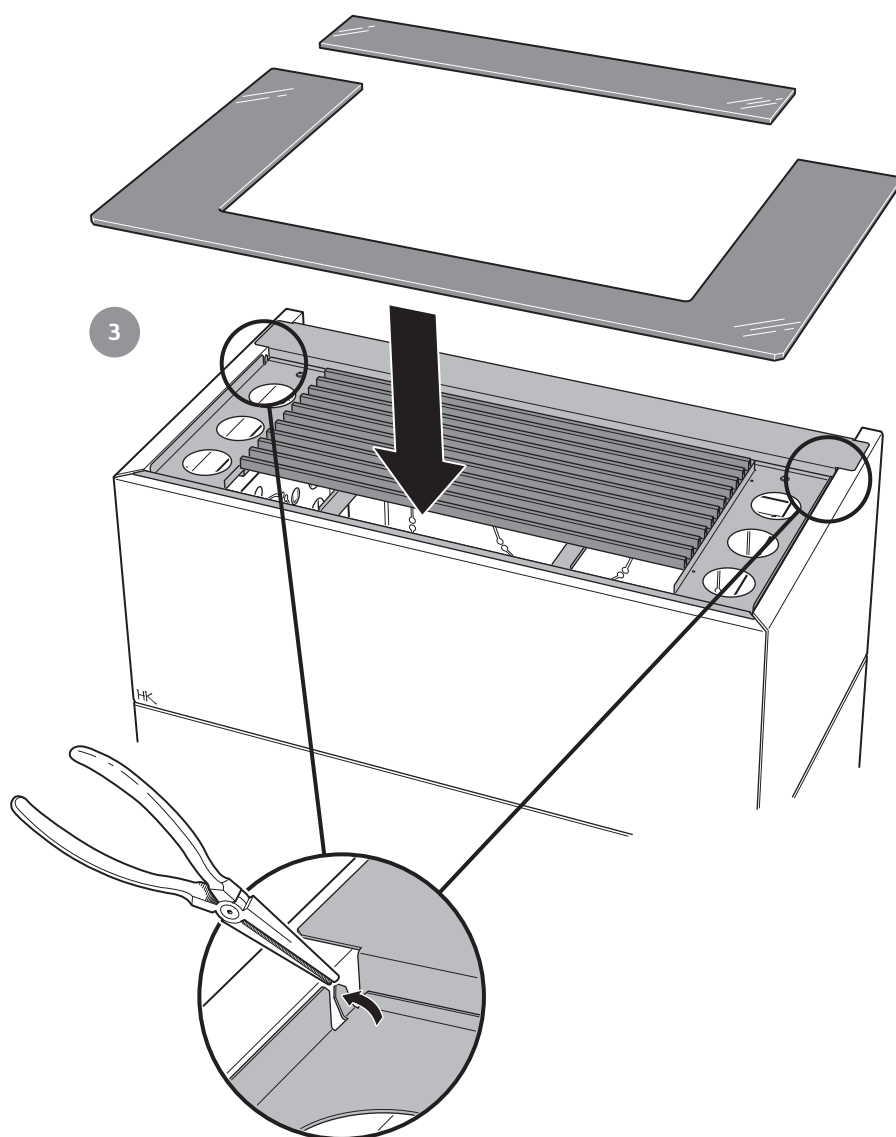


For top connection

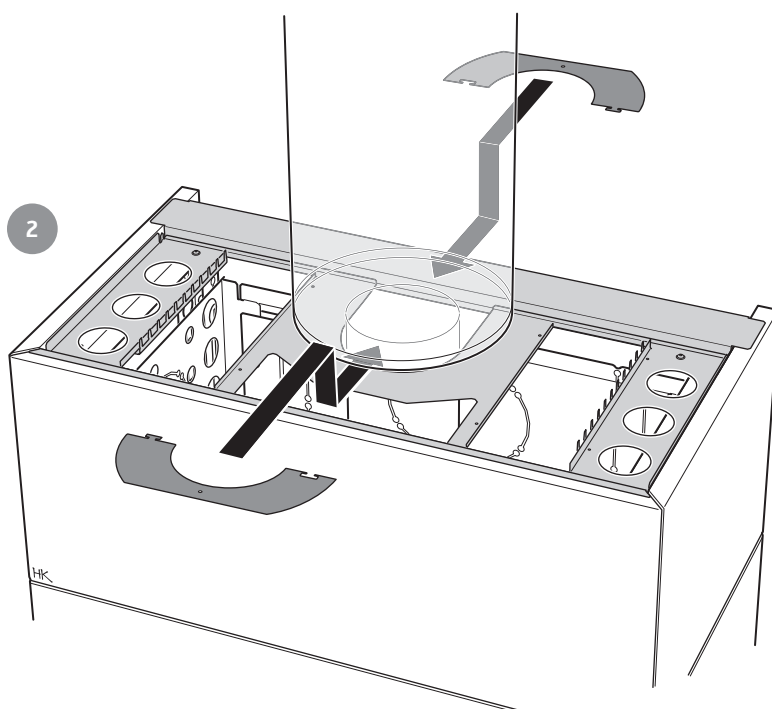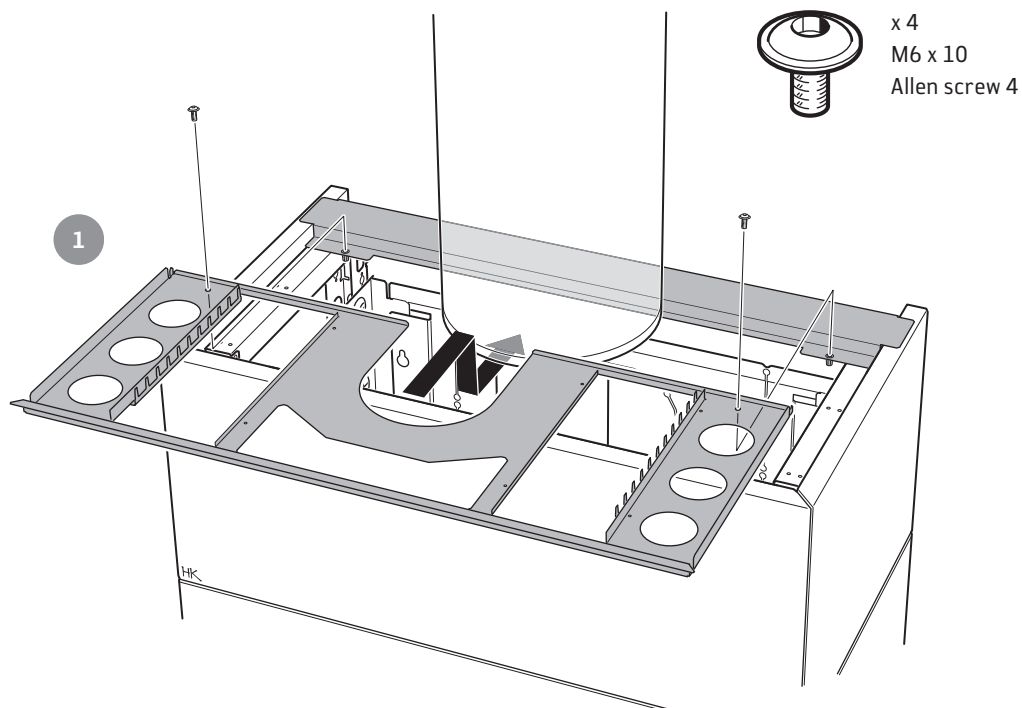


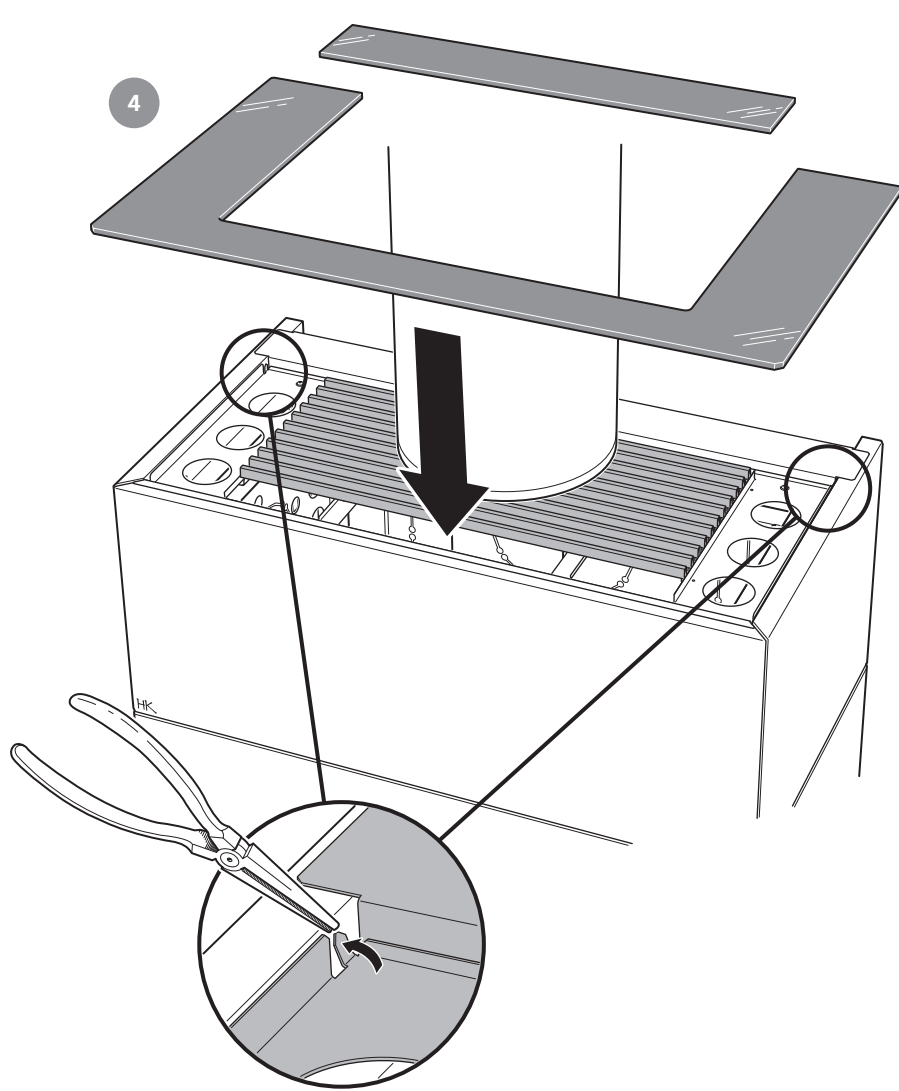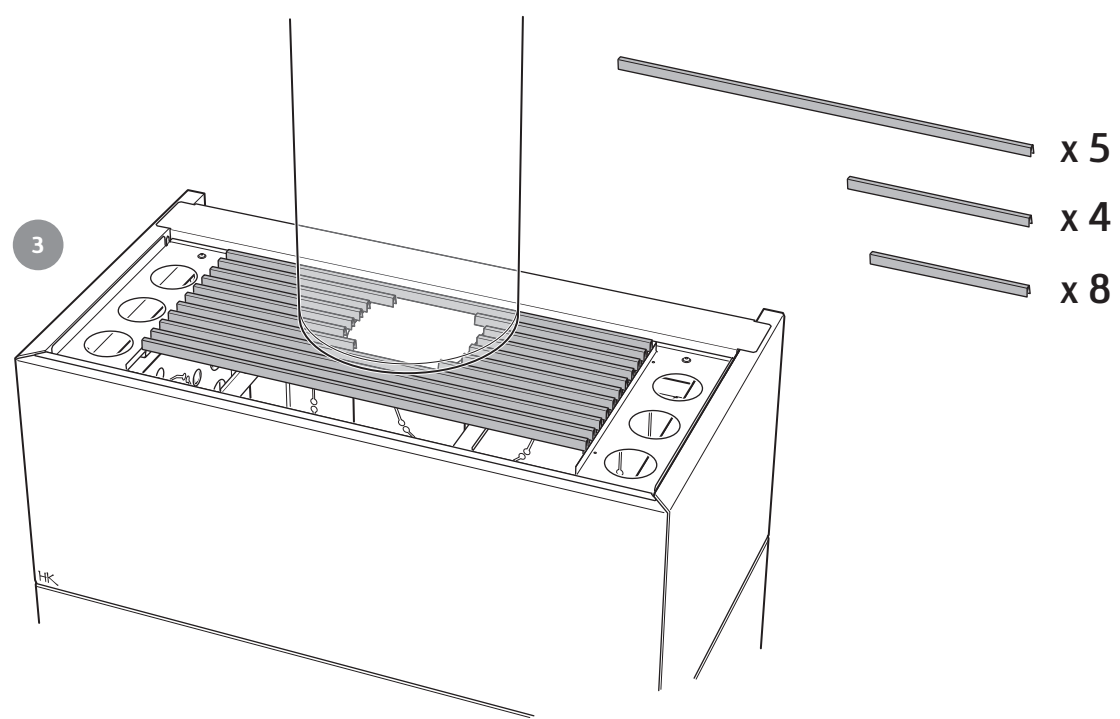

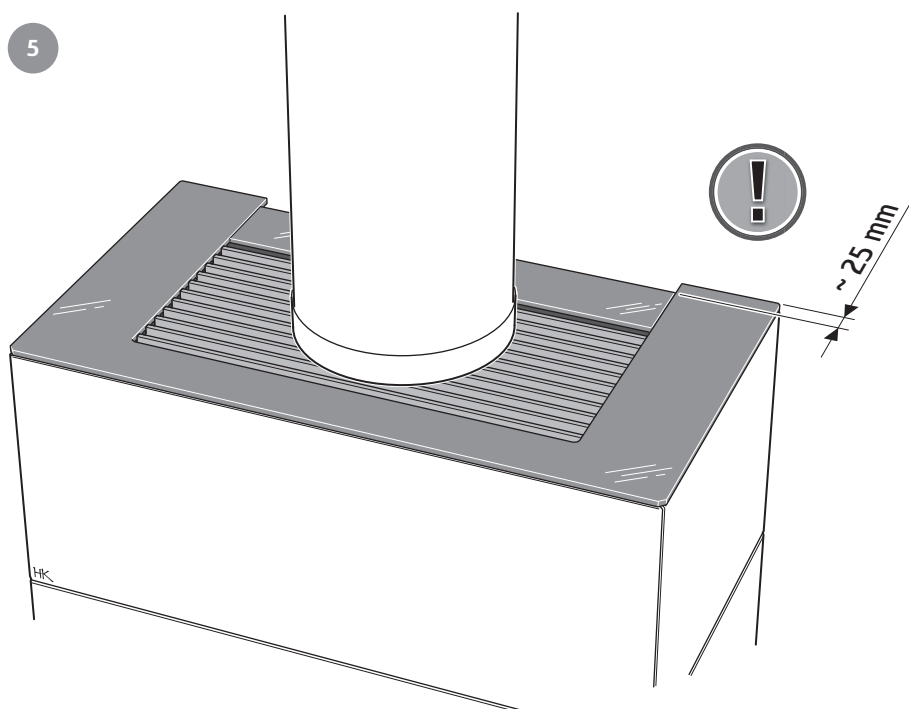

Disc base

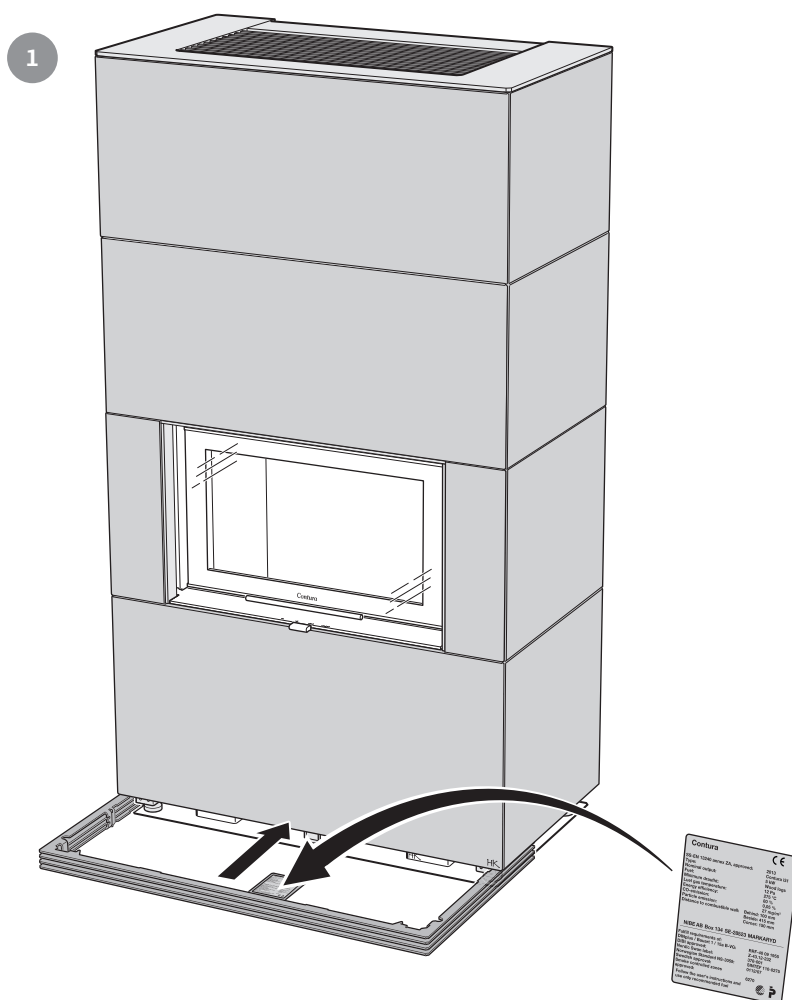

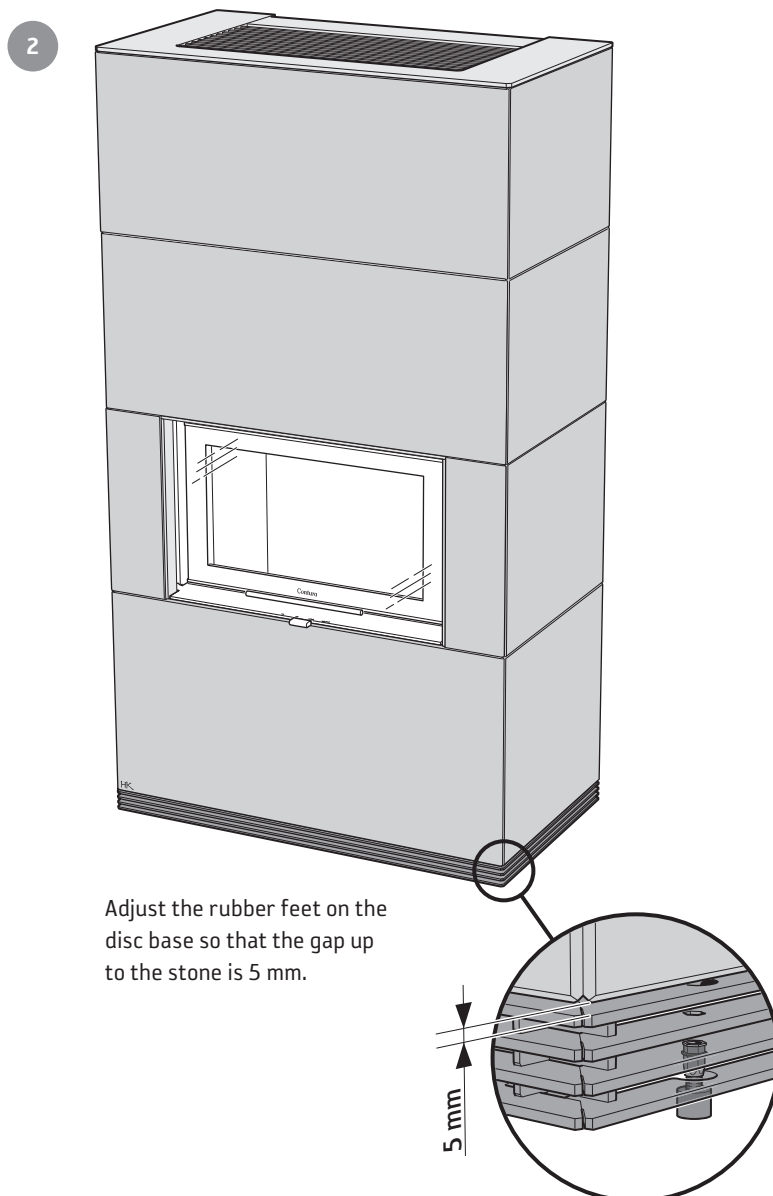

Final inspection of the installation

It is extremely important that the installation is inspected by an authorised inspection body before the stove is used. Also read the "Lighting instructions" before lighting for the first time.



811205 IAV SE-EX Ci31-11
2018-04-23

Contura

NIBE AB · Box 134 · SE-285 23 · Markaryd · Sweden
www.contura.eu

Contura reserves the right to change dimensions and procedures described in these instructions at any time without special notice. The current edition can be downloaded from www.contura.eu