
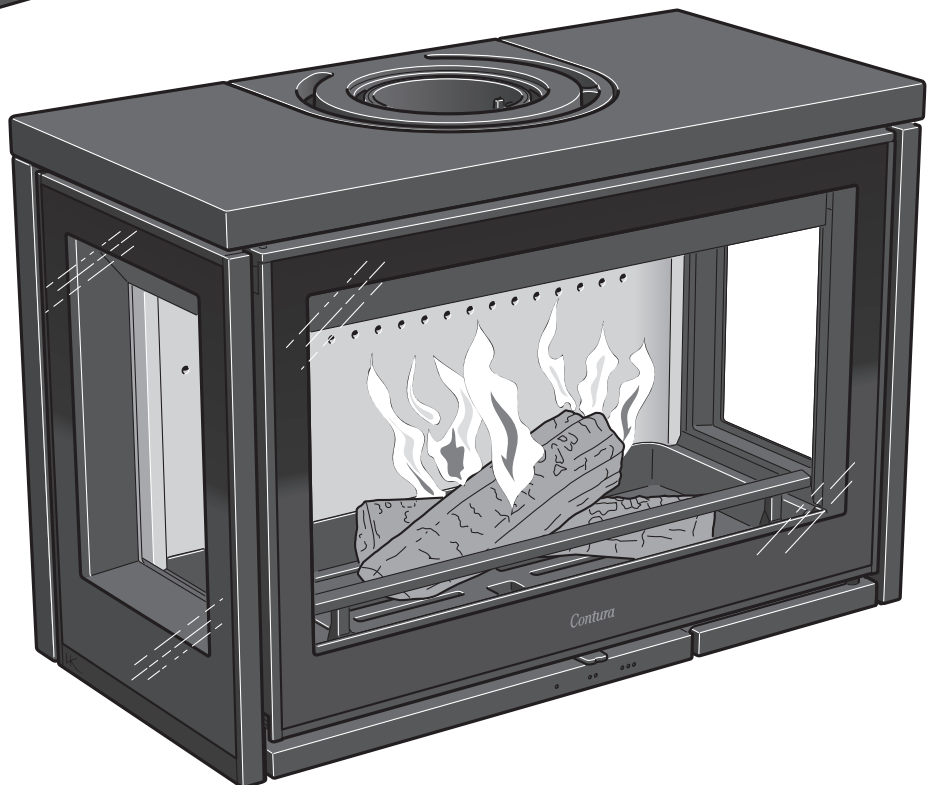


Contura

MYCUBE

i8 W

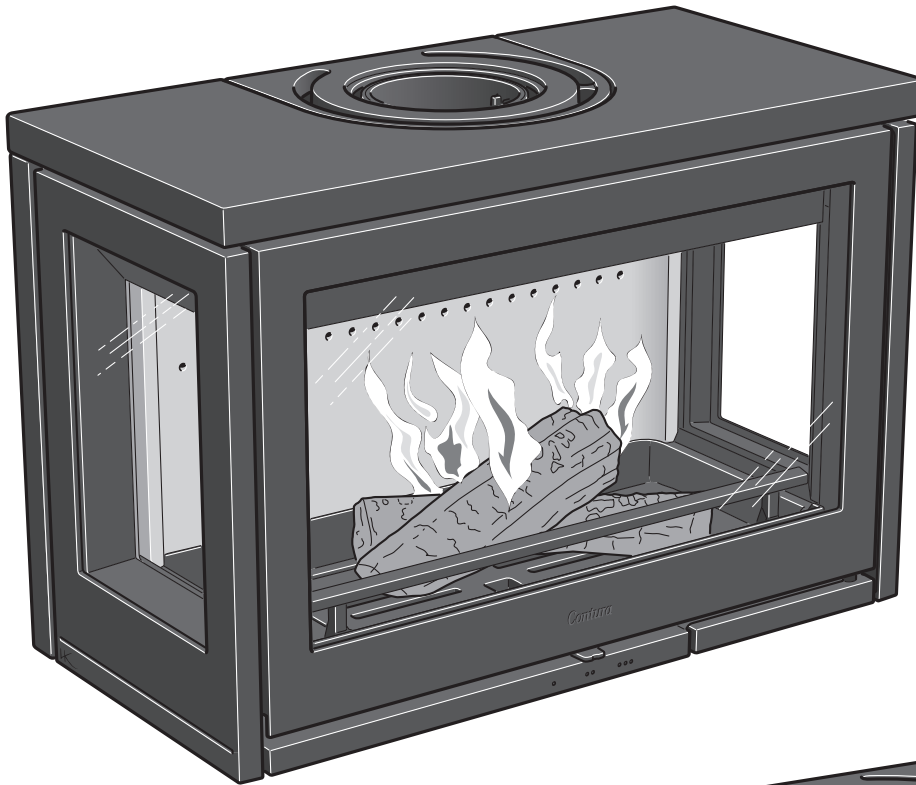

SE

Fakta	3
Installationsavstånd	4
Montering	21

DE

Einzelheiten	5
Installationsabstände	6
Montage	21

NO

Fakta	7
Installasjonsavstand	8
Montering	21

FR

Données Techniques	9
Distances à respecter	10
Montage	21

GB

Facts	11
Installation distances	12
Assembly	21

DK

Fakta	13
Installationsafstand	14
Montering	21

FI





Tiedot	15
Suojaetäisyys	16
Asennus	22

IT

Dati Tecnici	17
Distanza di montaggio	18
Montaggio	22

NL

Gegevens	19
Installatieafstand	20
Monteren	22

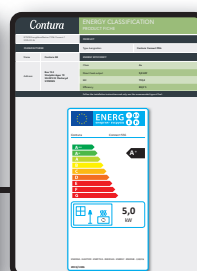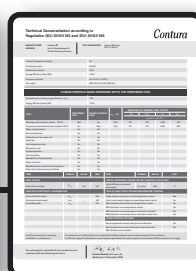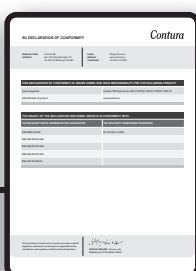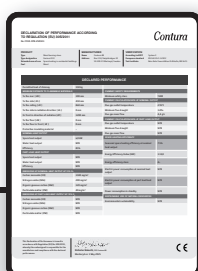

DOWNLOAD DOCUMENTS

SE

"Prestandadeklaration", "EU-försäkran om överensstämmelse", "Teknisk dokumentation", "Energy Classification" och "Garantibevis" finns tillgängliga på contura.eu

DK

Du finder "Ydeevnedeklaration", "EU-overensstemmelseserklæring", "Teknisk dokumentation", "Energiklassificering" og "Garantibevis" på contura.eu

DE

„Leistungserklärung“, „EU-Konformitätserklärung“, „Technische Dokumentation“, „Energieklassifizierung“ und „Garantieschein“ sind unter contura.eu verfügbar

FI

"Suoritusosoitus", "EU-vaatimustenmukaisuusvakuutus", "Tekninen dokumentaatio", "Energialuokitus" ja "Takuutodistus" ovat saatavilla osoitteessa contura.eu

NO

"Ytelseserklæring", "EU-samsvarserklæring", "Teknisk dokumentasjon", "Energiklassifisering" og "Garantibevis" er tilgjengelige på contura.eu

IT

La "Dichiarazione di Prestazione", la "Dichiarazione di Conformità UE", la "Documentazione Tecnica", la "Classificazione Energetica" e il "Certificato di Garanzia" sono disponibili su contura.eu

FR

« Déclaration des performances », « Déclaration de conformité UE », « Documentation technique », « Classification énergétique » et « Certificat de garantie » sont disponibles sur contura.eu

NL

"Prestatieverklaring", "EU-verklaring van overeenstemming", "Technische documentatie", "Energy Classification" en "Garantiebewijs" zijn beschikbaar op contura.eu


GB

"Performance declaration", "EU Declaration of Conformity", "Technical Documentation", "Energy Classification" and "Warranty Certificate" are available at contura.eu

Facts



3-7 kW

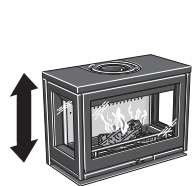

540 mm



740 mm



365 mm



115 kg

Nominal effect
Efficiency
Flue gas mass flow

7,6 kW
77 %
6,3 g/s

Complies with EU Regulation No. 305/2011
for construction products and harmonised
standard:

EN 16510-1:2022

EN 16510-2-2:2022



The stove becomes very hot

During operation, certain surfaces of the stove become very hot and can cause burn injury if touched. Be aware of the strong heat radiated through the hatch glass. Placing flammable material closer than the safe distance indicated may cause a fire. Pyre lighting can cause quick gas ignition with the risk of damage to property and personal injury.

Installation by authorised technician

This manual contains instructions about how the stoves must be assembled and installed. To ensure the function and safety of the stove, the installation should be carried out by a Hetas trained engineer. Contact one of our dealers who can recommend suitable installer. When completed, the installer should inform the local Council/ authority about the new installation.

Building application

These main instructions may give guidance which would contravene national building regulations. Please refer to supplementary instructions or ask your local authority for advice regarding building regulations.

Before installing a stove or erecting a chimney it is necessary for you to make a building application permission to your local authority. The owner of the house is personally responsible for ensuring compliance with the mandatory safety requirements and must have the installation approved by a qualified inspector. Your local chimney sweep must also be informed about the installation as this will affect the routines for regular chimney-sweeping services.

Installation

This stove model is only intended to be installed on a masonry chimney. The connection is made from the top of the stove to the masonry chimney using connection pipes. Also check that the masonry chimney is suitable for mounting the stove.

Hearth plate

Due to the risk of falling embers, a flammable floor must be protected by a hearth plate. It must extend 300 mm in front of the stove and 100 mm on each side of the stove, or have a 200 mm extension on each side of the opening. The hearth plate can consist of natural stone, concrete, metal plate or glass. Hearth plates made of glass are sold as accessories for these models.

Final inspection of the installation

It is extremely important that the installation is inspected by an authorised chimney sweep before the stove is used. Also read the "Lighting instruction", before lighting for the first time.

Connection to chimney

- The stove must be connected to chimneys dimensioned for a minimum flue gas temperature of 400°C.
- The stove should not be installed in a chimney serving more than one appliance.
- The diameter of the connection sleeve is designed to fit chimney pipes with an internal diameter of Ø150 mm.
- Normal chimney draw under nominal operation should be between 20-25 Pa close to the connector. The draft is affected both by the length and area of the chimney, and by how well sealed it is. The recommended minimum flue length is 3.5 m and its diameter should be Ø125 to Ø150 mm.
- A flue with sharp bends and horizontal routing reduces the draught in the chimney. Maximum horizontal flue is 1 m, on the condition that the vertical flue length is at least 5 m.
- It must be possible to sweep the full length of the flue and the soot hatches must be easily accessible.
- Carefully check that the chimney is sealed and that there is no leakage around soot hatches and flue connections.

Supply of combustion air

When a stove is installed in a room, the demand for air supply to the room increases. Air can be provided indirectly via a vent in the outer wall or via a duct from the outside that is connected to the connector on the underneath of the stove. The amount of air needed for combustion is 20 m³/h. See page 29.

The connector (accessory) for the combustion air has an external diameter of 80 mm. When duct routing further than 1 m the pipe diameter must be increased to 100 mm and a correspondingly larger wall vent must be selected.

In hot areas, the duct should be insulated with 30 mm mineral wool with a moisture inhibiting outer cover. It is also important to seal around the hole in the wall (or floor) of the lead-in using sealant.

A 1 m length of condensation insulated ducting for combustion air is available as an accessory.

Installation distances

Contura MyCube i8 W


The minimum distance in front of the stove opening to combustible parts of the building or interior decoration must be at least 1,4 m.

The dimension diagrams only show the minimum permitted installation distances for the stove. When connecting to a steel flue, also note the safety distance requirements of the flue. The safety distance between an uninsulated flue and a combustible part of the building should be at least 500 mm.


A = Height to chimney connection

C = Height to air inlet


OD (Outer diameter)

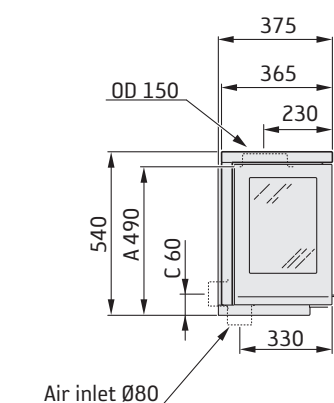


This stove model is only intended to be installed on a masonry chimney. The connection is made from the top of the stove to the masonry chimney using connection pipes. Also check that the masonry chimney is suitable for mounting the stove.

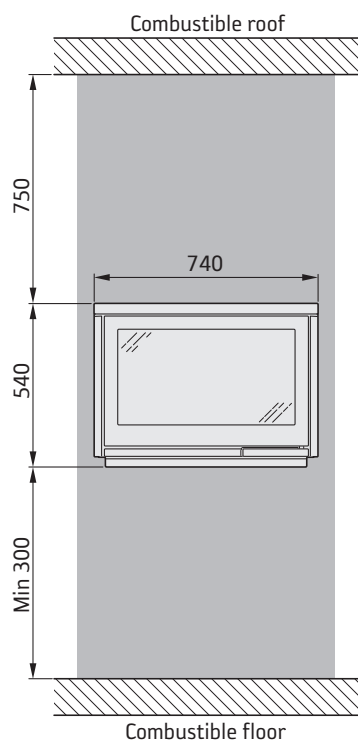

INSTALLATION AGAINST COMBUSTIBLE WALLS

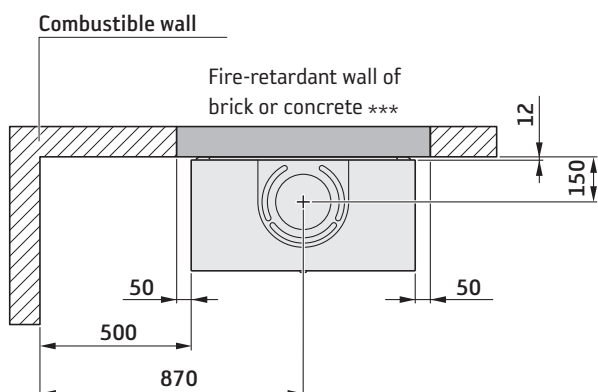

INSTALLATION AGAINST FIREWALLS

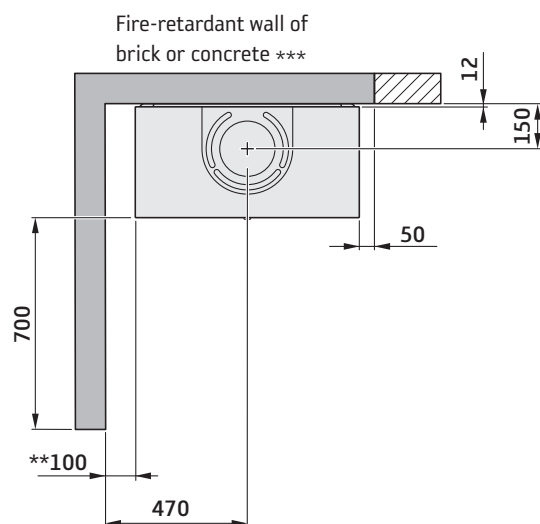

** To prevent discolouration of painted non-flammable walls we recommend that the same side distance as to combustible walls is used.

*** Example of an approved firewall is 120 mm solid brick or 100 mm aerated concrete.

**SE** Montering

Om kaminen behöver läggas ned för att förflyttas bör lösa delar demonteras. Följ instruktioner på sida 23-26 för demontering.

- 1 Galler
- 2 Eldstadsbeklädnad (Vermiculite)
- 3 Typskylt
- 4 Bräsbegränsare
- 5 Roster
- 6 Eldstadsbotten
- 7 Asklåda

DE Montage

Wenn der Kaminofen hingelegt werden muss, sind zuvor lose Komponenten zu demontieren. Zur Demontage sind die Anweisungen auf den Seiten 23-26 zu befolgen.

- 1 Gitter
- 2 Brennraumauskleidung (Vermiculit)
- 3 Typenschild
- 4 Stehrost
- 5 Rost
- 6 Feuerstättenboden
- 7 Aschekasten

NO Før montering

Hvis ovnen må legges ned for å flyttes, bør løse deler demonteres. Følg instruksjonene på side 23-26 for demontering.

- 1 Gitter
- 2 Brennplater og hvelv (Vermikulitt)
- 3 Typeskilt
- 4 Kubbstopper
- 5 Rist
- 6 Ildstedsbunn
- 7 Askeskuff

FR Avant de procéder au montage

Les éléments non fixés devront être retirés si le poêle doit être couché pour être déplacé. Suivez les instructions des pages 23-26 pour le démontage.

- 1 Grille
- 2 Habillage du foyer (Vermiculite)
- 3 Plaque signalétique
- 4 Grille de retenue
- 5 Grille
- 6 Fond du foyer
- 7 Cendrier

GB Prior to installation


If the stove needs to be laid down in order to be moved, loose components should be removed. Follow the instructions on pages 23-26 for removal.

- 1 Grille
- 2 Fire bricks (Vermiculite)
- 3 Type plate
- 4 Fire bars
- 5 Grate
- 6 Hearth base
- 7 Ash pan

DK Før opstilling

Hvis brændeovnen skal lægges ned for at blive flyttet, bør løsdele afmonteres. Følg instruktionerne på side 23-26 for afmontering.

- 1 Gitter
- 2 Ovnbeklædning (Vermiculite)
- 3 Typeskilt
- 4 Brændeholder
- 5 Rist
- 6 Ovnbund
- 7 Askeskuffe

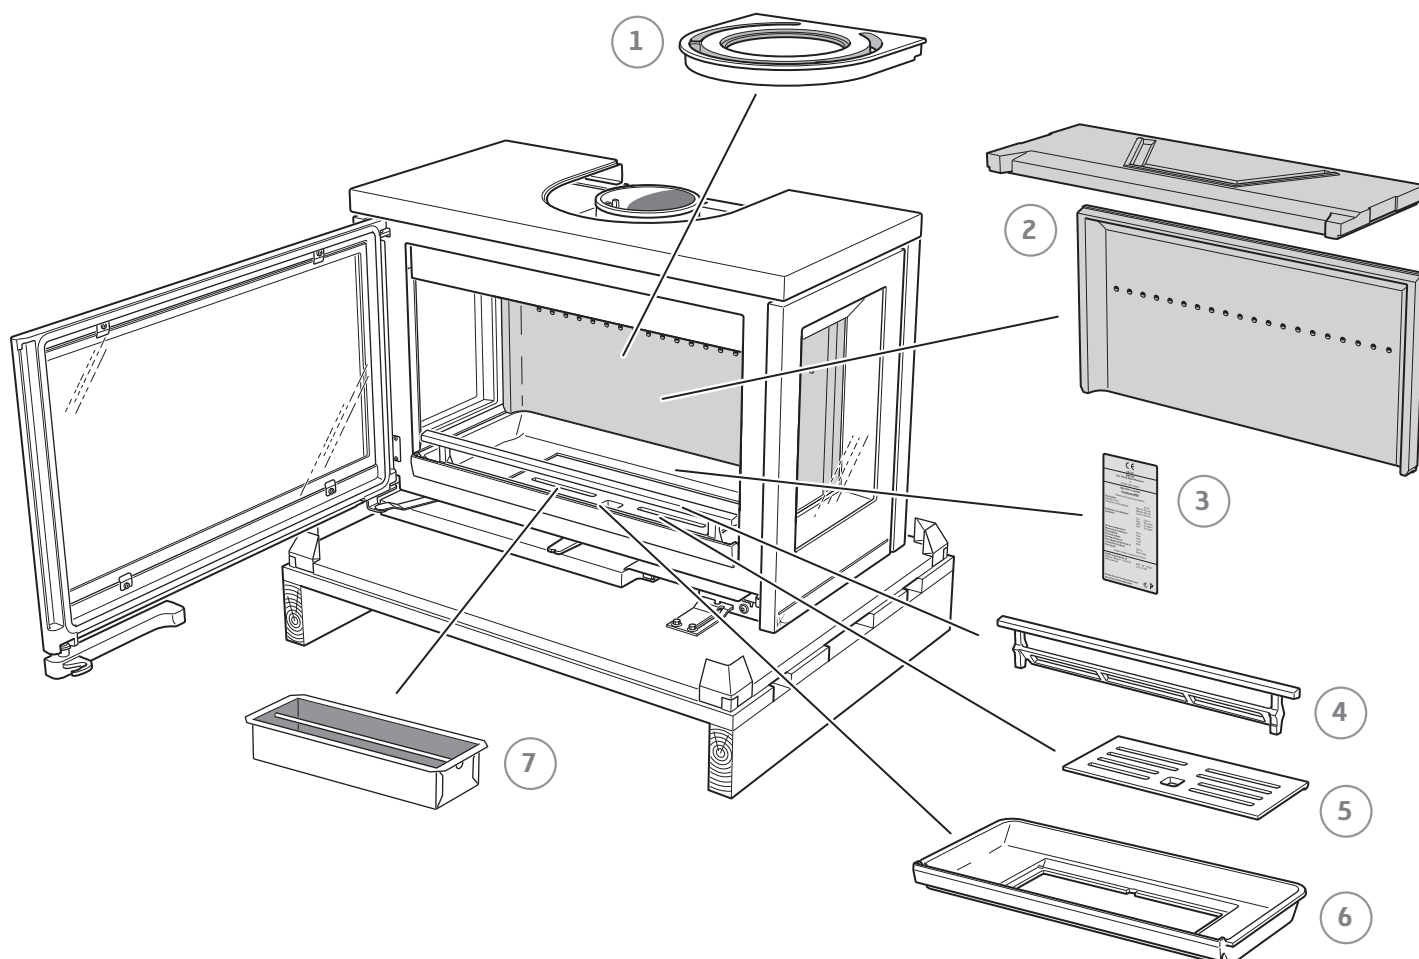

FI Ennen asennusta

Jos takka pitää siirtää kyljellään, irta-osat pitää irrottaa. Noudata sivujen 23-26 purkamisohjeita.

- 1 Säleikkö
- 2 Tulipesän verhous (vermikuliitti)
- 3 Tyypikilpi
- 4 Suojareunus
- 5 Arina
- 6 Palotilan pohja
- 7 Tuhkalaatikko

IT Prima del montaggio


Se è necessario inclinare la stufa per spostarla, rimuovere prima i componenti liberi. Per lo smontaggio, seguire le istruzioni riportate alle pagine 23-26.

- 1 Griglia
- 2 Rivestimento interno del focolare (vermiculite)
- 3 Targhetta identificativa
- 4 Griglia ferma-legna
- 5 Griglia
- 6 Fondo del focolare
- 7 Cassetto della cenere

NL Voorafgaand aan montage

Als de kachel liggend moet worden verplaatst, moeten losse onderdelen worden gedemonteerd. Volg de instructies op pagina 23-26 voor demontage.

- 1 Rooster
- 2 Haardbekleding (vermiculiet)
- 3 Typeplaatje
- 4 Houtvanger
- 5 Rooster
- 6 Bodem verbrandingskamer
- 7 Aslade

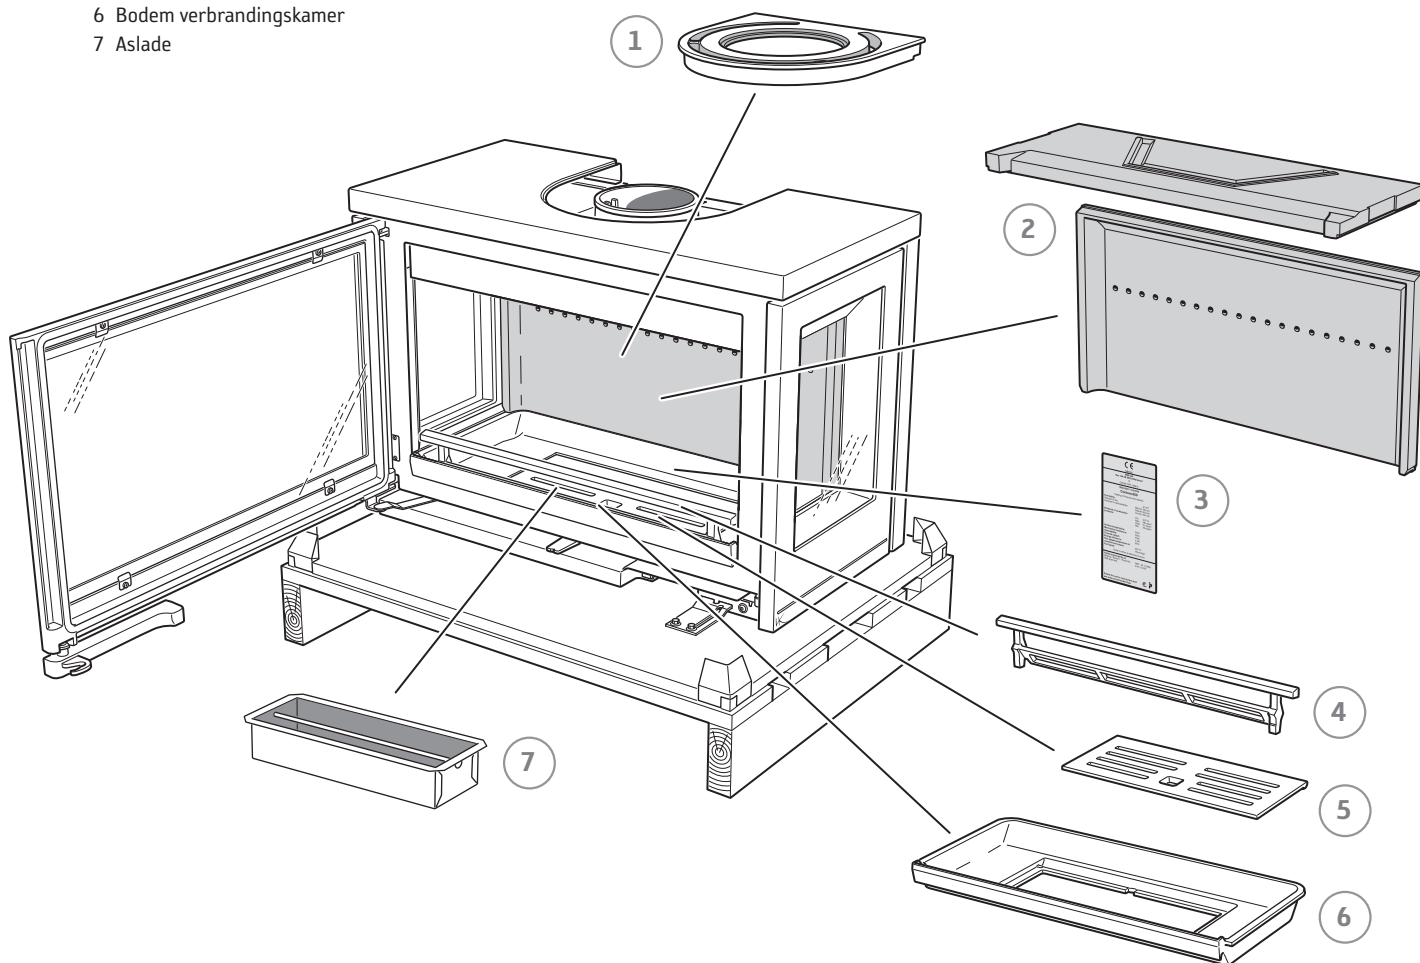



SE Demontera eldstadsbeklädnaden

DK Afmonter pejsebeklædningen

DE Demontage der Brennraumauskleidung

FI Tulipesän verhoilun irrottaminen

NO Slik demonterer du ildstedsbekledning

IT Smontare il rivestimento interno del focolare

FR Démonter l'habillage du poêle

NL Demonteer de haardbekleding

GB How to remove the hearth surround



SE Hanteras varsamt!

DK Håndter med forsigtighed!

DE Vorsichtig vorgehen!

FI Käsittele varovasti!


NO Behandles forsiktig!




IT Maneggiare con cura!




FR À manipuler avec précaution!




NL Voorzichtig hanteren!

GB Handle with care!

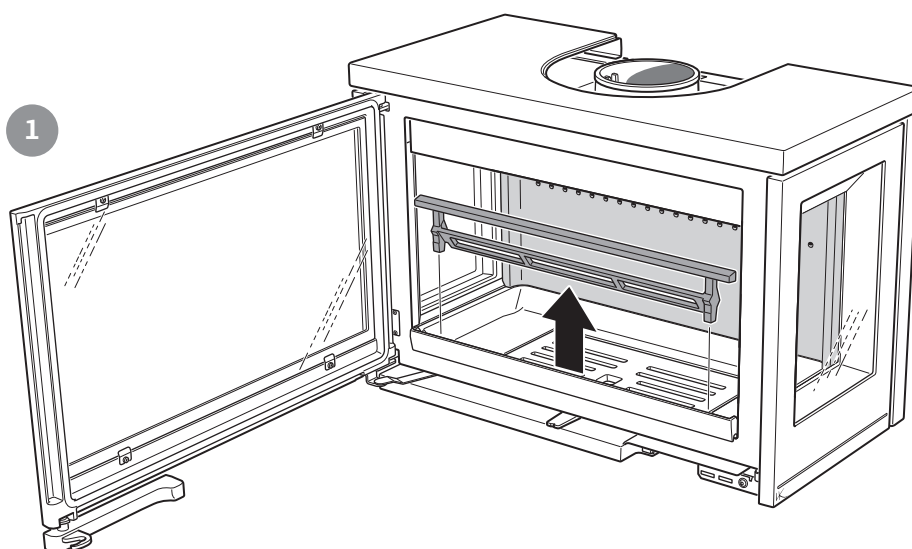

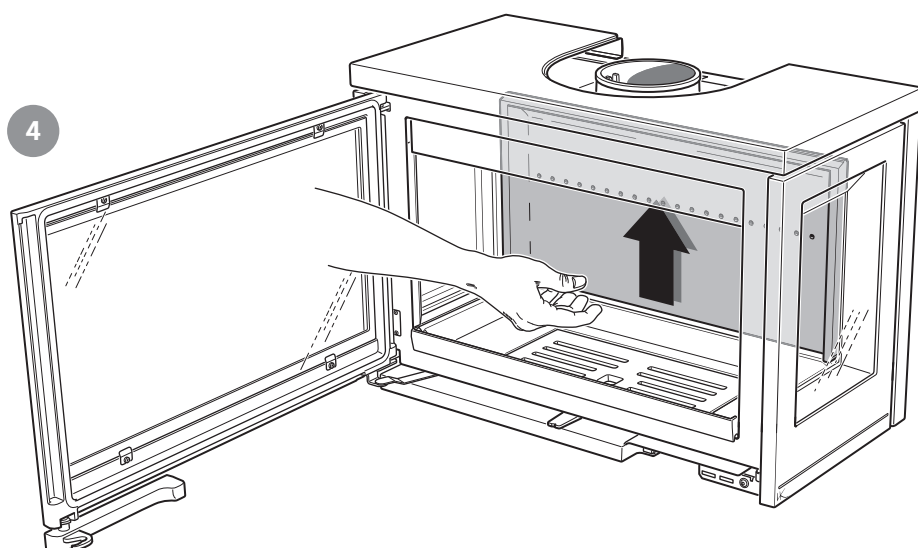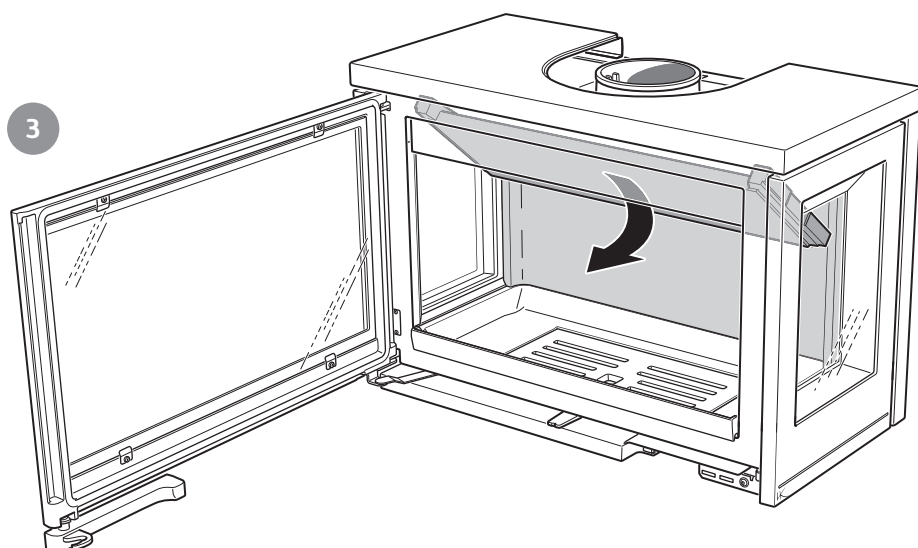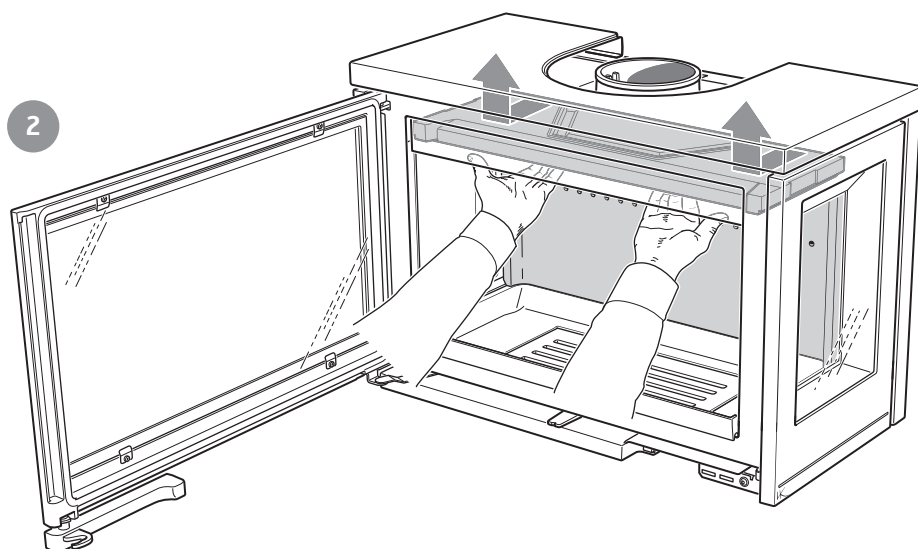

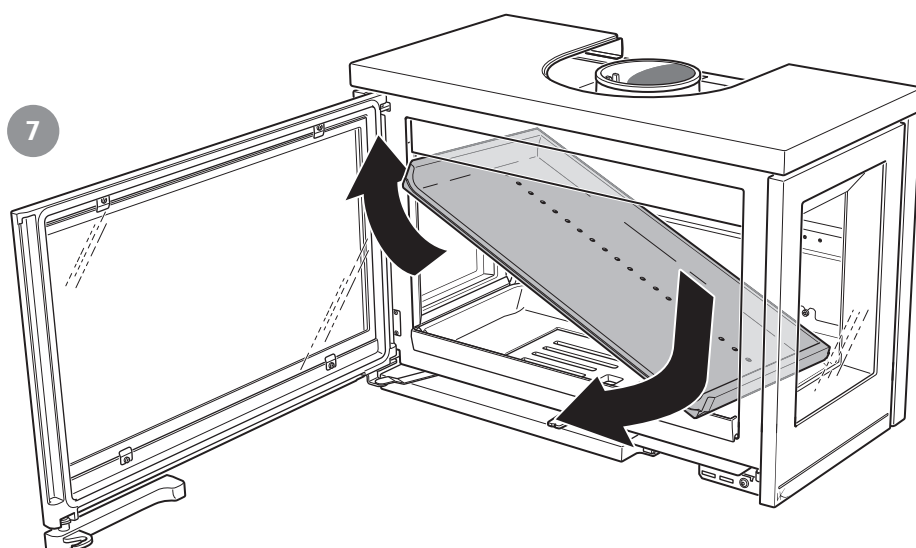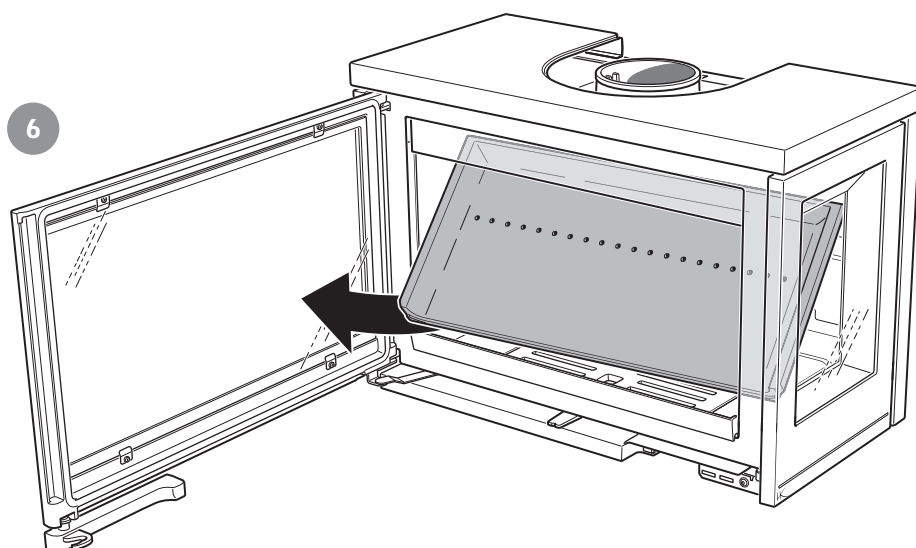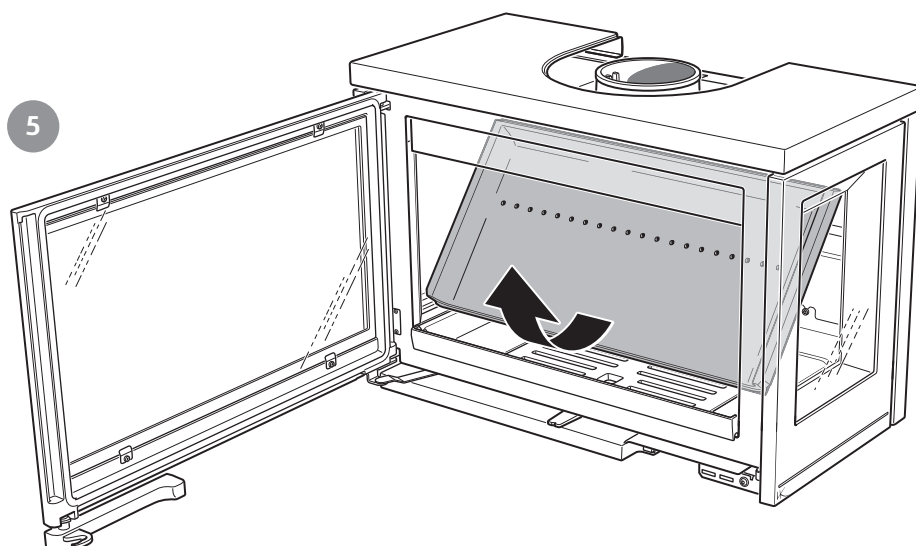

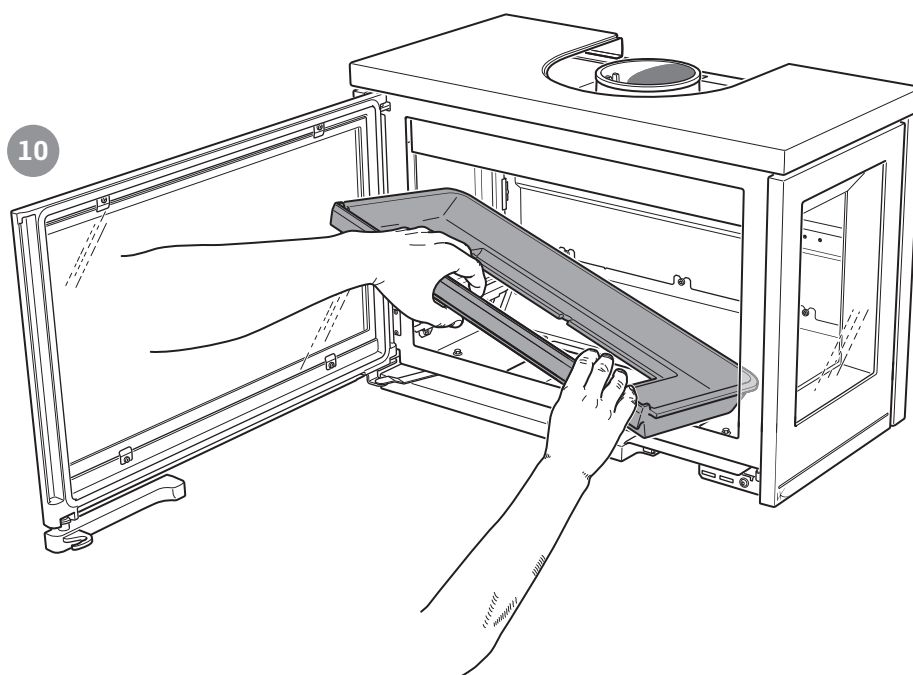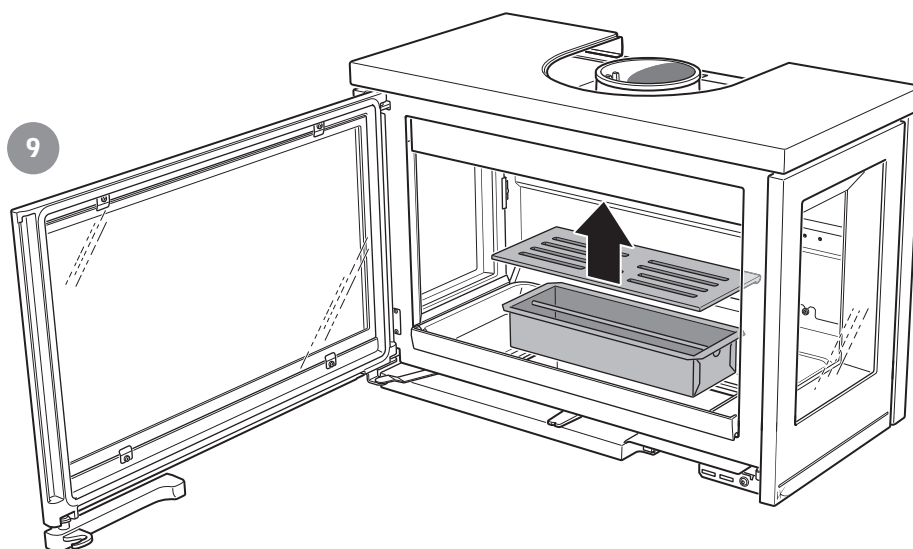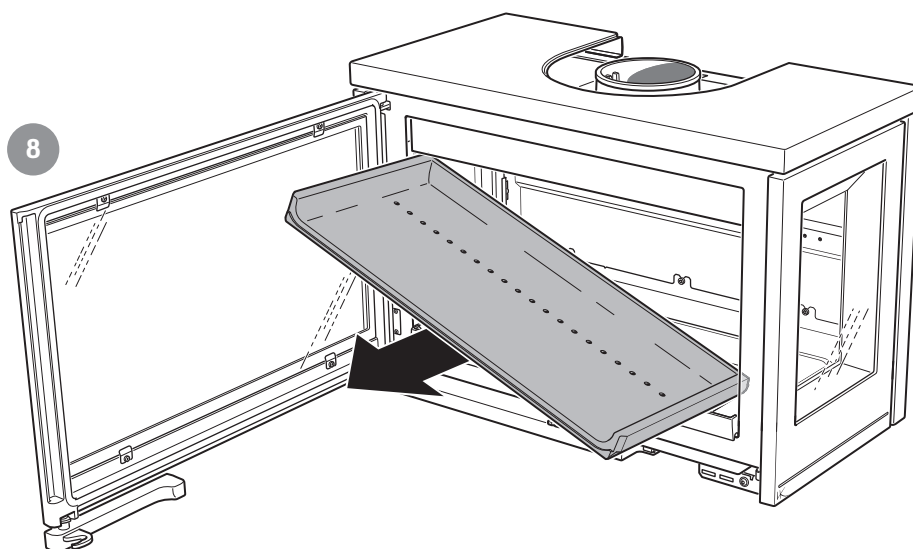



For installation in the UK and in smoke control areas


GB




Mandatory for smoke control areas

Contura MyCube i8 W, 7,6 kW woodburning stove has been recommended as suitable for use in smoke control areas. This when burning wood logs and operated in accordance with these instructions and when fitted with a permanent stop to prevent closure of the air control unit beyond 31% open position.

The permanent stop must be installed if the appliance is to be used in a smoke control area, this stop must not be removed in smoke control areas, otherwise an offence will be committed if the appliance is used without the permanent stop in place.


Damper Blocker for Contura MyCube i8 W

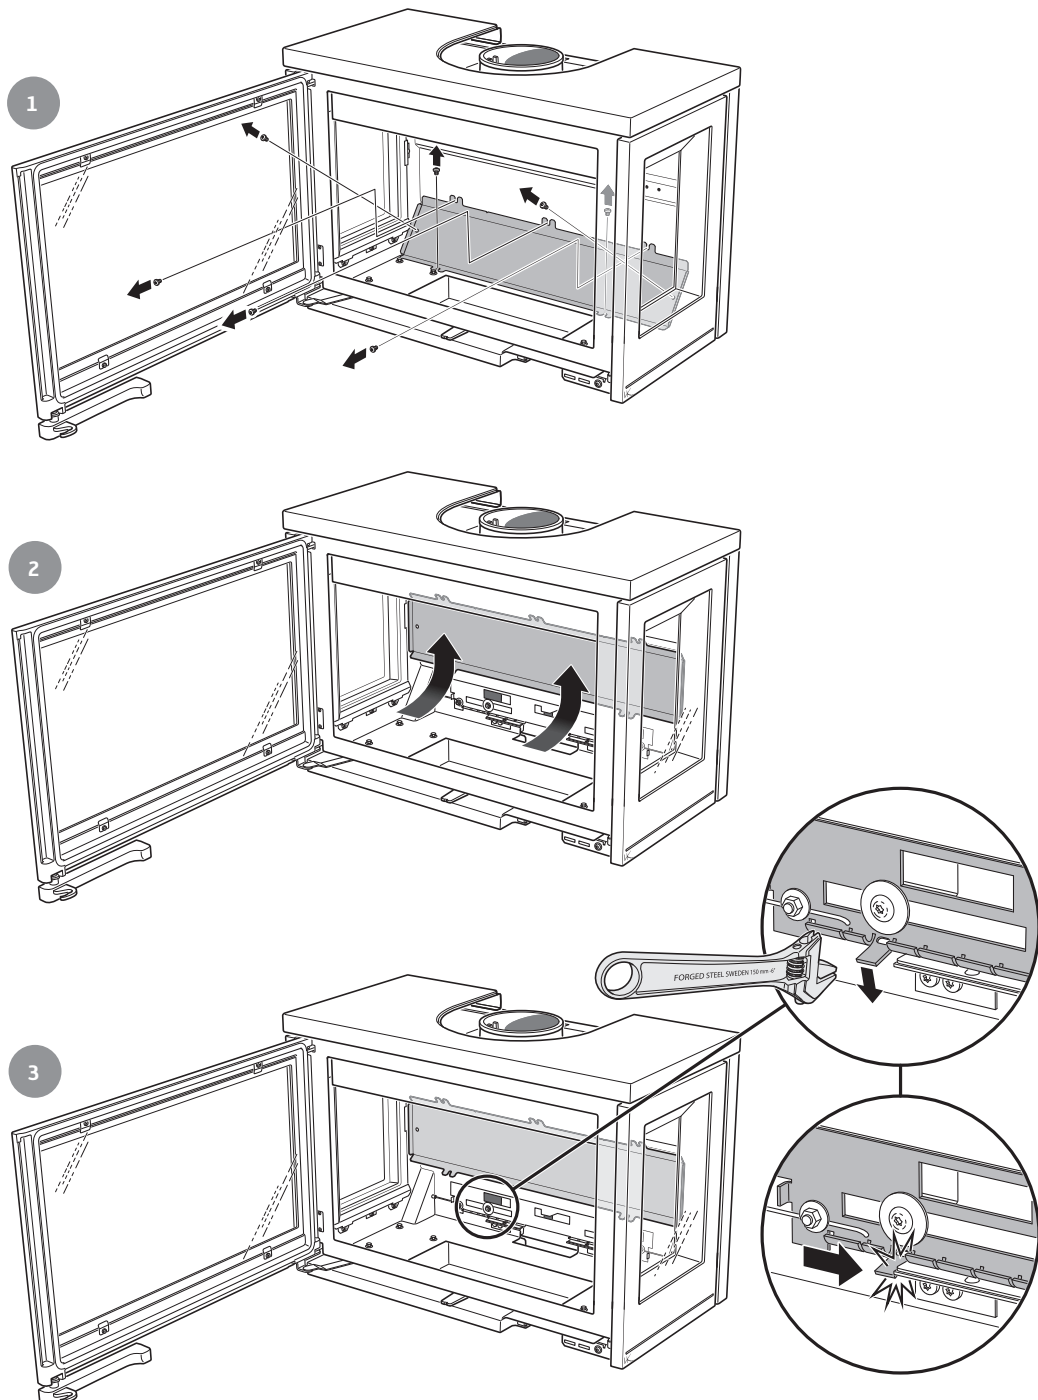

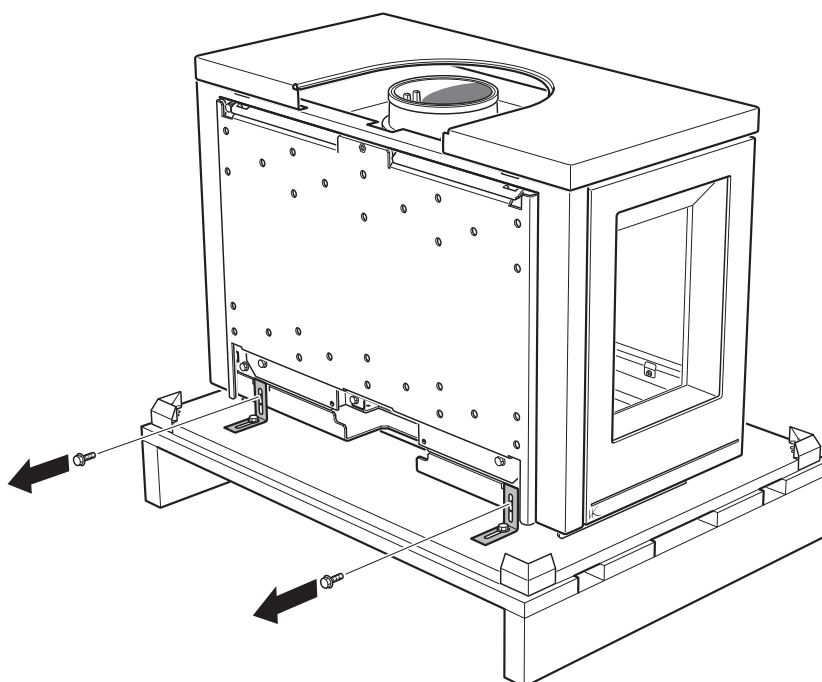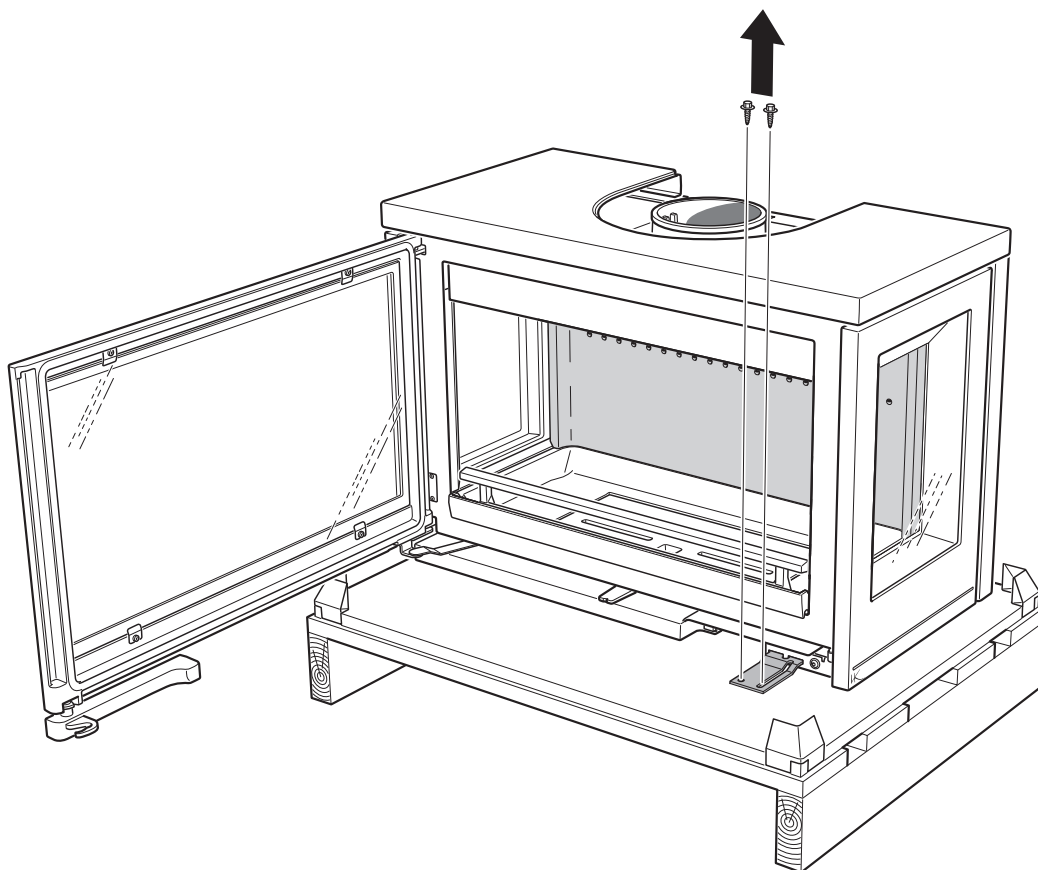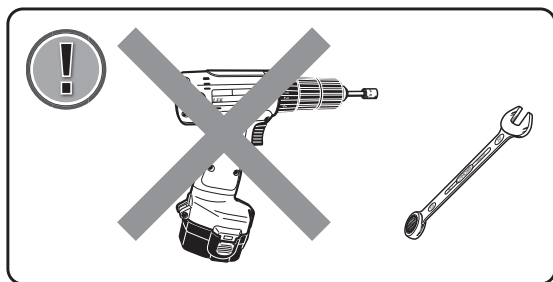





- SE Tilluft (Tillbehör)
- DE Zuluft (Zubehör)
- NO Tilluft (Tilbehør)
- FR Arrivée d'air comburant (en option)
- GB Indblæsningsluft (ekstraudstyr)
- DK Tuloilma (palamisilmaliitântäsrj on lisävaruste)
- FI Tuloilma (palamisilmaliitântäsrj on lisävaruste)
- IT Presa d'aria (Accessorio)
- NL Toevoerlucht (accessoire)

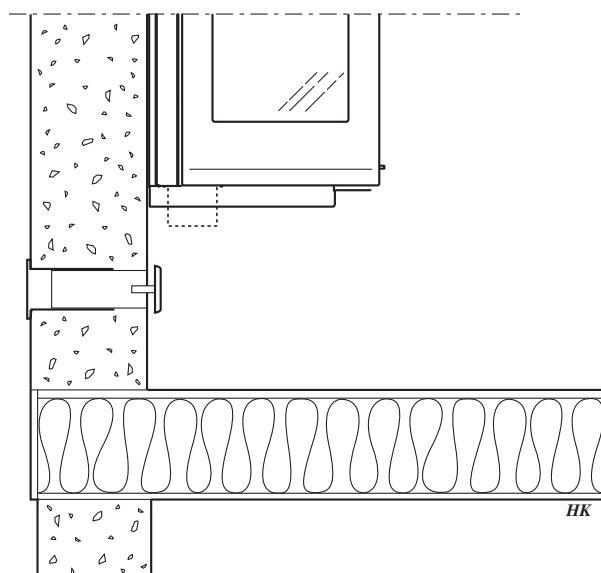



- SE Anslutningsstos bakåt
- DE Anschlussstutzen nach hinten
- NO Tilkoblingsstuss bak
- FR Manchon de raccordement vers l'arrière
- GB Connection kit back
- DK Tilslutningsstuds bagud
- FI Liitosputki taaksepäin
- IT Raccordo sul retro
- NL Aansluitstuk naar achteren



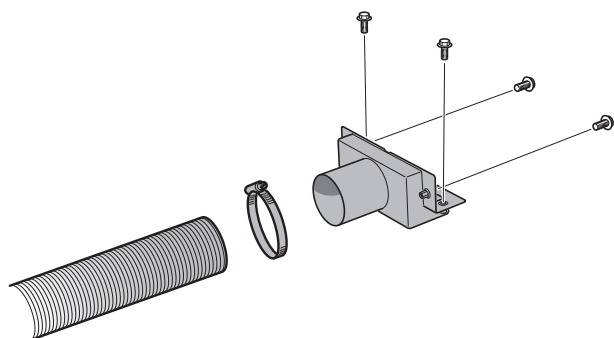




- SE Anslutningsstos nedåt
- DE Anschlussstutzen nach unten
- NO Tilkoblingsstuss nedover
- FR Manchon de raccordement vers le bas
- GB Connector downward
- DK Tilslutningsstuds nedad
- FI Liitosputki alaspäin
- IT Raccordo dal basso
- NL Aansluitstuk omlaag

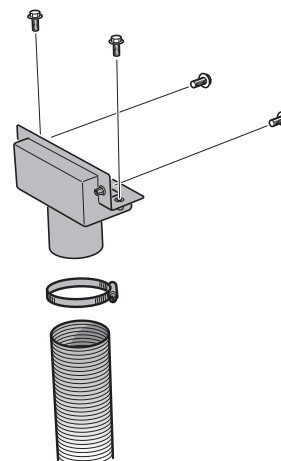

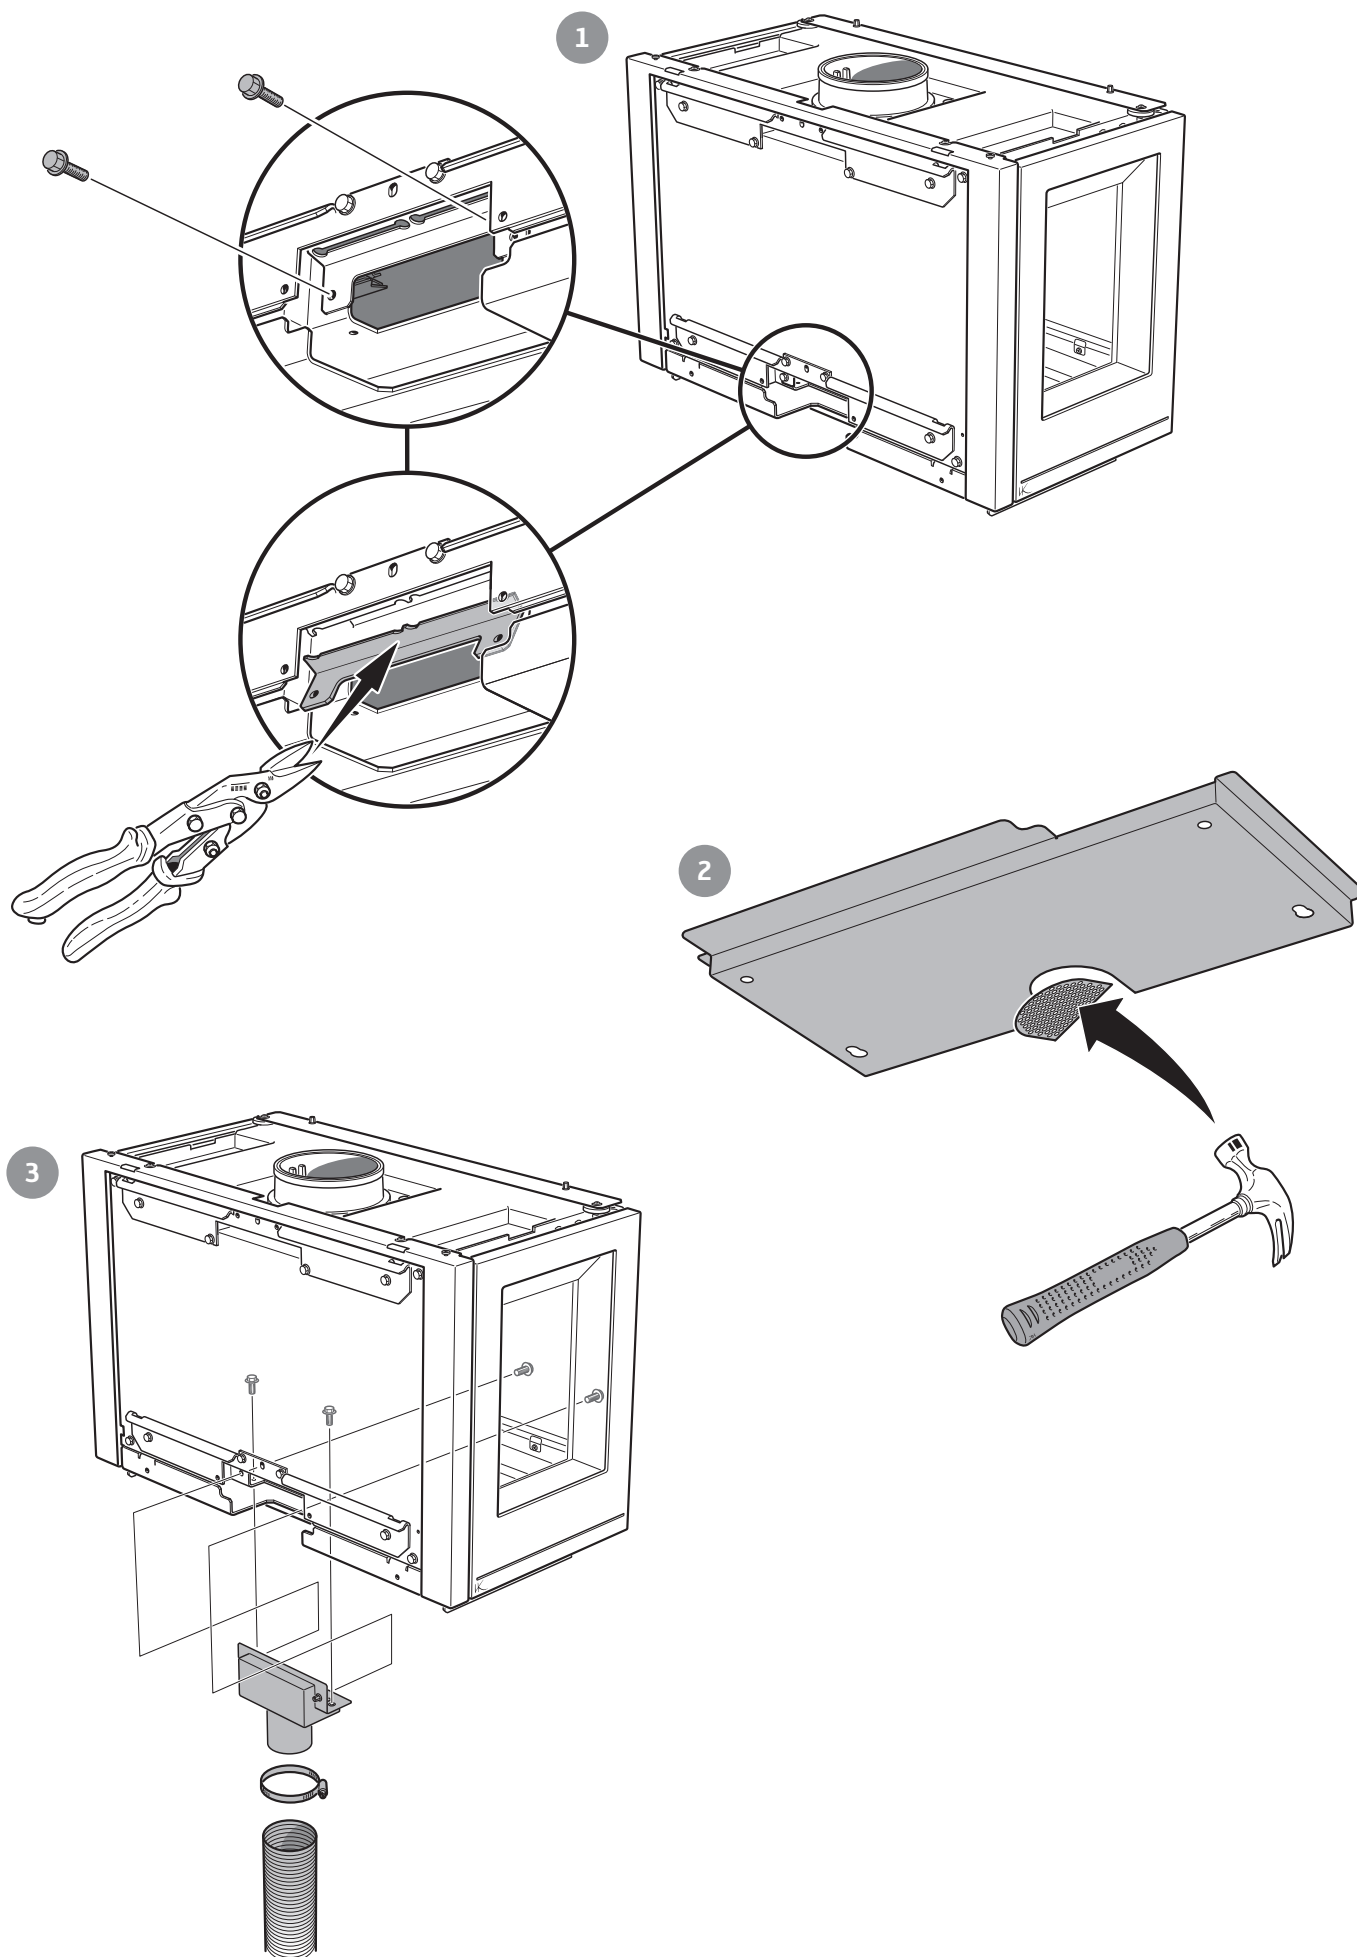

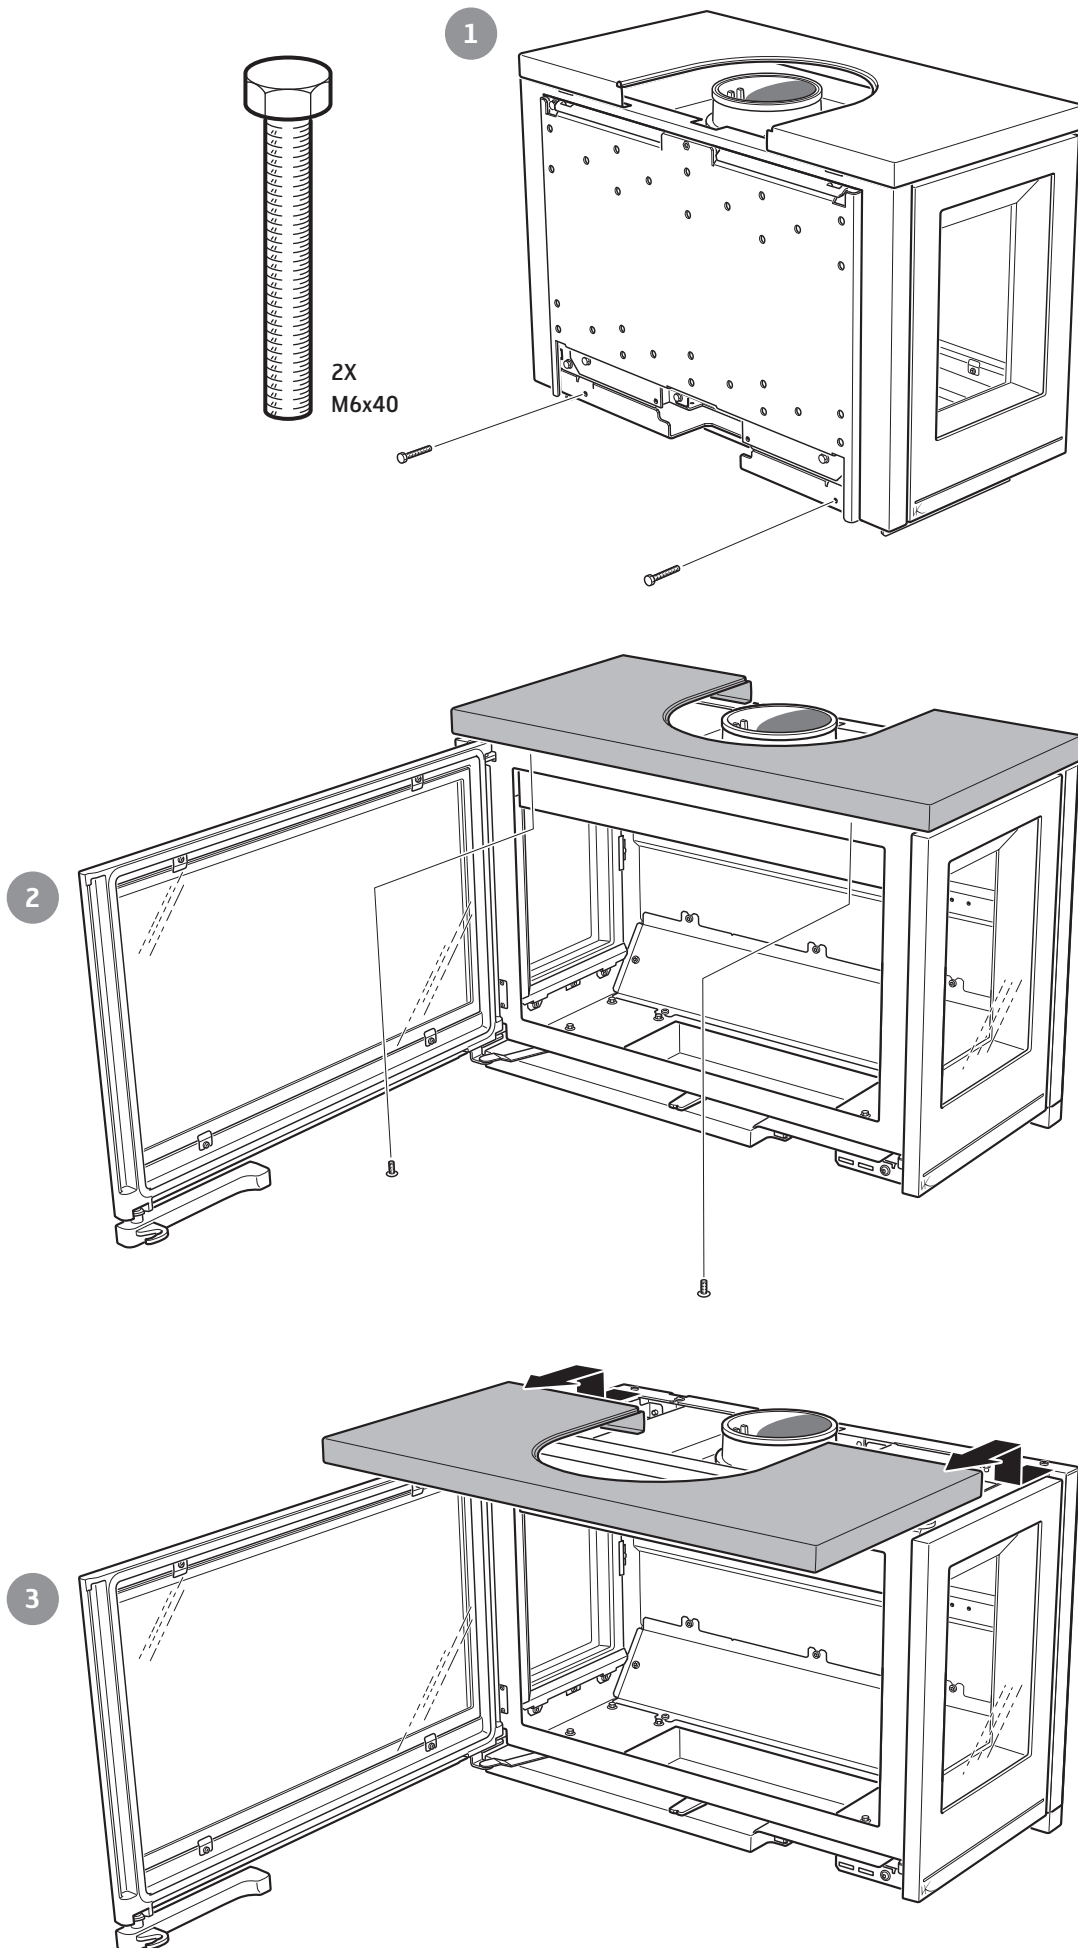


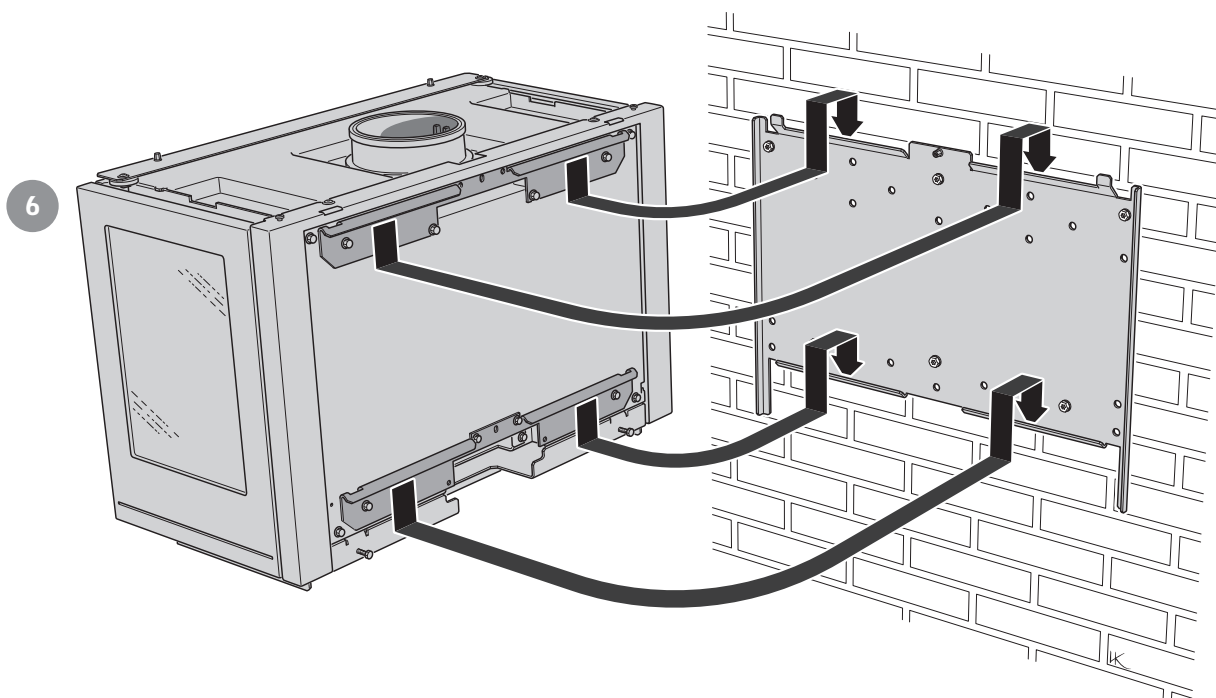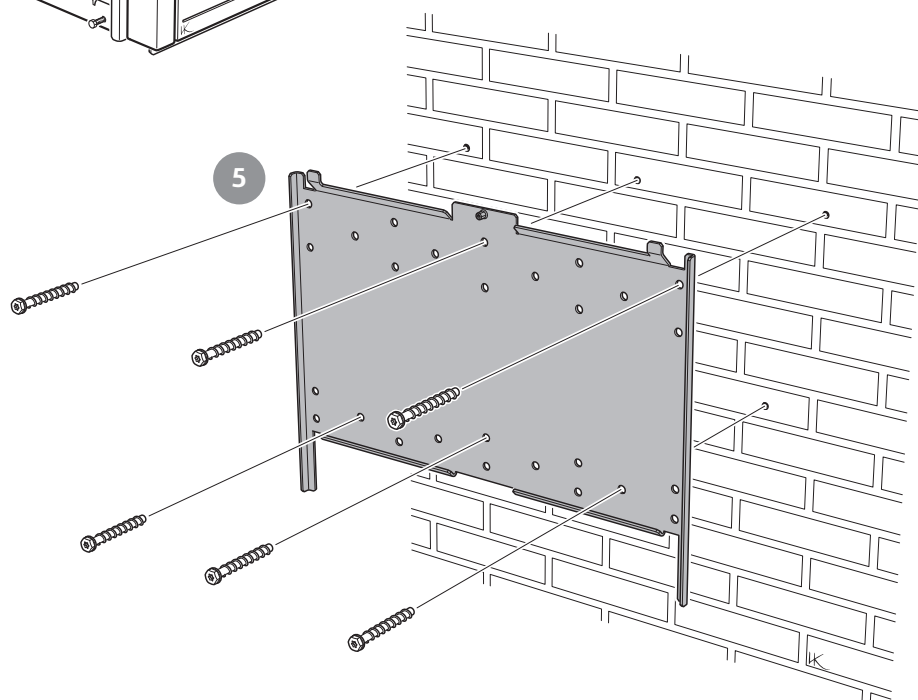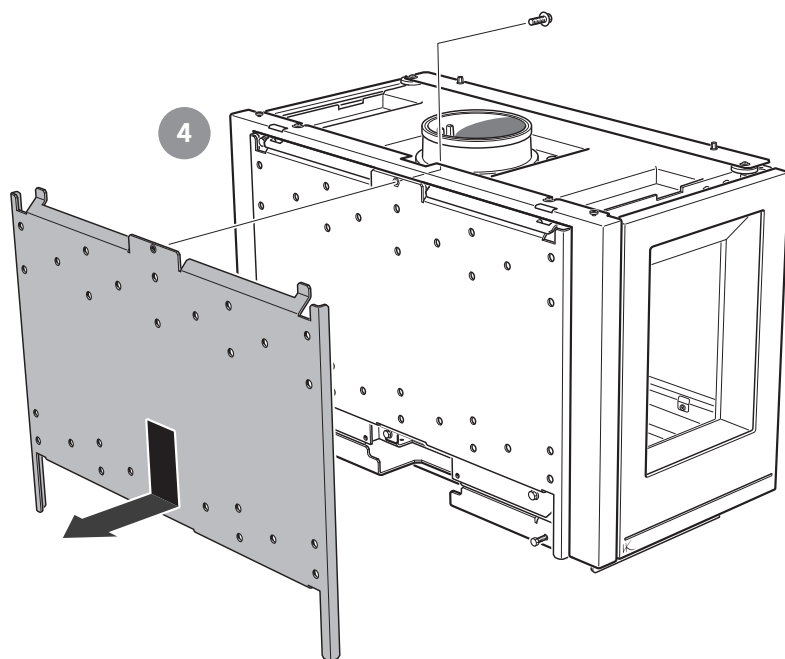

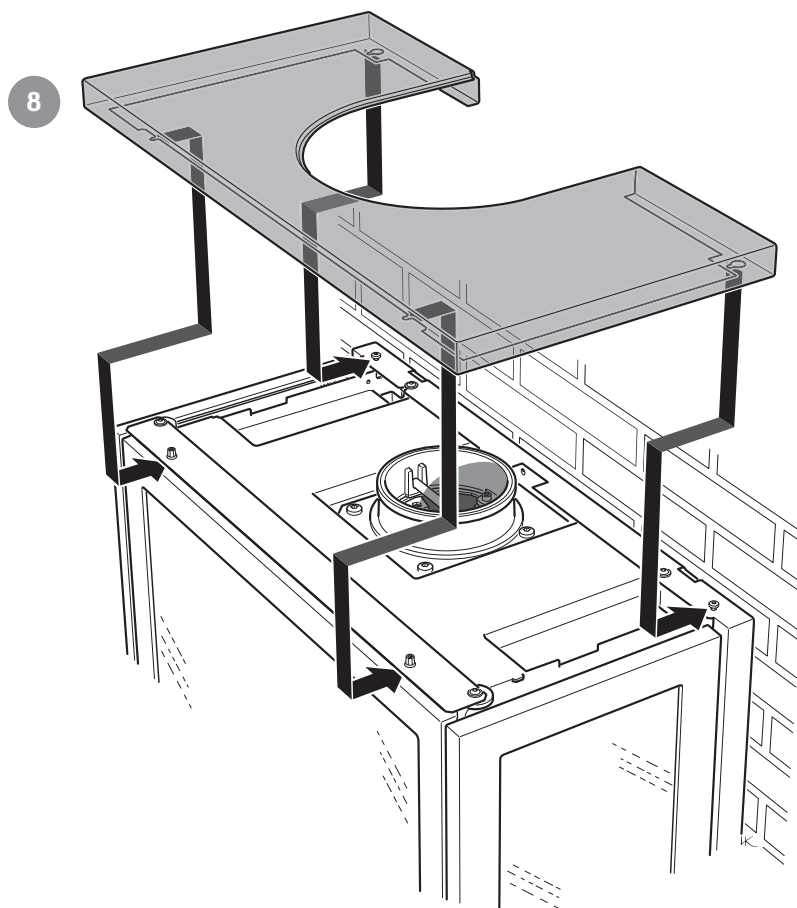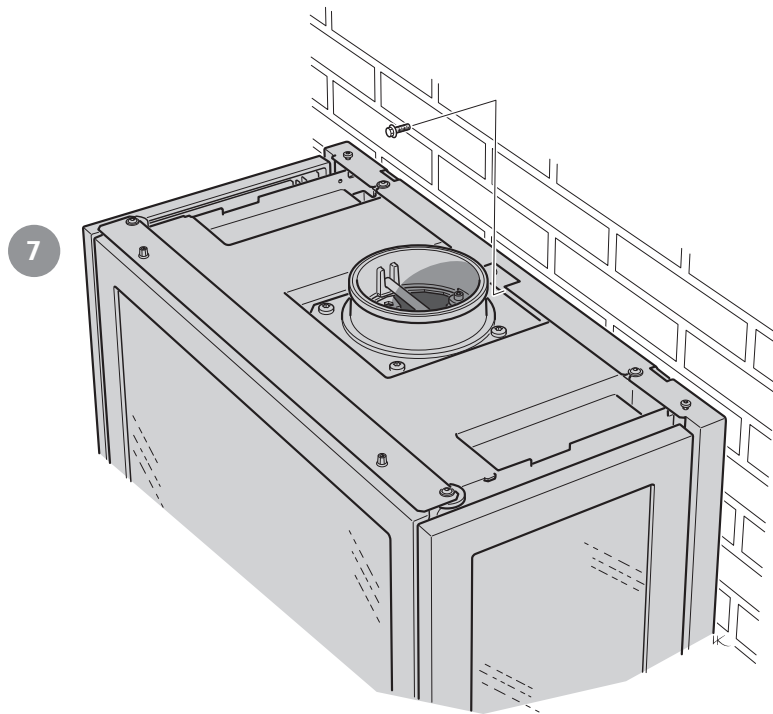







9

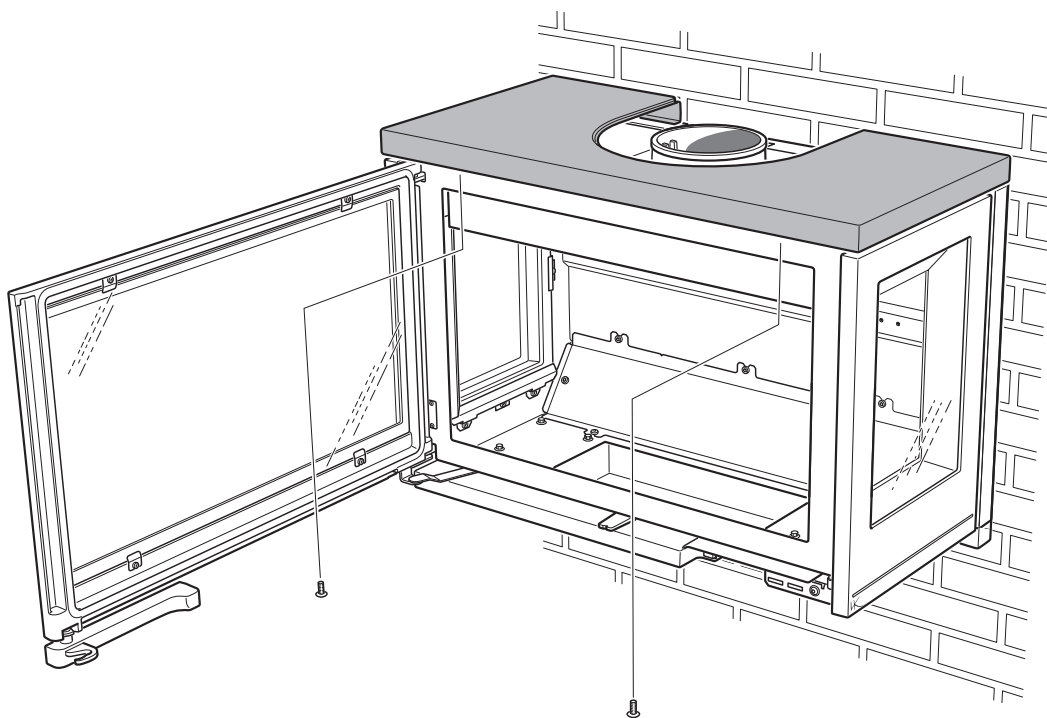

10

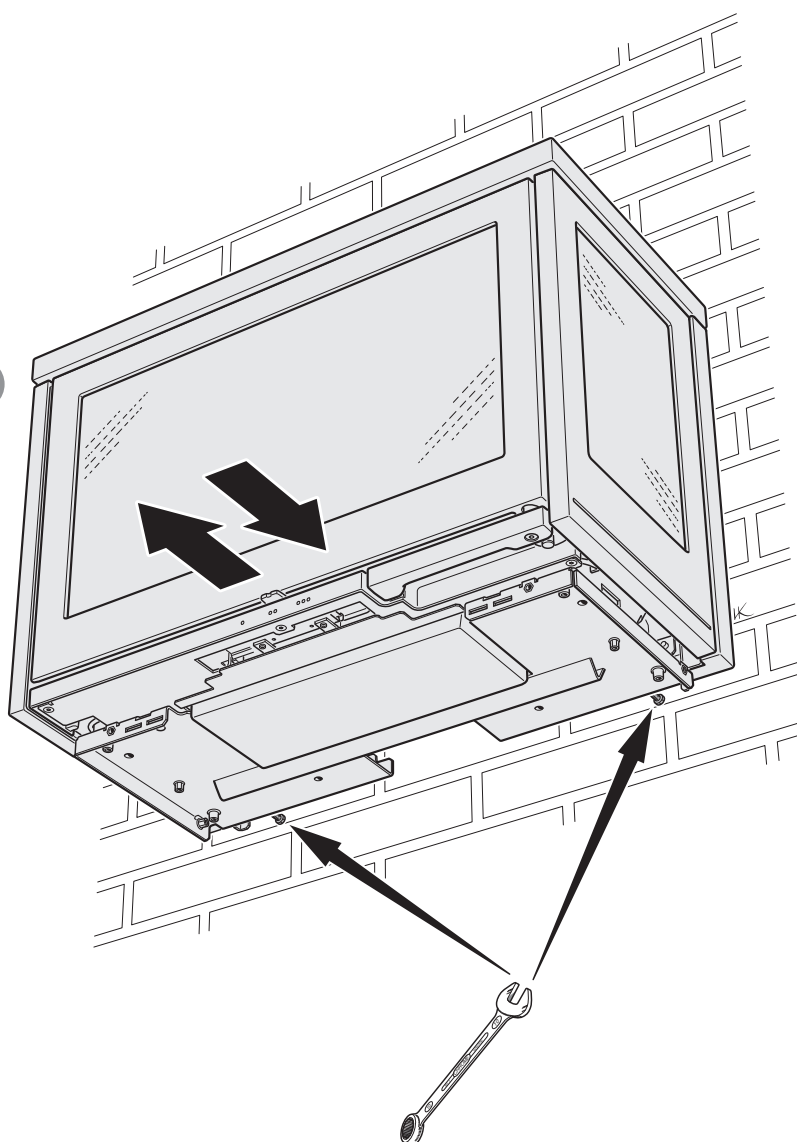

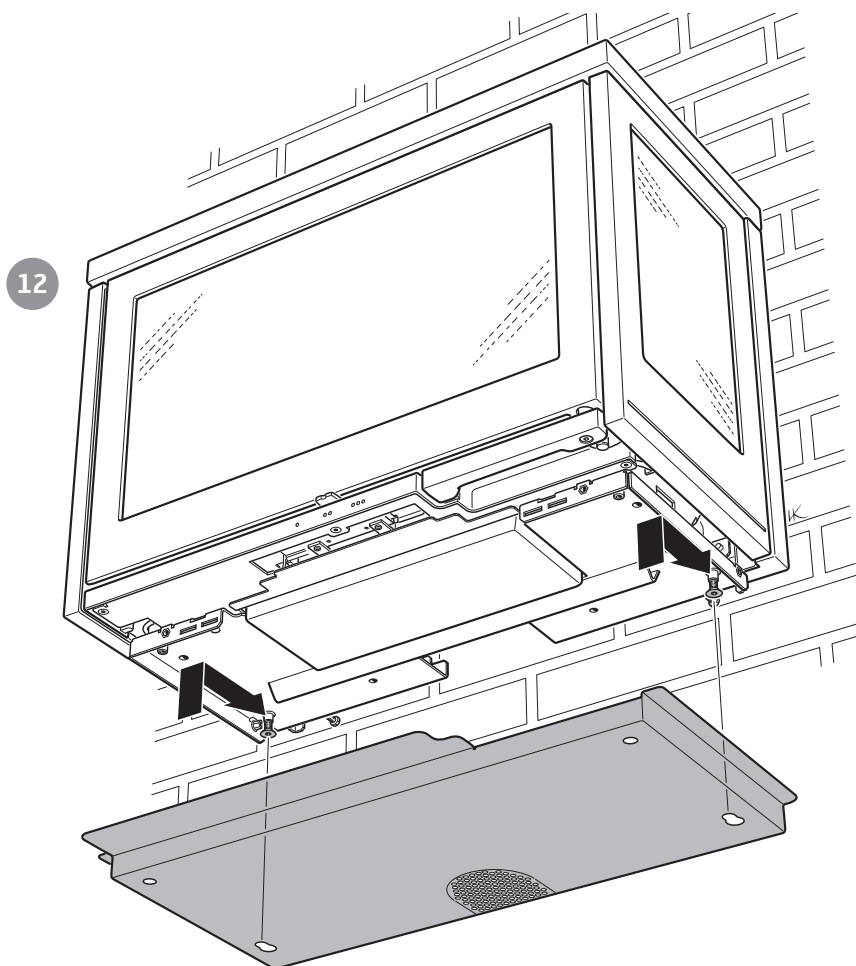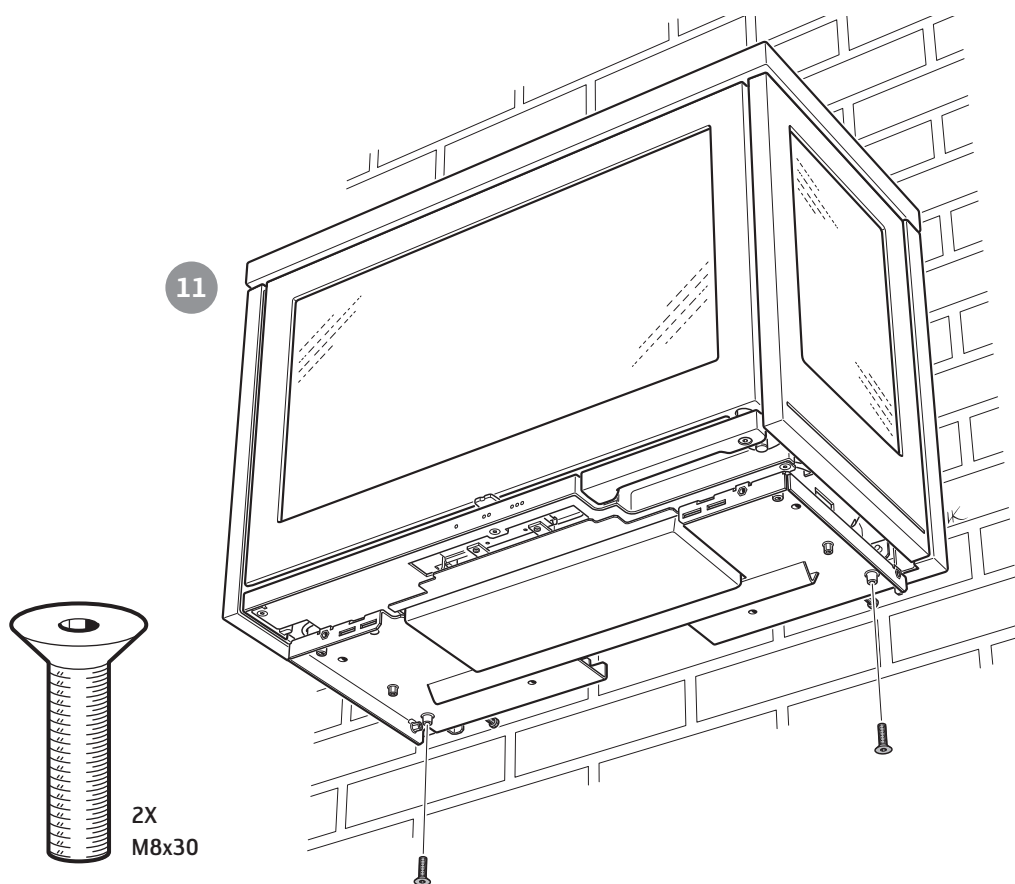

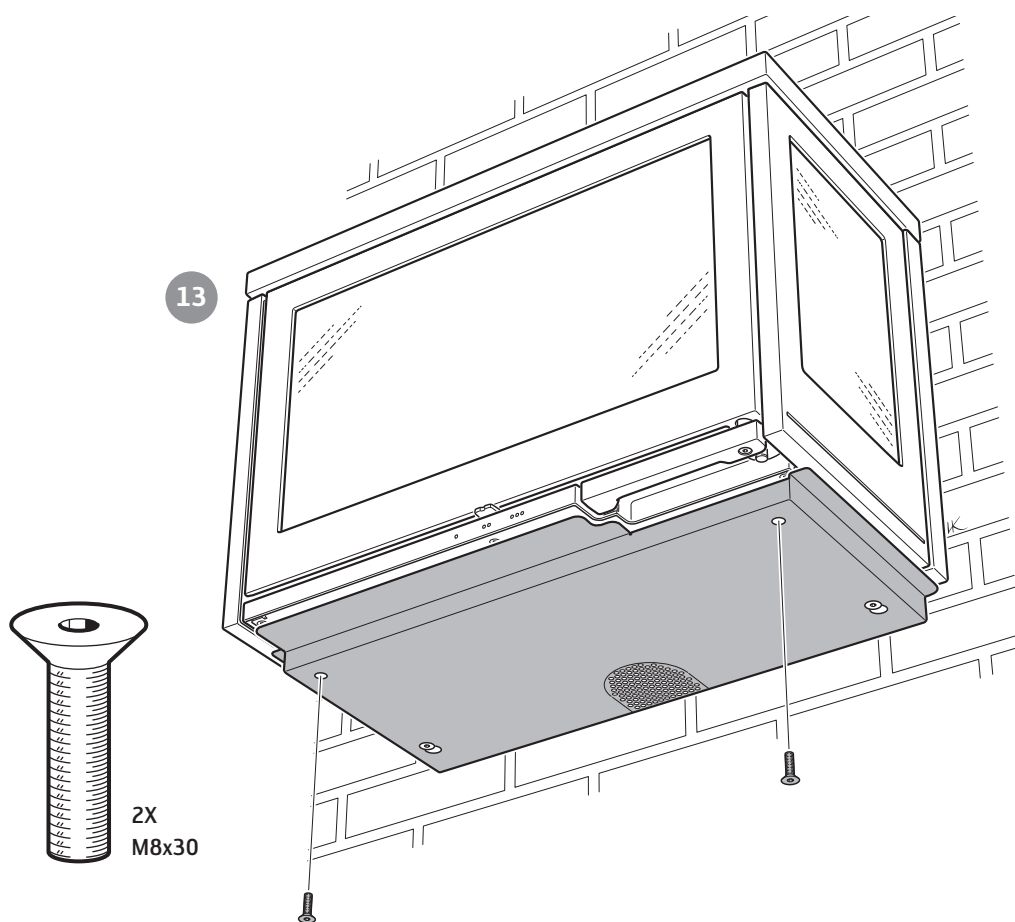

**SE** Toppanslutning till skorsten

Varmluftsgalleret måste vara monterat innan skorstenen toppansluts.

DE Oberseitiger Anschluss an den Schornstein

Das Warmluftgitter muss montiert sein, bevor ein Schornsteinanschluss an der Oberseite erfolgt.

NO Toppmontering til skorstein

Varmluftsgitteret må være montert før skorsteinen toptilkobles.

FR Raccordement par le haut

Monter la grille d'air chaud avant le raccordement à la cheminée par le haut.

GB Top connection to the chimney

The hot air grille must be installed before chimney top connection.

DK Toptilslutning til skorsten

Varmluftstristen skal være monteret, før skorstenen toptilsluttes.

FI Liitääntä ylöspäin savupiippuun

Lämminilmaritilä pitää asentaa ennen savupiipun liitääntä ylöspäin.

IT Collegamento alla canna fumaria dal piano della stufa

Prima di collegare la canna fumaria al piano della stufa, assicurarsi che la griglia dell'aria calda sia montata.

NL Boven aansluiting op een schoorsteen

Het heteluchtrooster moet zijn gemonteerd, voordat de schoorsteen op de bovenaansluiting wordt aangesloten.

