
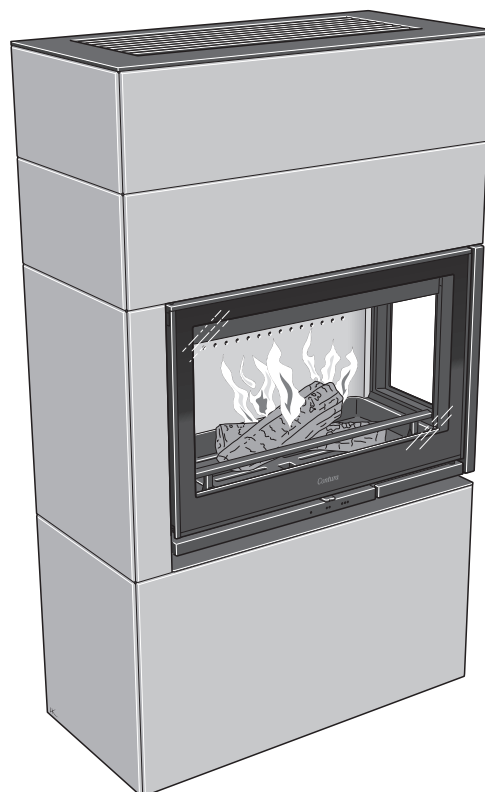


# Contura

## MYCUBE

i8 FS Left & Right  
i8T FS Left & Right

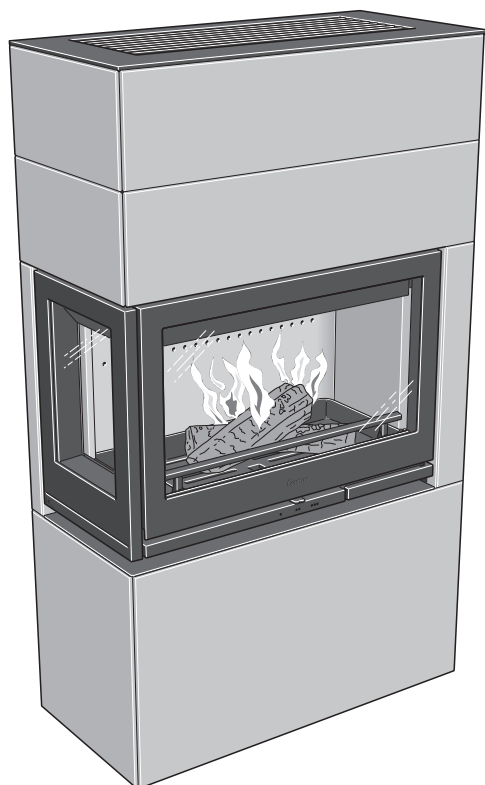

**SE**

|                      |    |
|----------------------|----|
| Fakta                | 3  |
| Installationsavstånd | 4  |
| Montering            | 21 |

**DE**

|                       |    |
|-----------------------|----|
| Einzelheiten          | 5  |
| Installationsabstände | 6  |
| Montage               | 21 |

**NO**

|                      |    |
|----------------------|----|
| Fakta                | 7  |
| Installasjonsavstand | 8  |
| Montering            | 21 |

**FR**

|                       |    |
|-----------------------|----|
| Données Techniques    | 9  |
| Distances à respecter | 10 |
| Montage               | 21 |

**GB**

|                        |    |
|------------------------|----|
| Facts                  | 11 |
| Installation distances | 12 |
| Assembly               | 21 |

**DK**

|                      |    |
|----------------------|----|
| Fakta                | 13 |
| Installationsafstand | 14 |
| Montering            | 21 |

**FI**





|               |    |
|---------------|----|
| Tiedot        | 15 |
| Suojaetäisyys | 16 |
| Asennus       | 22 |

**IT**

|                       |    |
|-----------------------|----|
| Dati Tecnici          | 17 |
| Distanza di montaggio | 18 |
| Montaggio             | 22 |

**NL**

|                    |    |
|--------------------|----|
| Gegevens           | 19 |
| Installatieafstand | 20 |
| Monteren           | 22 |

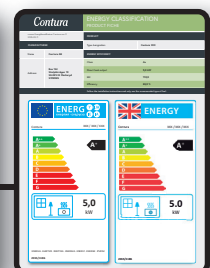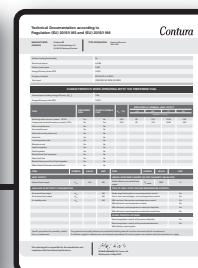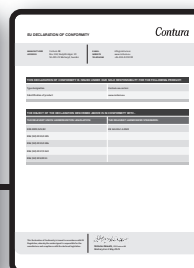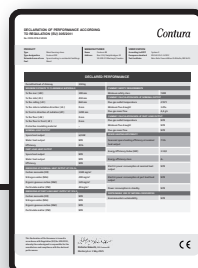

## DOWNLOAD DOCUMENTS

**SE**

"Prestandadeklaration", "EU-försäkran om överensstämmelse", "Teknisk dokumentation", "Energy Classification" och "Garantibevis" finns tillgängliga på [contura.eu](http://contura.eu)

**DK**

Du finder "Ydeevnedeklaration", "EU-overensstemmelseserklæring", "Teknisk dokumentation", "Energiklassificering" og "Garantibevis" på [contura.eu](http://contura.eu)

**DE**

„Leistungserklärung“, „EU-Konformitätserklärung“, „Technische Dokumentation“, „Energieklassifizierung“ und „Garantieschein“ sind unter [contura.eu](http://contura.eu) verfügbar

**FI**

"Suoritusosoitus", "EU-vaatimustenmukaisuusvakuutus", "Tekninen dokumentaatio", "Energialuokitus" ja "Takuutodistus" ovat saatavilla osoitteessa [contura.eu](http://contura.eu)

**NO**

"Ytelseserklæring", "EU-samsvarserklæring", "Teknisk dokumentasjon", "Energiklassifisering" og "Garantibevis" er tilgjengelige på [contura.eu](http://contura.eu)

**IT**

La "Dichiarazione di Prestazione", la "Dichiarazione di Conformità UE", la "Documentazione Tecnica", la "Classificazione Energetica" e il "Certificato di Garanzia" sono disponibili su [contura.eu](http://contura.eu)

**FR**

« Déclaration des performances », « Déclaration de conformité UE », « Documentation technique », « Classification énergétique » et « Certificat de garantie » sont disponibles sur [contura.eu](http://contura.eu)


**NL**

"Prestatieverklaring", "EU-verklaring van overeenstemming", "Technische documentatie", "Energy Classification" en "Garantiebewijs" zijn beschikbaar op [contura.eu](http://contura.eu)

**GB**

"Performance declaration", "EU Declaration of Conformity", "Technical Documentation", "Energy Classification" and "Warranty Certificate" are available at [contura.eu](http://contura.eu)

## Facts

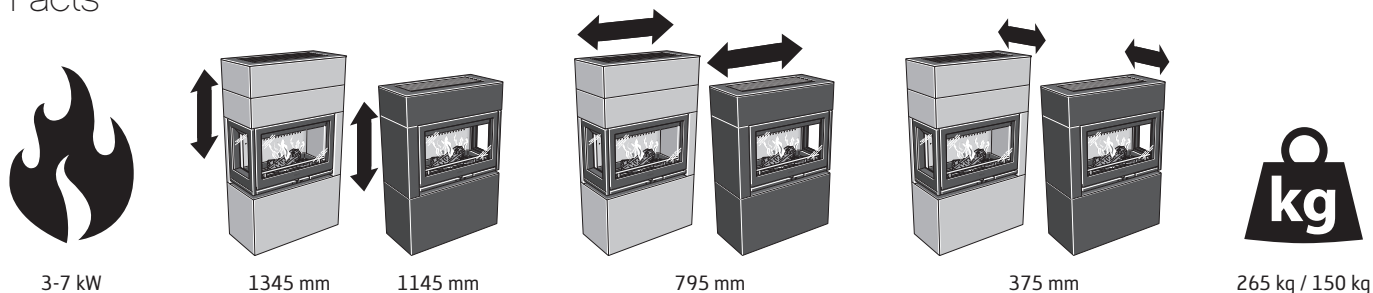

Nominal effect 7,6 kW  
Efficiency 77 %  
Flue gas mass flow 6,3 g/s

Complies with EU Regulation No. 305/2011 for construction products and harmonised standard:

EN 16510-1:2022

EN 16510-2-2:2022



### The stove becomes very hot

During operation, certain surfaces of the stove become very hot and can cause burn injury if touched. Be aware of the strong heat radiated through the hatch glass. Placing flammable material closer than the safe distance indicated may cause a fire. Pyre lighting can cause quick gas ignition with the risk of damage to property and personal injury.

### Installation by authorised technician

This manual contains instructions about how the stoves must be assembled and installed. To ensure the function and safety of the stove, the installation should be carried out by a Hetas trained engineer. Contact one of our dealers who can recommend suitable installer. When completed, the installer should inform the local Council/ authority about the new installation.

### Building application

These main instructions may give guidance which would contravene national building regulations. Please refer to supplementary instructions or ask your local authority for advice regarding building regulations.

Before installing a stove or erecting a chimney it is necessary for you to make a building application permission to your local authority. The owner of the house is personally responsible for ensuring compliance with the mandatory safety requirements and must have the installation approved by a qualified inspector. Your local chimney sweep must also be informed about the installation as this will affect the routines for regular chimney-sweeping services.

### Structural support

Check that the wood joists are strong enough to bear the weight of the stove and chimney. The stove and chimney can usually be placed on a normal wooden joist in a single occupancy house if the total weight does not exceed 400 kg.

### Hearth plate

Due to the risk of falling embers, a flammable floor must be protected by a hearth plate. It must extend 300 mm in front of the stove and 100 mm on each side of the stove, or have a 200 mm extension on each side of the opening. The hearth plate can consist of natural stone, concrete, metal plate or glass. Hearth plates made of glass are sold as accessories for these models.

### Final inspection of the installation

It is extremely important that the installation is inspected by an authorised chimney sweep before the stove is used. Also read the "Lighting instruction", before lighting for the first time.

## Connection to chimney

- The stove must be connected to chimneys dimensioned for a minimum flue gas temperature of 400°C.
- The stove should not be installed in a chimney serving more than one appliance.
- The diameter of the connection sleeve is designed to fit chimney pipes with an internal diameter of Ø150 mm.
- Normal chimney draw under nominal operation should be between 20-25 Pa close to the connector. The draft is affected both by the length and area of the chimney, and by how well sealed it is. The recommended minimum flue length is 3.5 m and its diameter should be Ø125 to Ø150 mm.
- A flue with sharp bends and horizontal routing reduces the draught in the chimney. Maximum horizontal flue is 1 m, on the condition that the vertical flue length is at least 5 m.
- It must be possible to sweep the full length of the flue and the soot hatches must be easily accessible.
- Carefully check that the chimney is sealed and that there is no leakage around soot hatches and flue connections.

## Supply of combustion air

When a stove is installed in a room, the demand for air supply to the room increases. Air can be provided indirectly via a vent in the outer wall or via a duct from the outside that is connected to the connector on the underneath of the stove. The amount of air needed for combustion is 20 m³/h. See page 28.

The connector (accessory) for the combustion air has an external diameter of 80 mm. When duct routing further than 1 m the pipe diameter must be increased to 100 mm and a correspondingly larger wall vent must be selected.

In hot areas, the duct should be insulated with 30 mm mineral wool with a moisture inhibiting outer cover. It is also important to seal around the hole in the wall (or floor) of the lead-in using sealant.

A 1 m length of condensation insulated ducting for combustion air is available as an accessory.

## Installation distances

### Contura MyCube i8 / i8T Left & Right

The minimum distance in front of the stove opening to combustible parts of the building or interior decoration must be at least 1,4 m.



The dimension diagrams only show the minimum permitted installation distances for the stove. When connecting to a steel flue, also note the safety distance requirements of the flue. The safety distance between an uninsulated flue and a combustible part of the building should be at least 500 mm.

A = Height to chimney connection


B = Height from floor to c/c chimney connection rear

C = Height to air inlet


OD (Outer diameter)

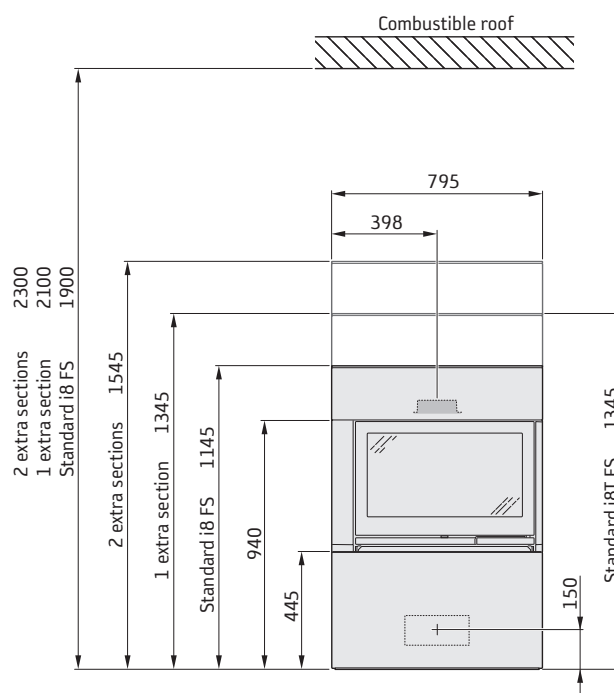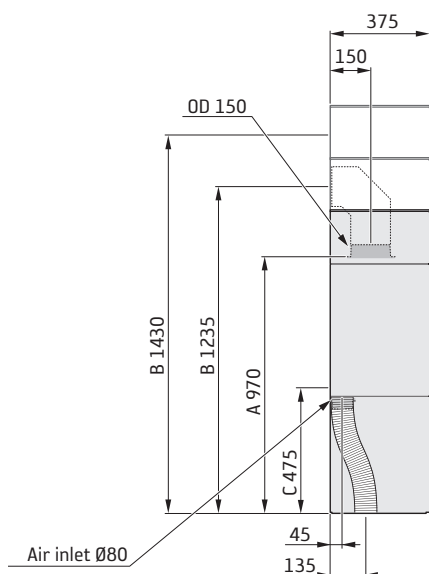

#### INSTALLATION AGAINST COMBUSTIBLE WALLS

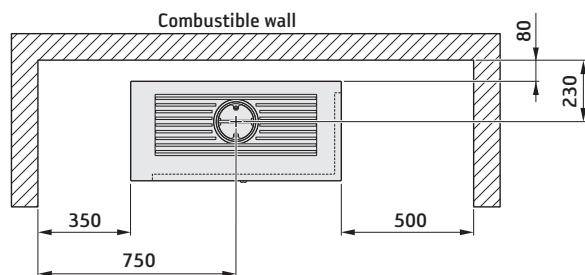

#### INSTALLATION AGAINST FIREWALLS

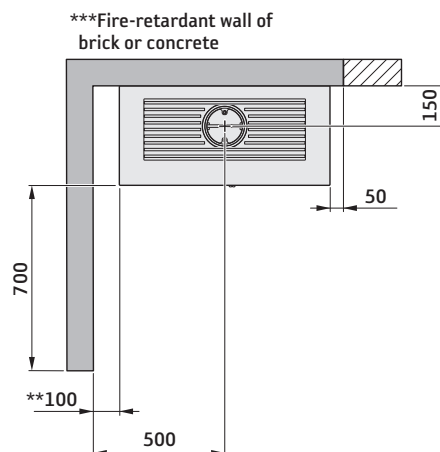

\*\* To prevent discolouration of painted non-flammable walls we recommend that the same side distance as to combustible walls is used.

\*\*\* Example of an approved firewall is 50 mm Calcium silicate, 120 mm solid brick or 100 mm aerated concrete.

**SE** Montering

Om kaminen behöver läggas ned för att förflyttas bör lösa delar demonteras. Följ instruktioner på sida 23-26 för demontering.

- 1 Eldstadsbeklädnad (Vermiculite)
- 2 Typskylt
- 3 Brasbegränsare
- 4 Roster
- 5 Eldstadsbotten
- 6 Asklåda

**DE** Montage

Wenn der Kaminofen hingelegt werden muss, sind zuvor lose Komponenten zu demontieren. Zur Demontage sind die Anweisungen auf den Seiten 23-26 zu befolgen.

- 1 Brennraumauskleidung (Vermiculit)
- 2 Typenschild
- 3 Stehrost
- 4 Rost
- 5 Feuerstättenboden
- 6 Aschekasten

**NO** Før montering

Hvis ovnen må legges ned for å flyttes, bør løse deler demonteres. Følg instruksjonene på side 23-26 for demontering.

- 1 Brennplater og hvelv (Vermikulitt)
- 2 Typeskilt
- 3 Kubbestopper
- 4 Rist
- 5 Ildstedsbunn
- 6 Askeskuff

**FR** Avant de procéder au montage

Les éléments non fixés devront être retirés si le poêle doit être couché pour être déplacé. Suivez les instructions des pages 23-26 pour le démontage.

- 1 Habillage du foyer (Vermiculite)
- 2 Plaque signalétique
- 3 Grille de retenue
- 4 Grille
- 5 Fond du foyer
- 6 Cendrier

**GB** Prior to installation


If the stove needs to be laid down in order to be moved, loose components should be removed. Follow the instructions on pages 23-26 for removal.

- 1 Fire bricks (Vermiculite)
- 2 Type plate
- 3 Fire bars
- 4 Grate
- 5 Hearth base
- 6 Ash pan

**DK** Før opstilling

Hvis brændeovnen skal lægges ned for at blive flyttet, bør løsdele afmonteres. Følg instruktionerne på side 23-26 for afmontering.

- 1 Ovnbeklædning (Vermiculite)
- 2 Typeskilt
- 3 Brændeholder
- 4 Rist
- 5 Ovnbund
- 6 Askeskuffe

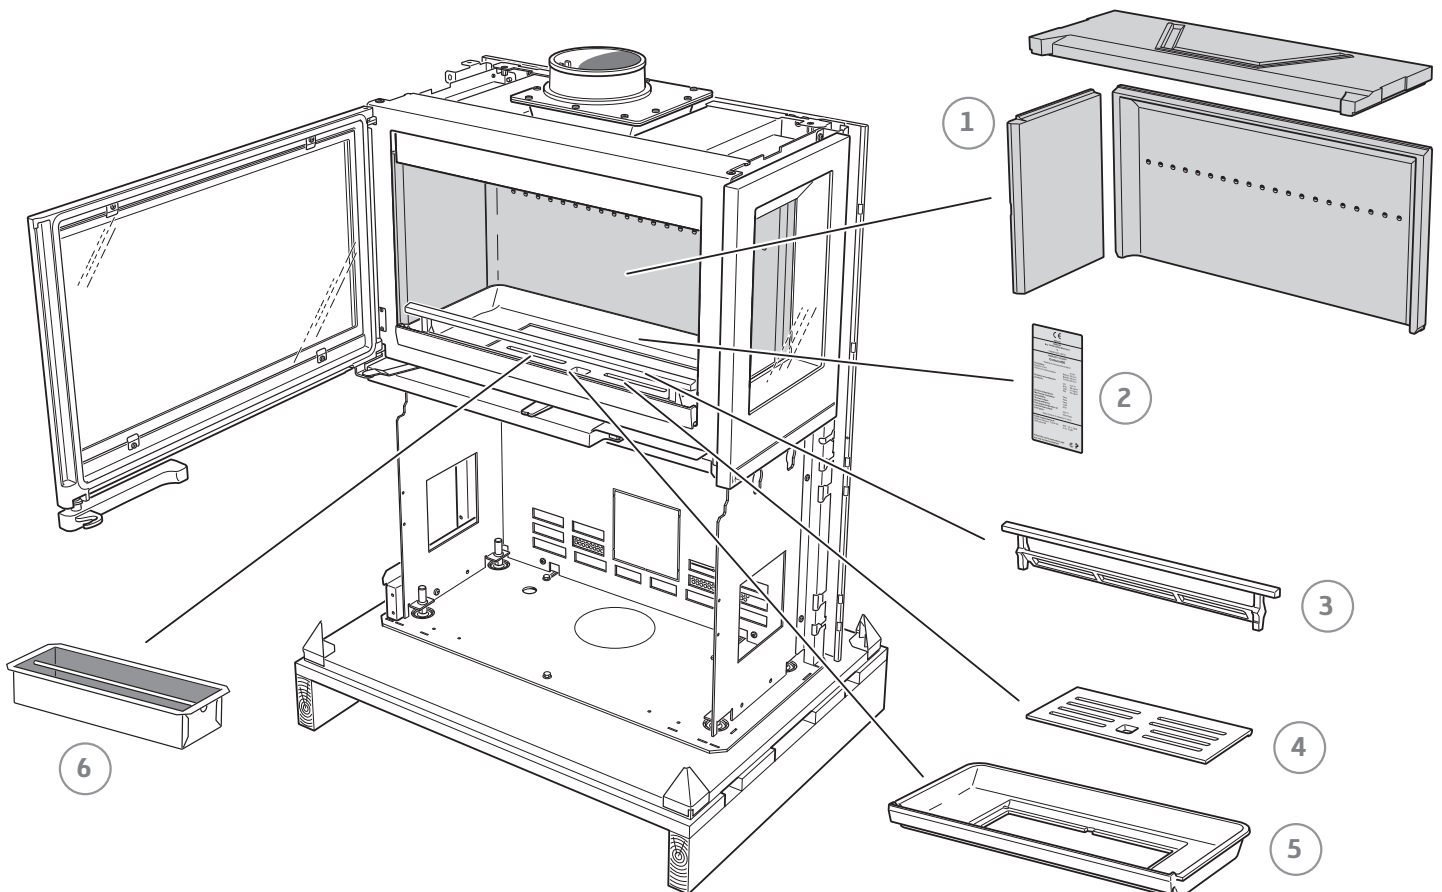

## FI Ennen asennusta

Jos takka pitää siirtää kyljellään, irto-osat pitää irrottaa. Noudata sivujen 23-26 purkamisohjeita.

- 1 Tulipesän verhous (vermikuliitti)
- 2 Tyypikilpi
- 3 Suojareunus
- 4 Arina
- 5 Palotilan pohja
- 6 Tuhkalaatikko

## IT Prima del montaggio


Se è necessario inclinare la stufa per spostarla, rimuovere prima i componenti liberi. Per lo smontaggio, seguire le istruzioni riportate alle pagine 23-26.

- 1 Rivestimento interno del focolare (vermiculite)
- 2 Targhetta identificativa
- 3 Griglia ferma-legna
- 4 Griglia
- 5 Fondo del focolare
- 6 Cassetto della cenere

## NL Voorafgaand aan montage

Als de kachel liggend moet worden verplaatst, moeten losse onderdelen worden gedemonteerd. Volg de instructies op pagina 23-26 voor demontage.

- 1 Haardbekleding (vermiculiet)
- 2 Typeplaatje
- 3 Houtvanger
- 4 Rooster
- 5 Bodem verbrandingskamer
- 6 Aslade

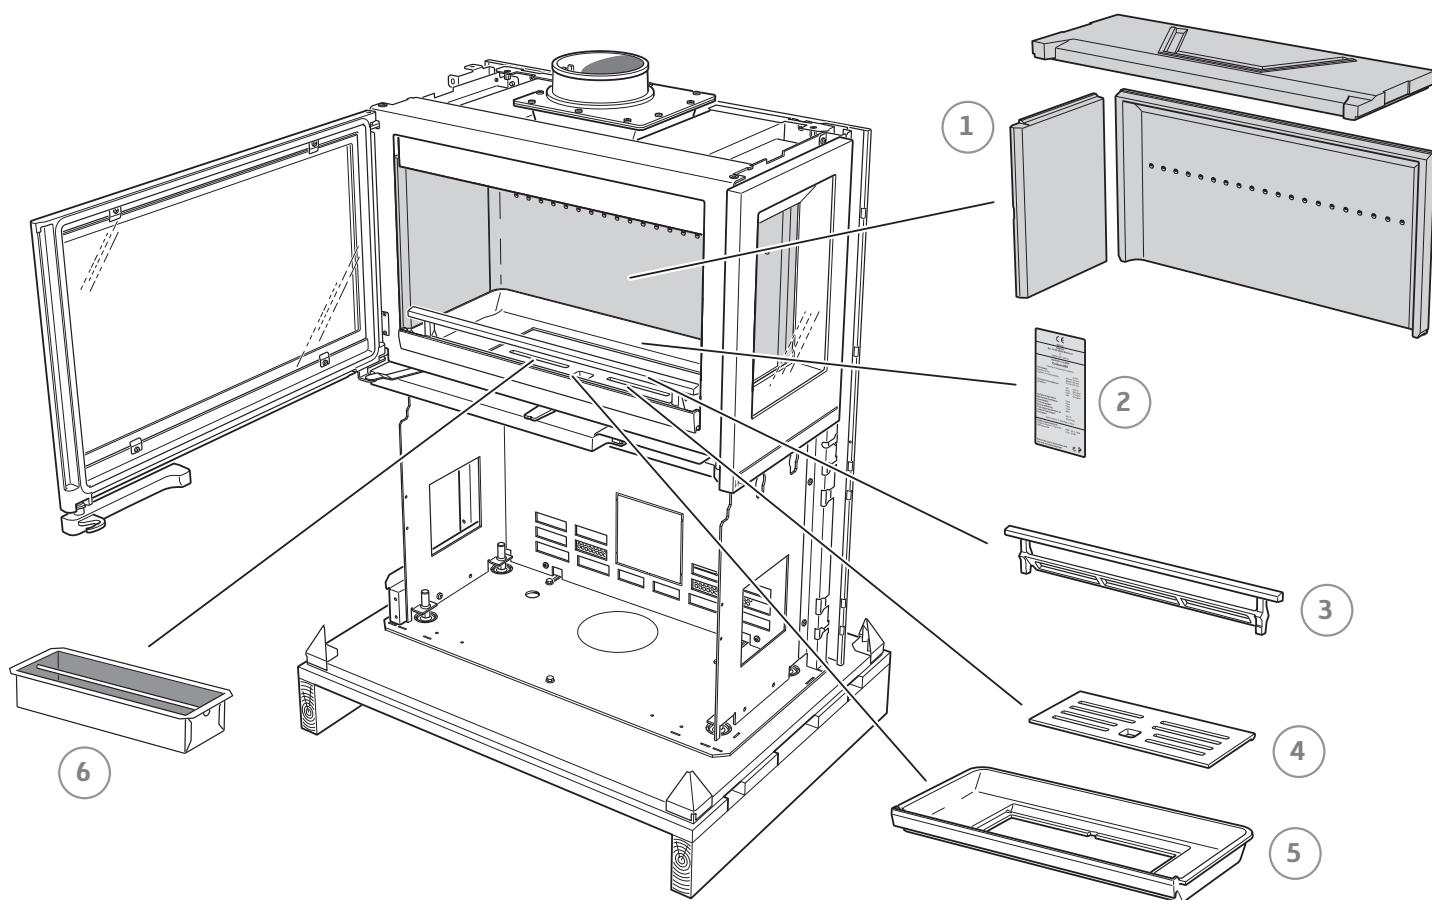



**SE** Demontera eldstadsbeklädnaden

**DE** Demontage der Brennraumauskleidung

**NO** Slik demonterer du ildstedsbekledningen

**FR** Démonter l'habillage du poêle

**GB** How to remove the hearth surround

**DK** Afmonter pejsebeklædningen

**FI** Tulipesän verhoilun irrottaminen

**IT** Smontare il rivestimento interno del focolare

**NL** Demonteer de haardbekleding



**SE** Hanteras varsamt!

**DE** Vorsichtig vorgehen!

**NO** Behandles forsiktig!

**FR** À manipuler avec précaution!



**GB** Handle with care!




**DK** Håndter med forsigtighed!




**FI** Käsittele varovasti!




**IT** Maneggiare con cura!

**NL** Voorzichtig hanteren!

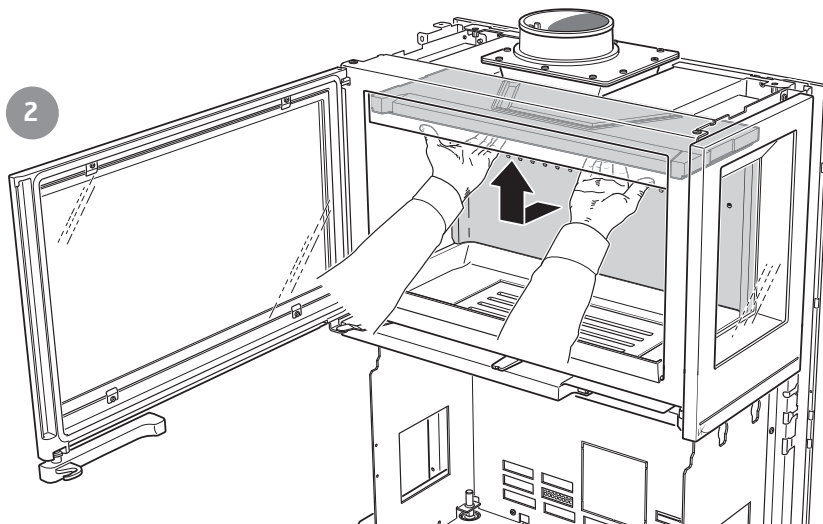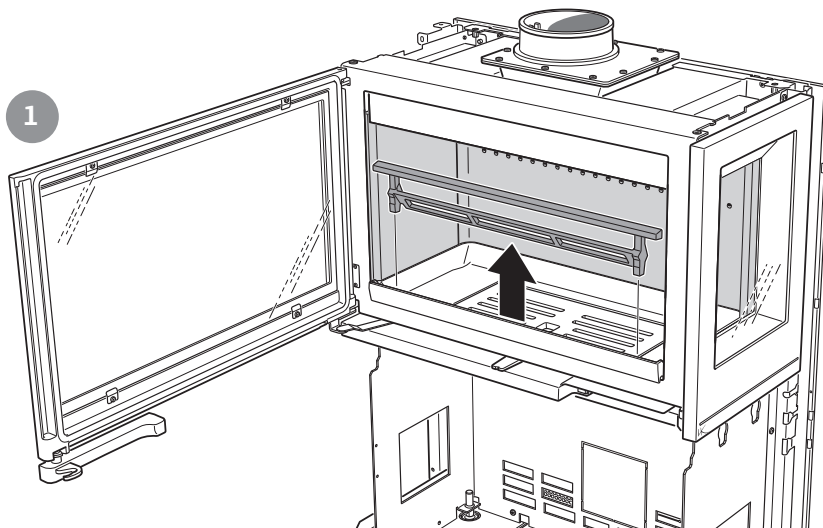

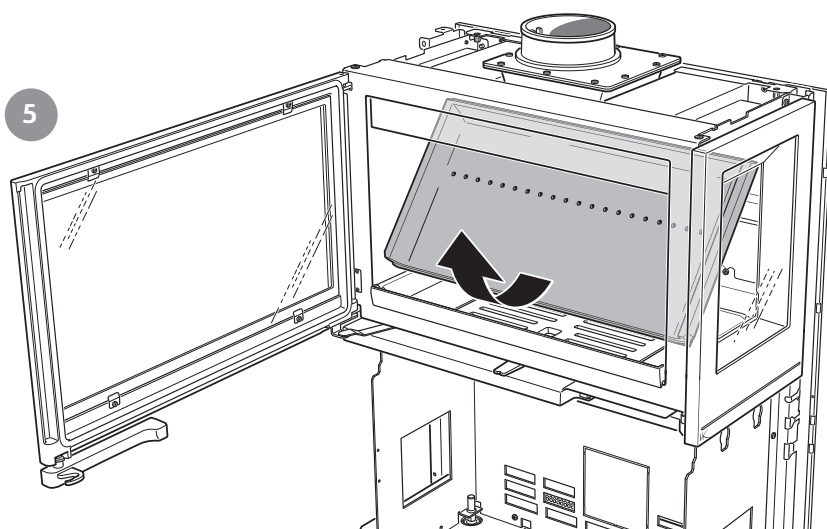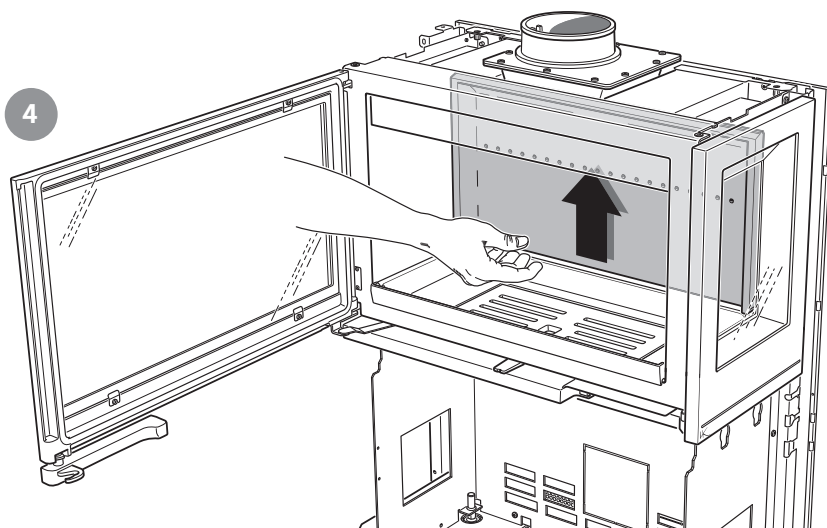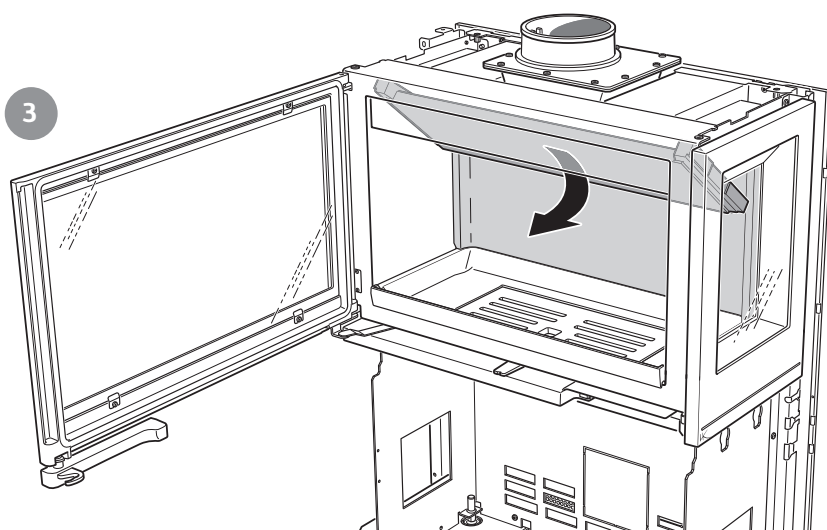

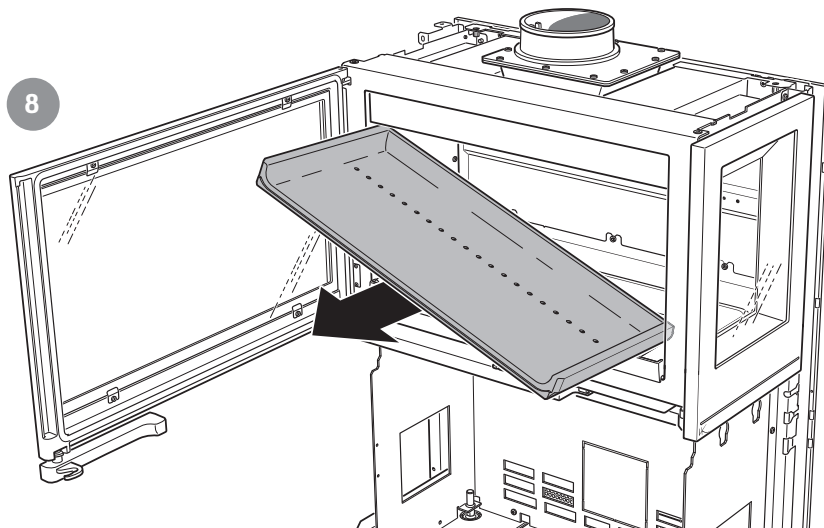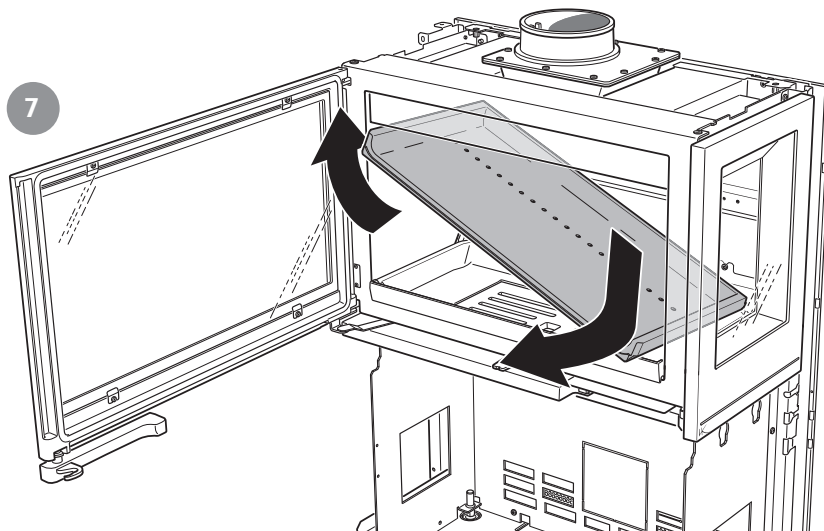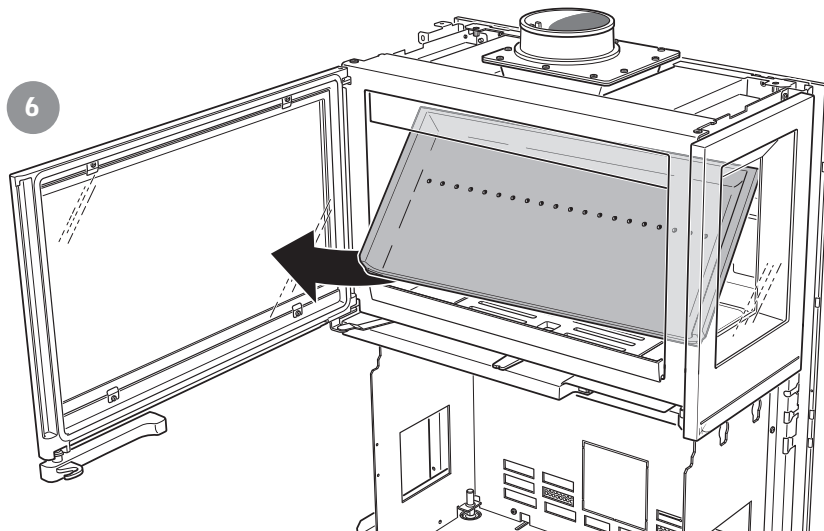

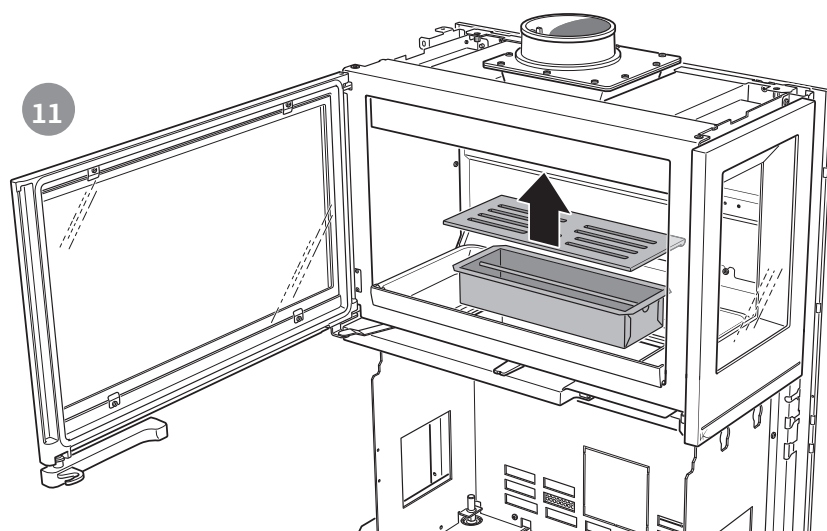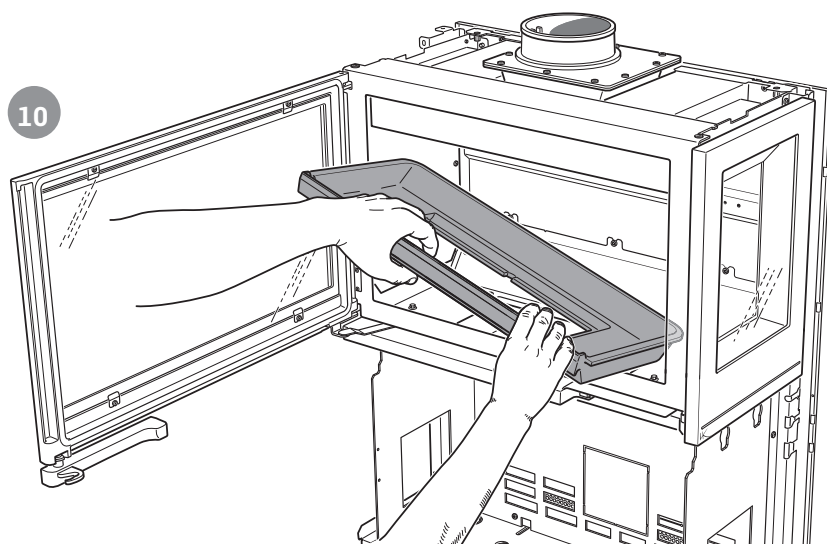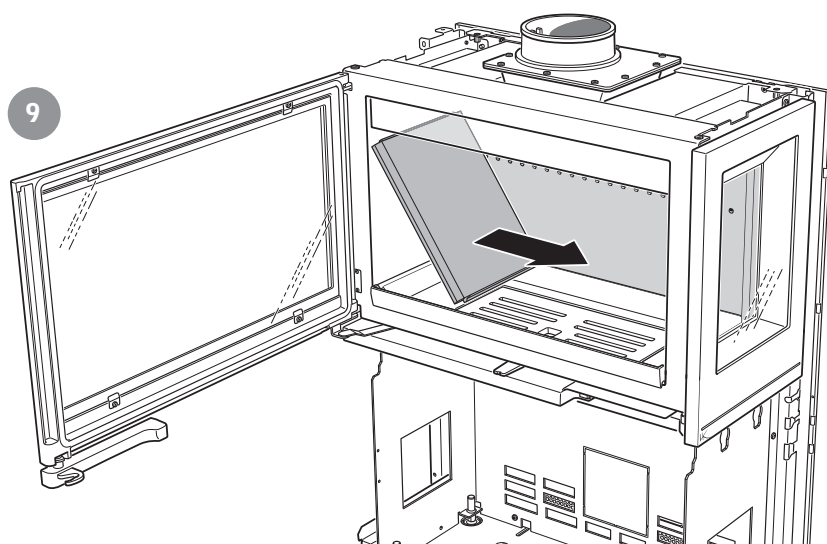


# For installation in the UK and in smoke control areas

## Mandatory for smoke control areas

Contura MyCube i8 FS (Left / Right) 7,6 kW woodburning stove has been recommended as suitable for use in smoke control areas. This when burning wood logs and operated in accordance with these instructions and when fitted with a permanent stop to prevent closure of the air control unit beyond 31% open position.

The permanent stop must be installed if the appliance is to be used in a smoke control area, this stop must not be removed in smoke control areas, otherwise an offence will be committed if the appliance is used without the permanent stop in place.

## Damper Blocker for Contura MyCube i8 FS Left / Right

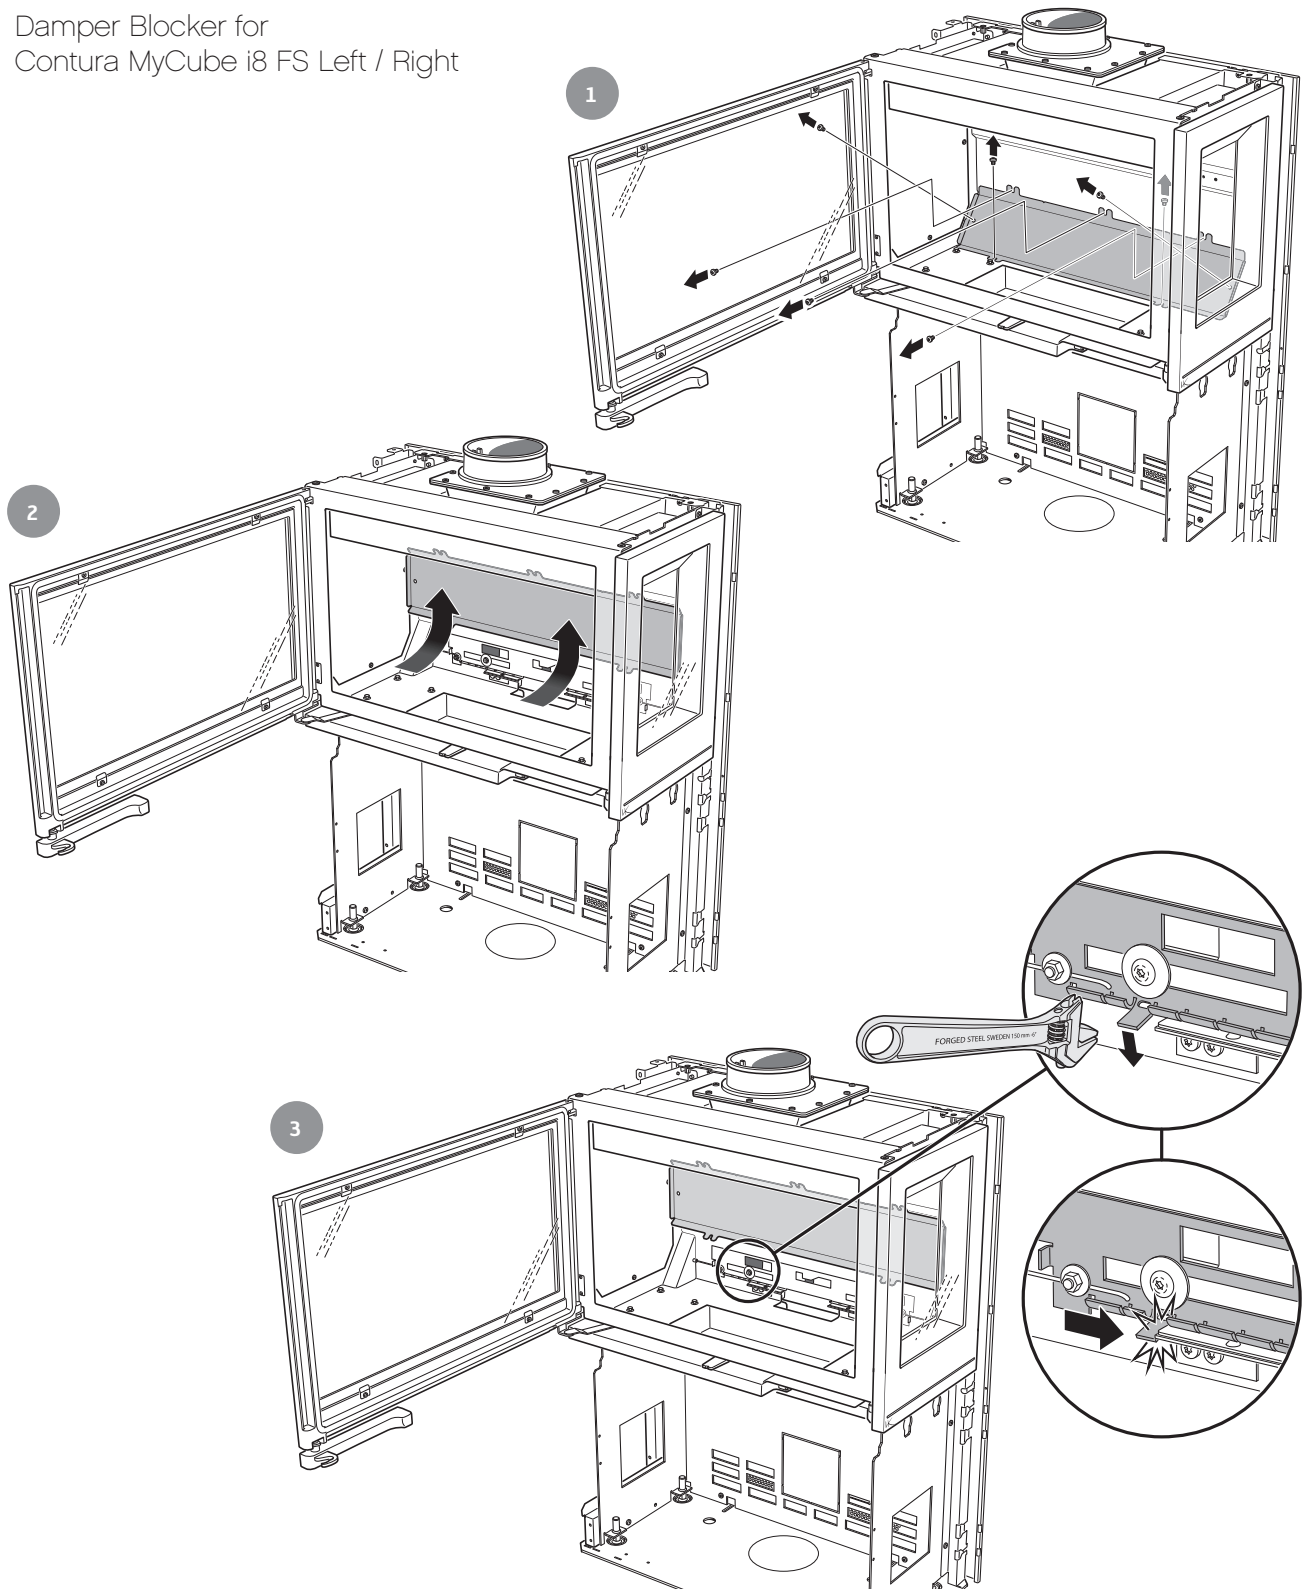



SE Tilluft (Tillbehör)

DE Frischluftanschluss (Zubehör)

NO Tilkobling uteluft (Tilbehør)

FR Raccordement d'air extérieur (Accessoires)





GB Outside air connection (Accessories)

DK Tilslutning af frisk luft (Tilbehør)

FI Tuloilma (Palamisilmaliitäntäsarja on lisävaruste)





IT Presa d'aria (Accessorio)

NL Toevoerlucht (Accessoire)

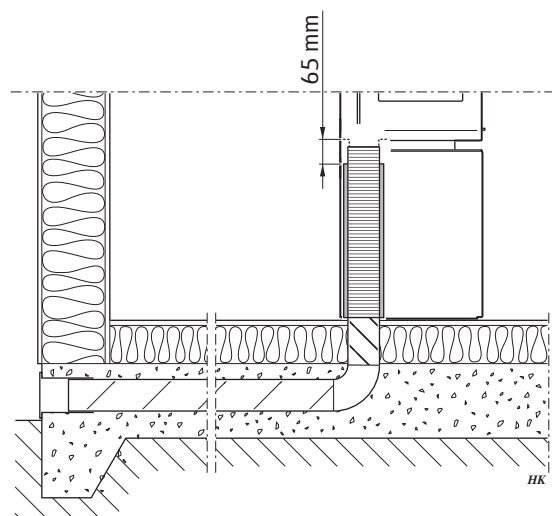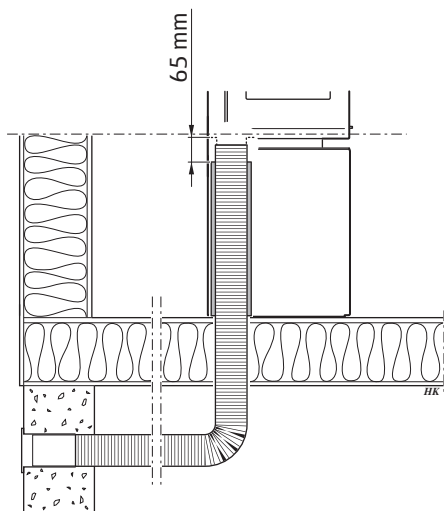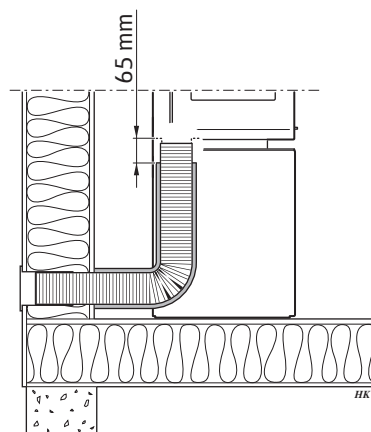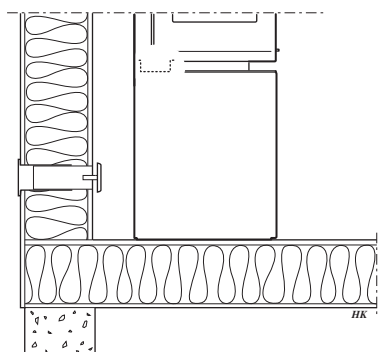



- SE Bakåtanslutning till murad skorsten
- DE Rückseitiger Anschluss an einen gemauerten Schornstein
- NO Bakmontering til murt skorstein
- FR Raccordement par l'arrière à une cheminée de maçonnerie
- GB Rear connection to a masonry chimney
- DK Tilslutning bagud til muret skorsten
- FI Liitäntä taaksepäin muurattuun savupiippuun
- IT Collegamento alla canna fumaria in muratura dal retro della stufa
- NL Achterwaartse aansluiting op een gemetselde schoorsteen

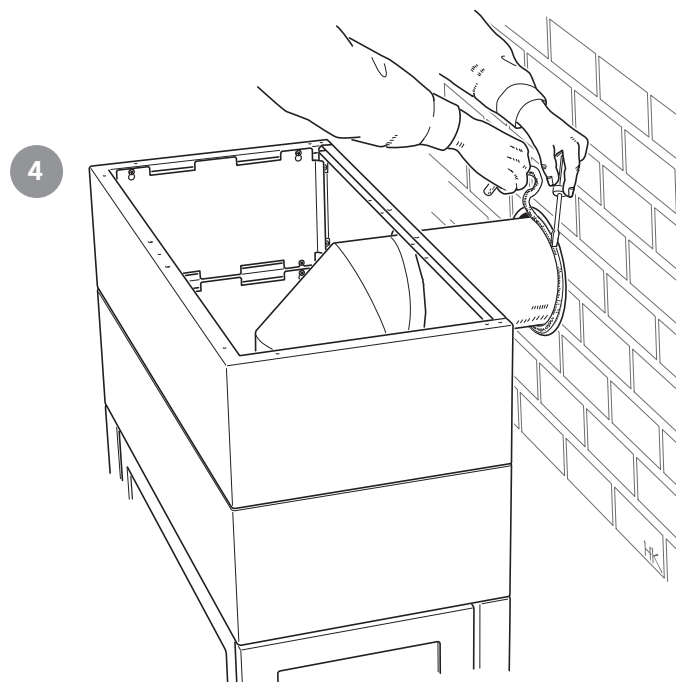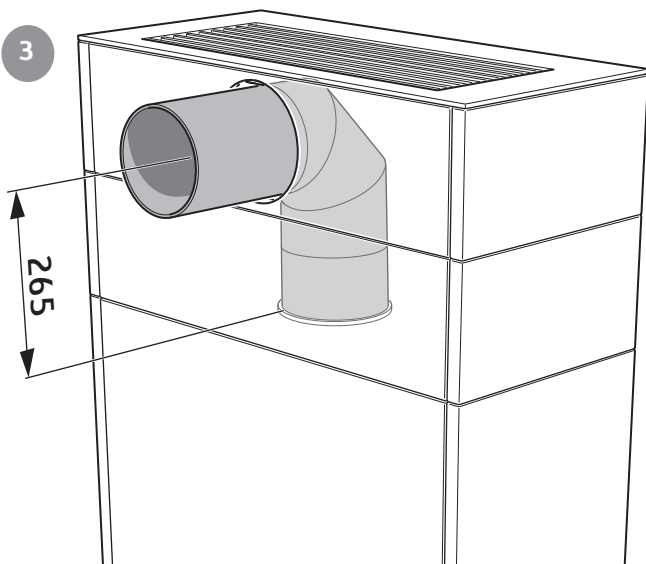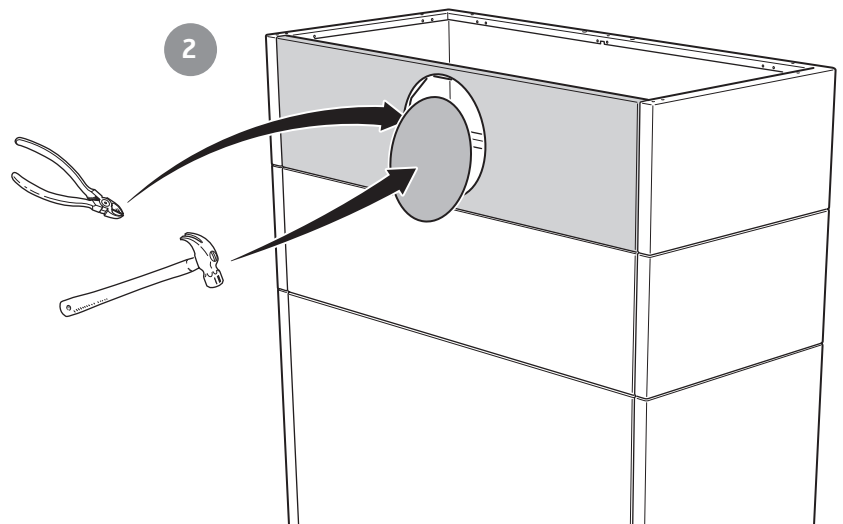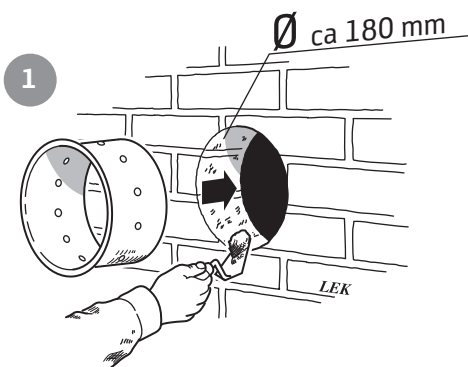



## Powerstone

SE (Tillbehör)

DK (Tilbehør)

DE (Zubehör)

FI (Lisävarusteet)



NO (Tilbehør)




IT (Accessori)

FR (Accessoires)


NL (Accessoires)

GB (Accessories)

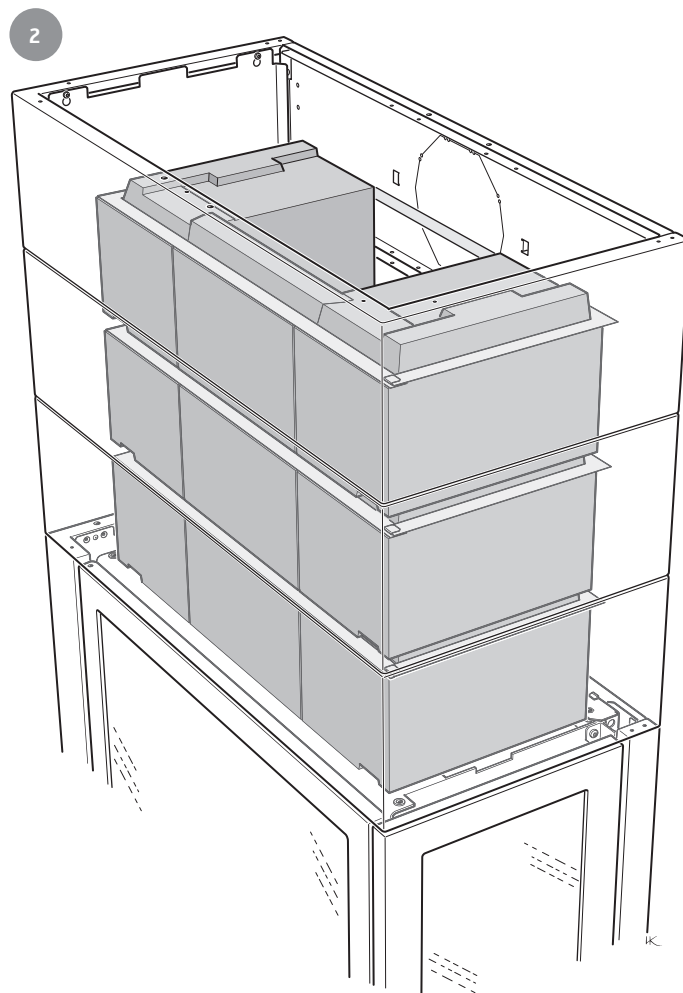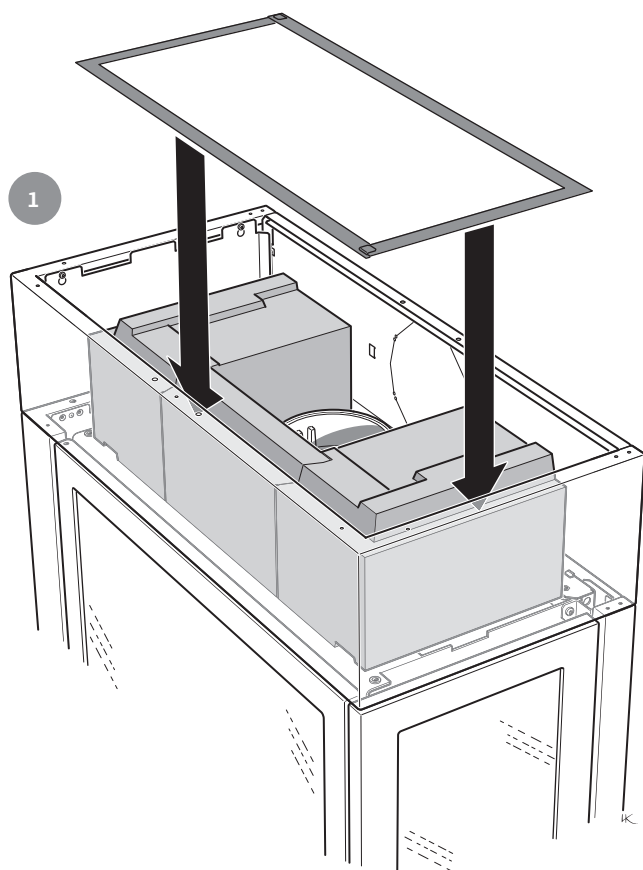

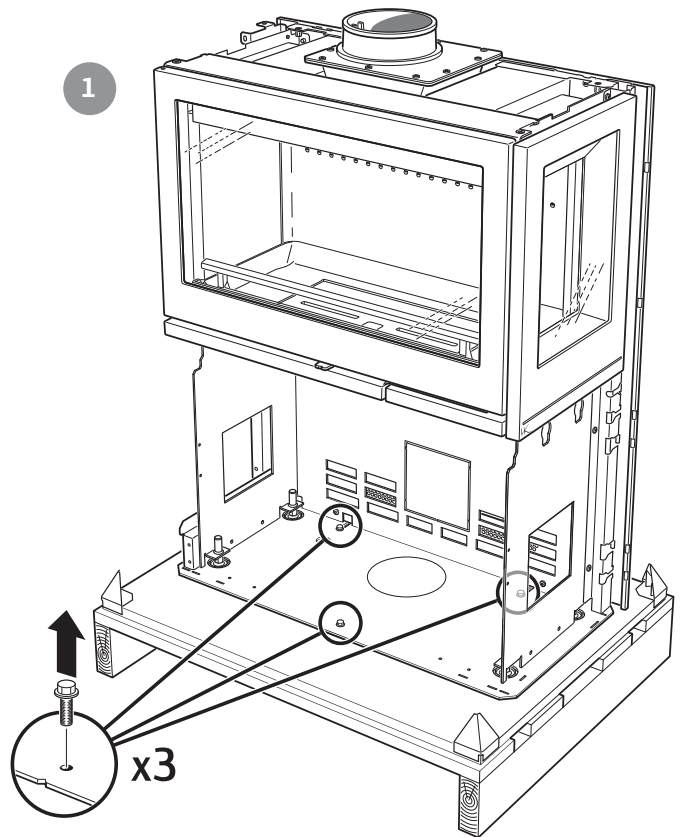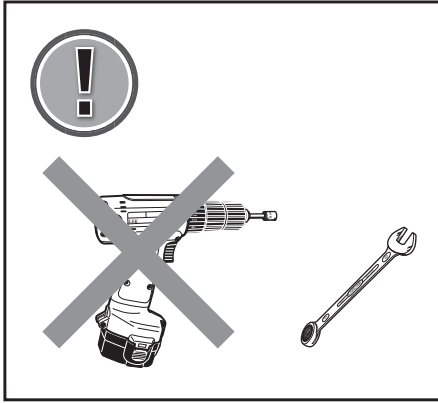


T x 25

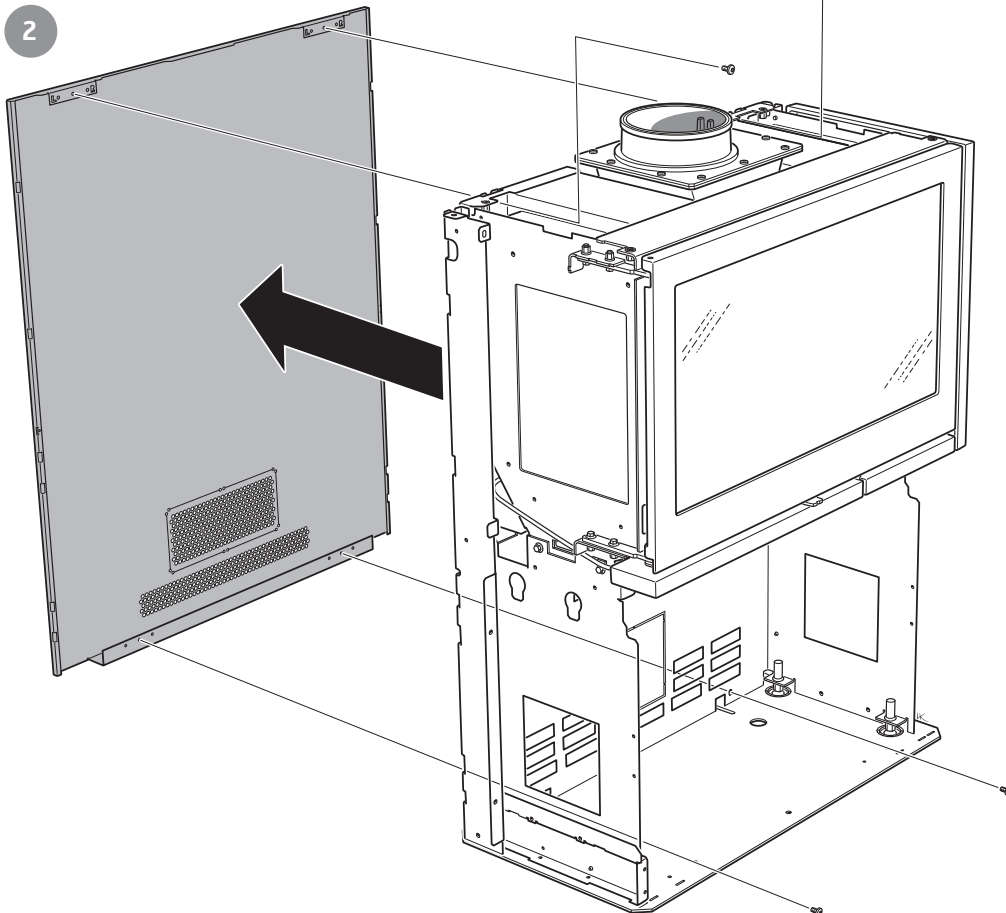



3

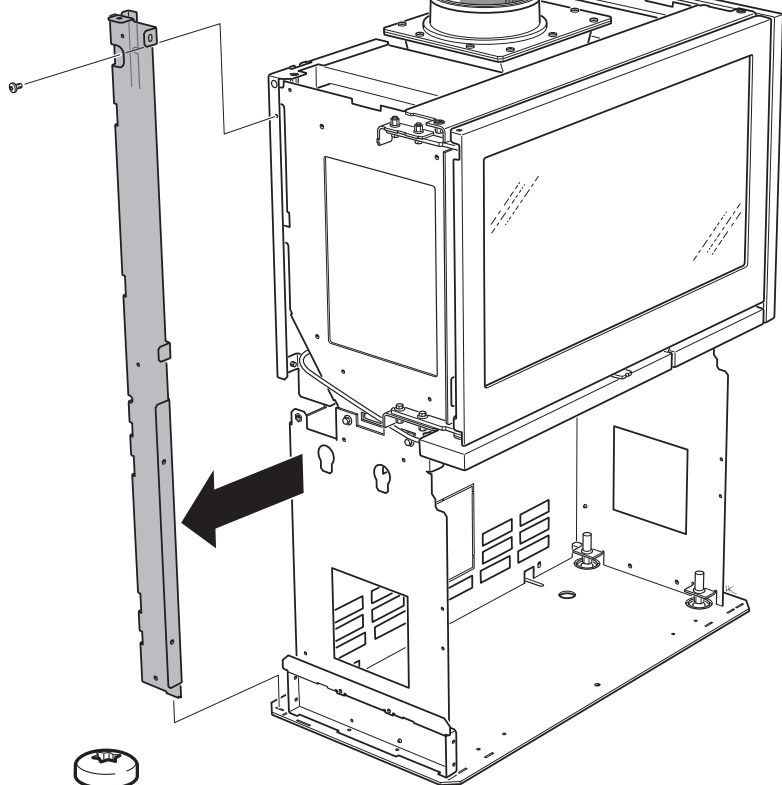


1x  
M5 x 9

T x 25



4

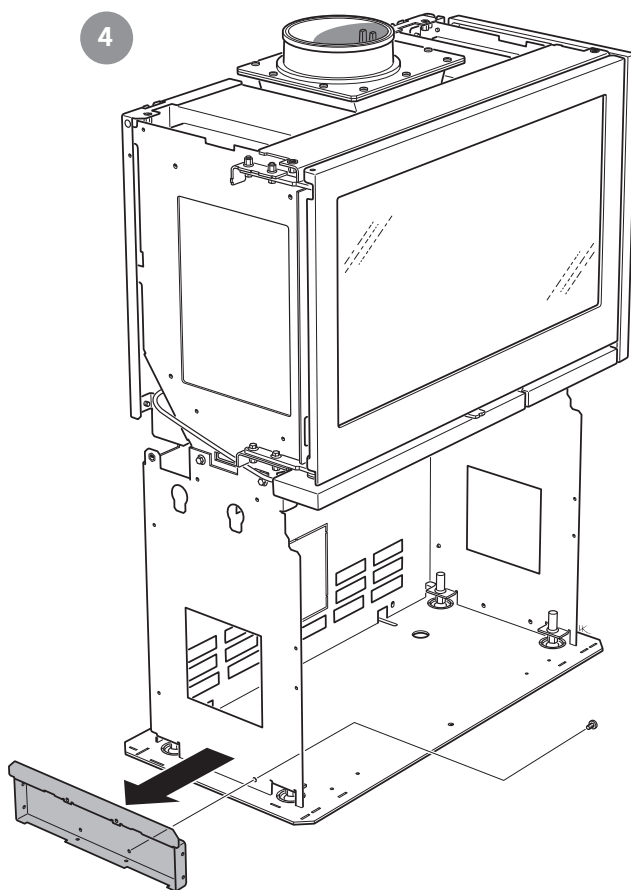


5




3x  
M5 x 9

T x 25


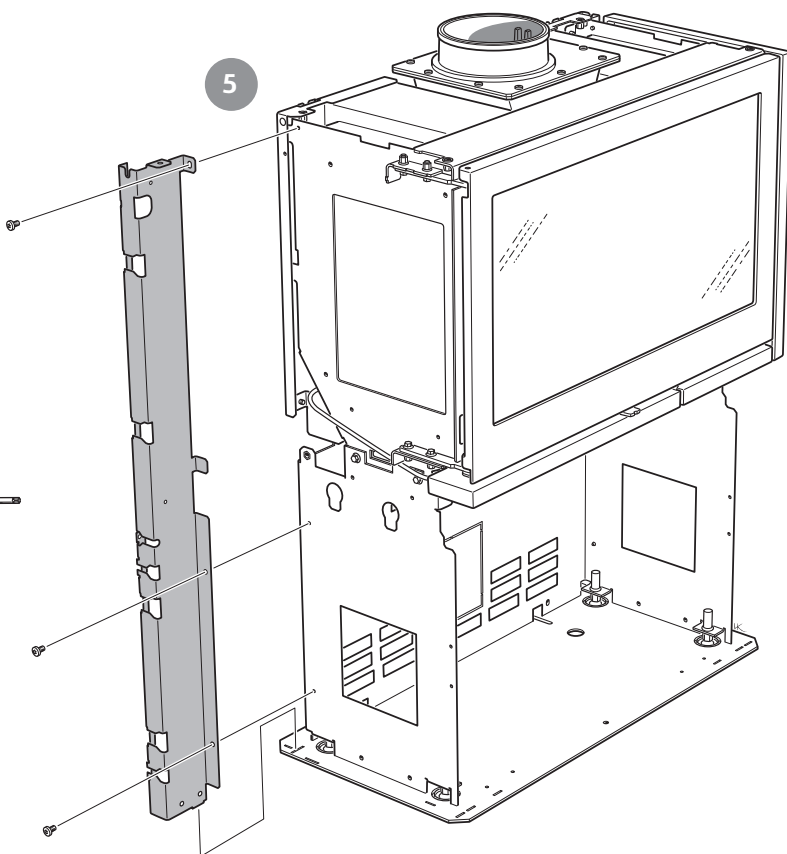




6

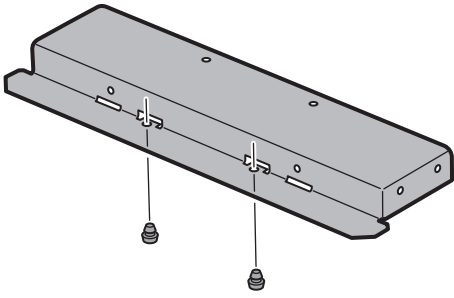



7

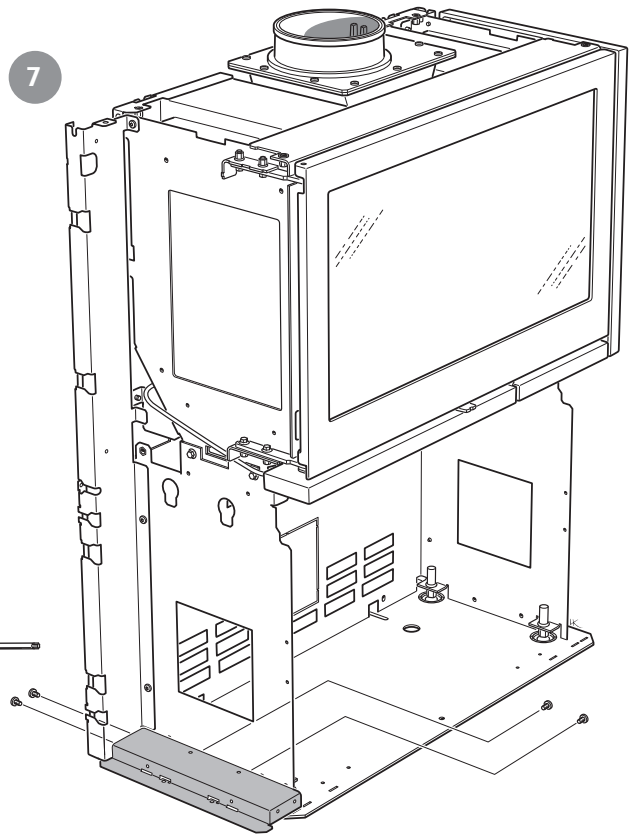


T x 25



8


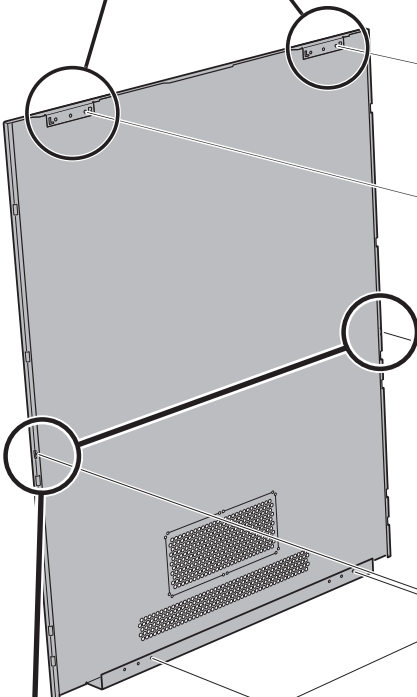
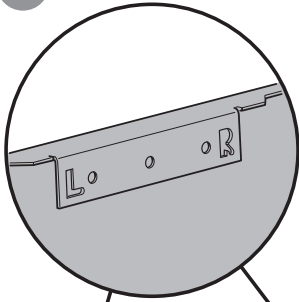


T x 20





T x 25



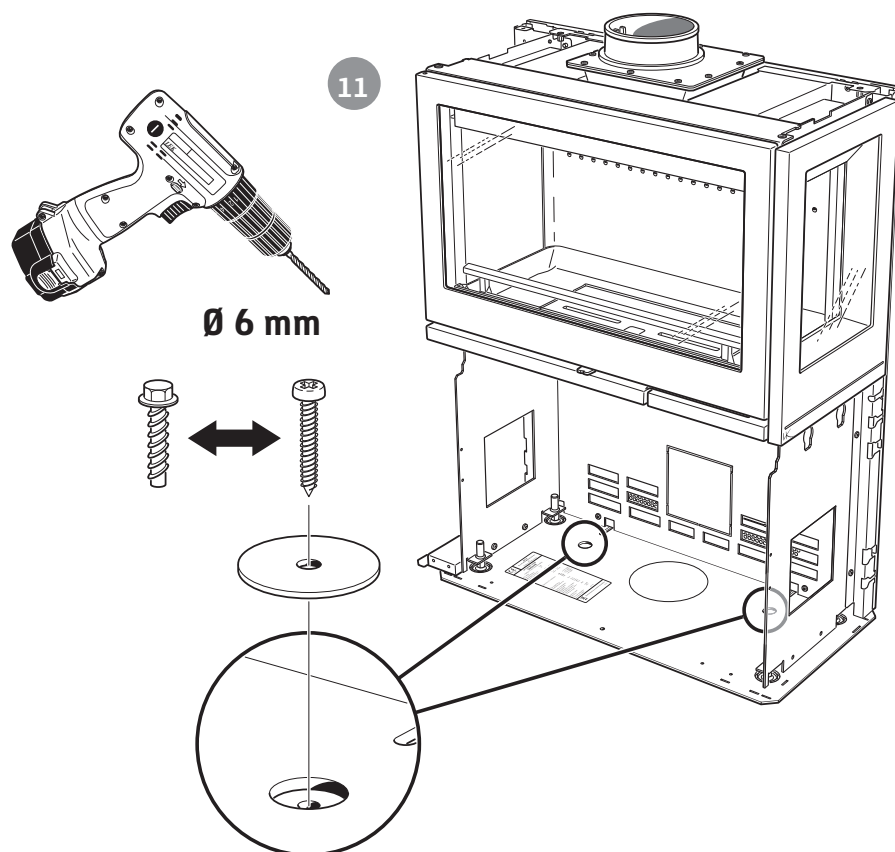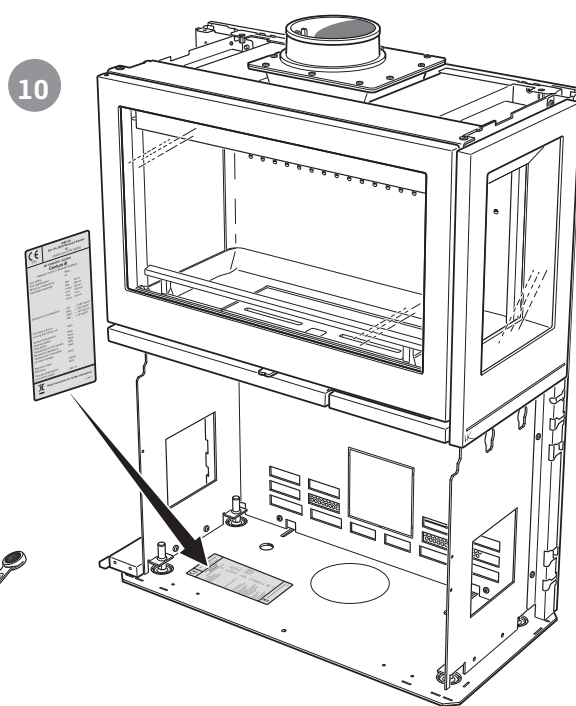
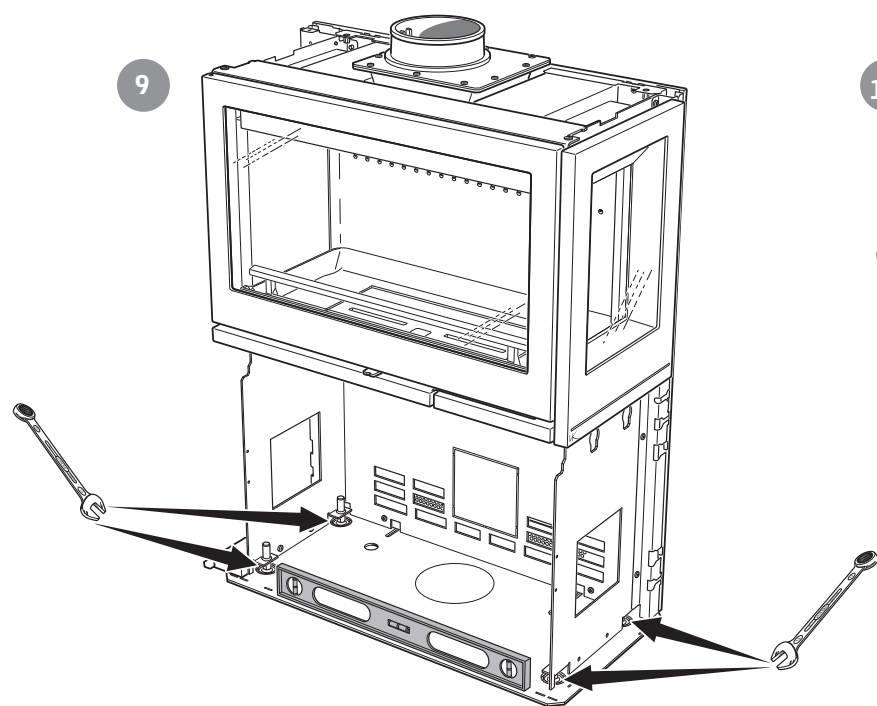









11A

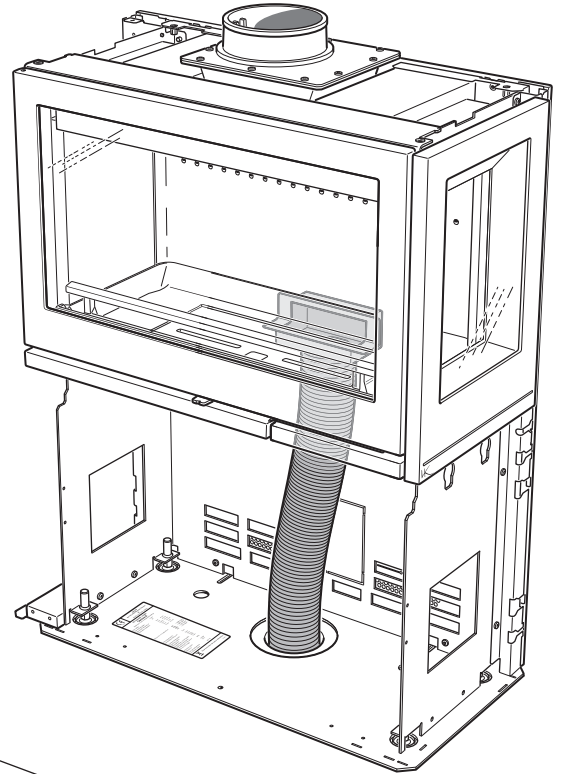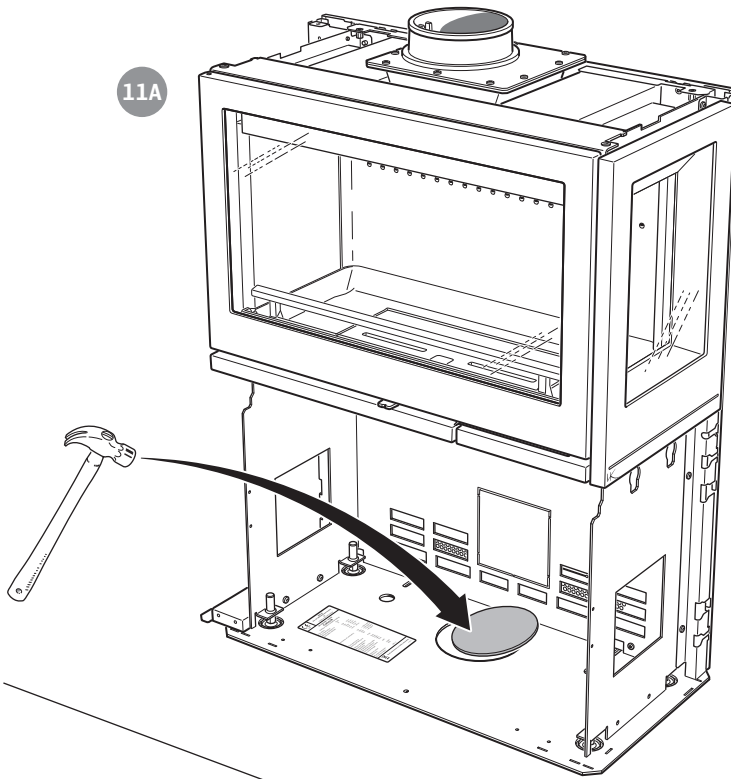


12B

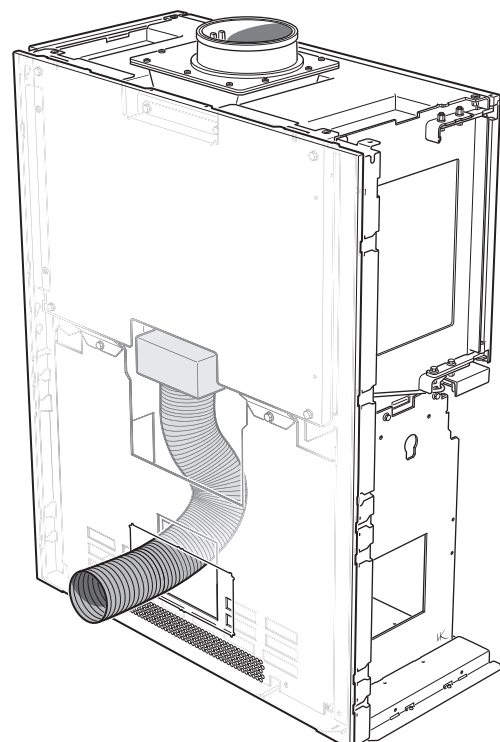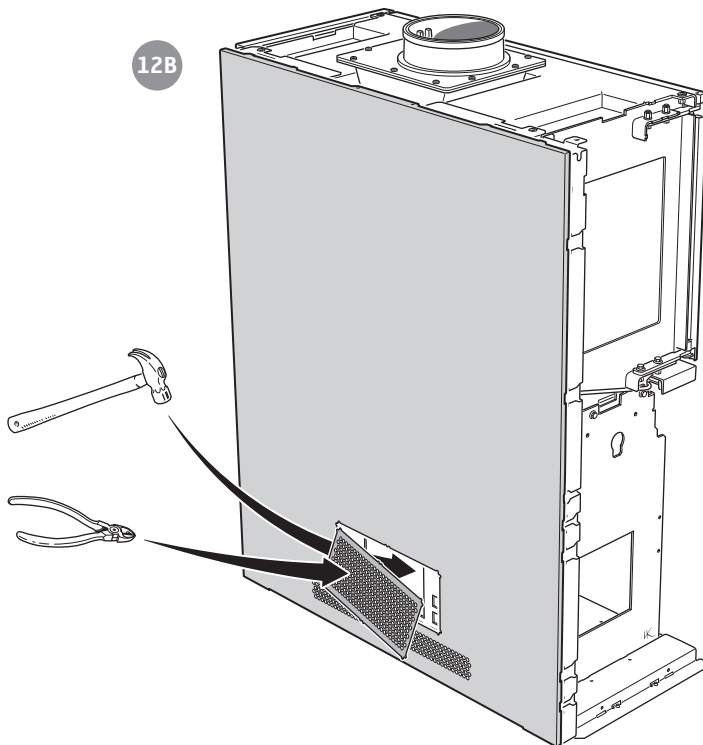

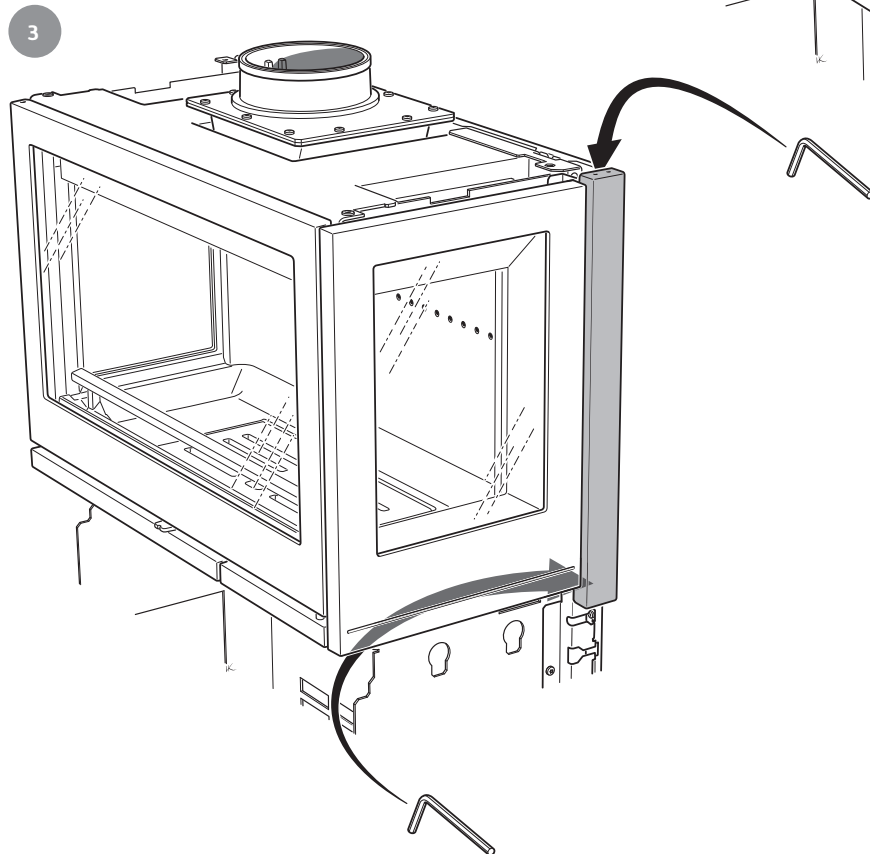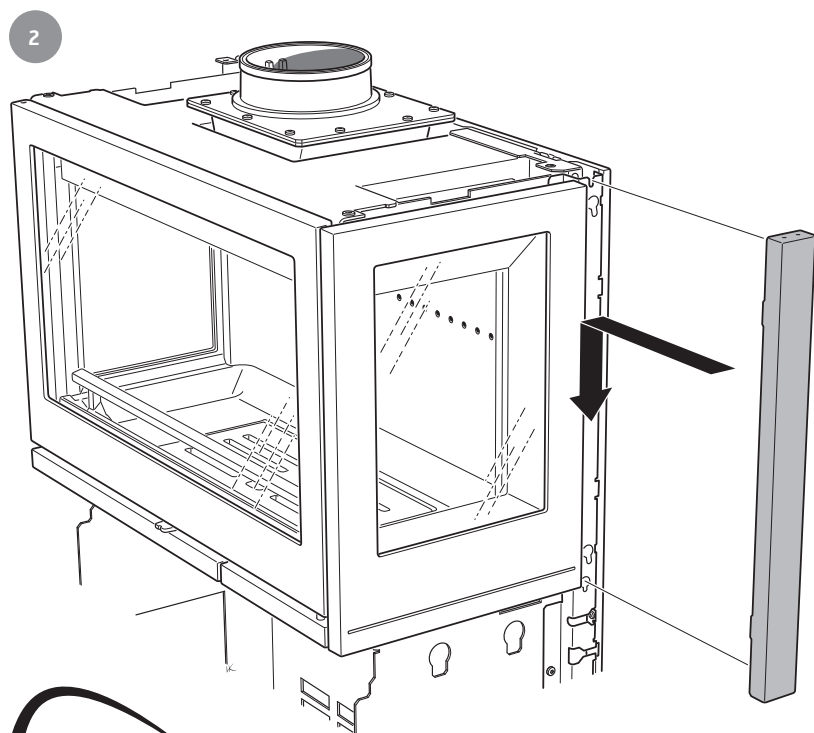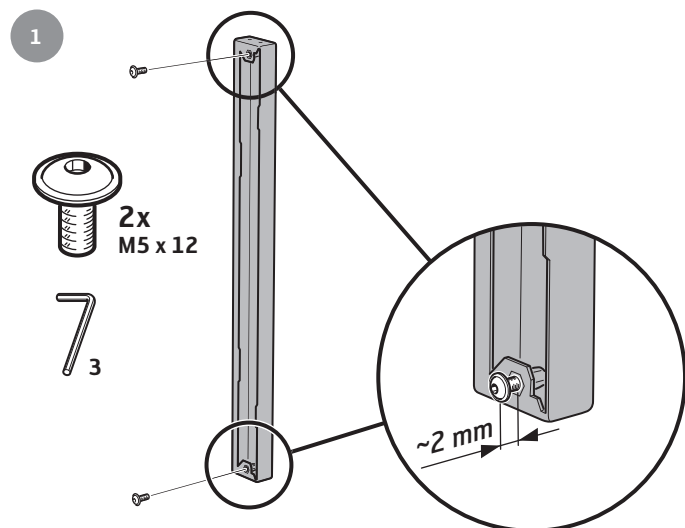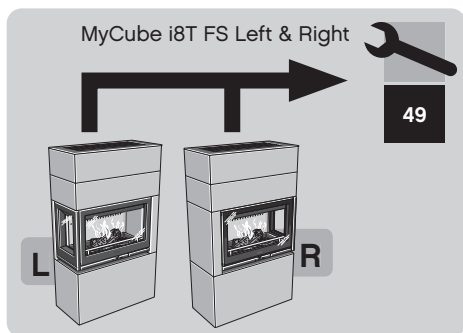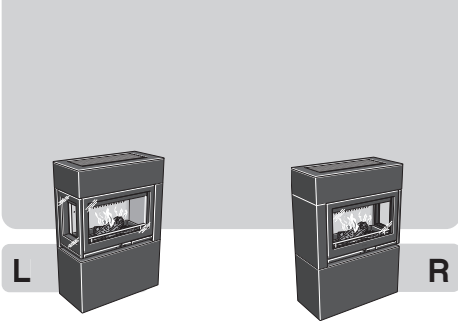







4



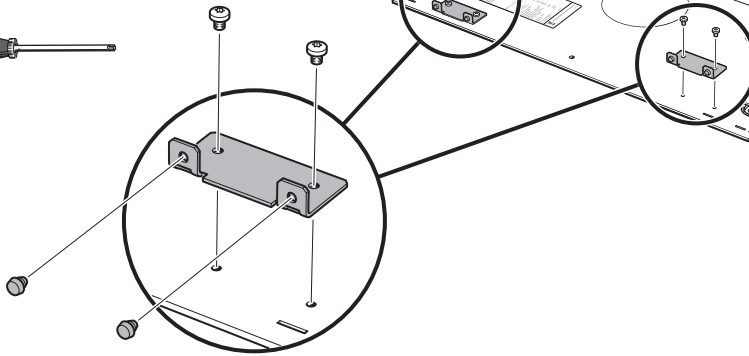
 4x  
M5 x 6 T x 25


5

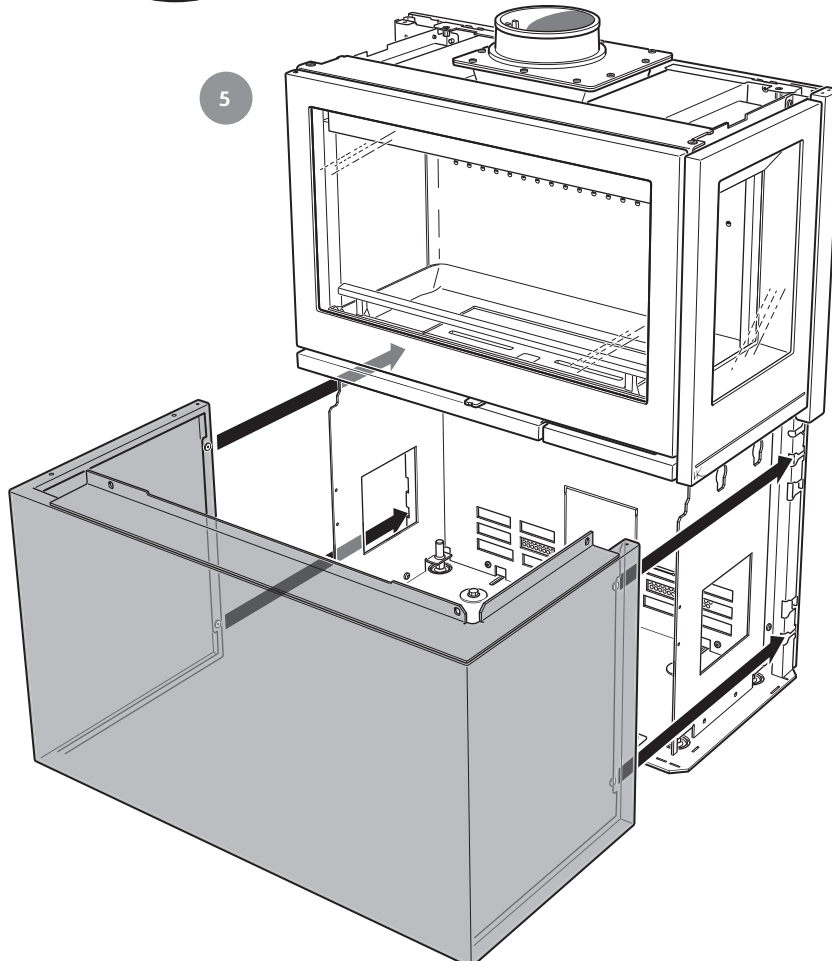


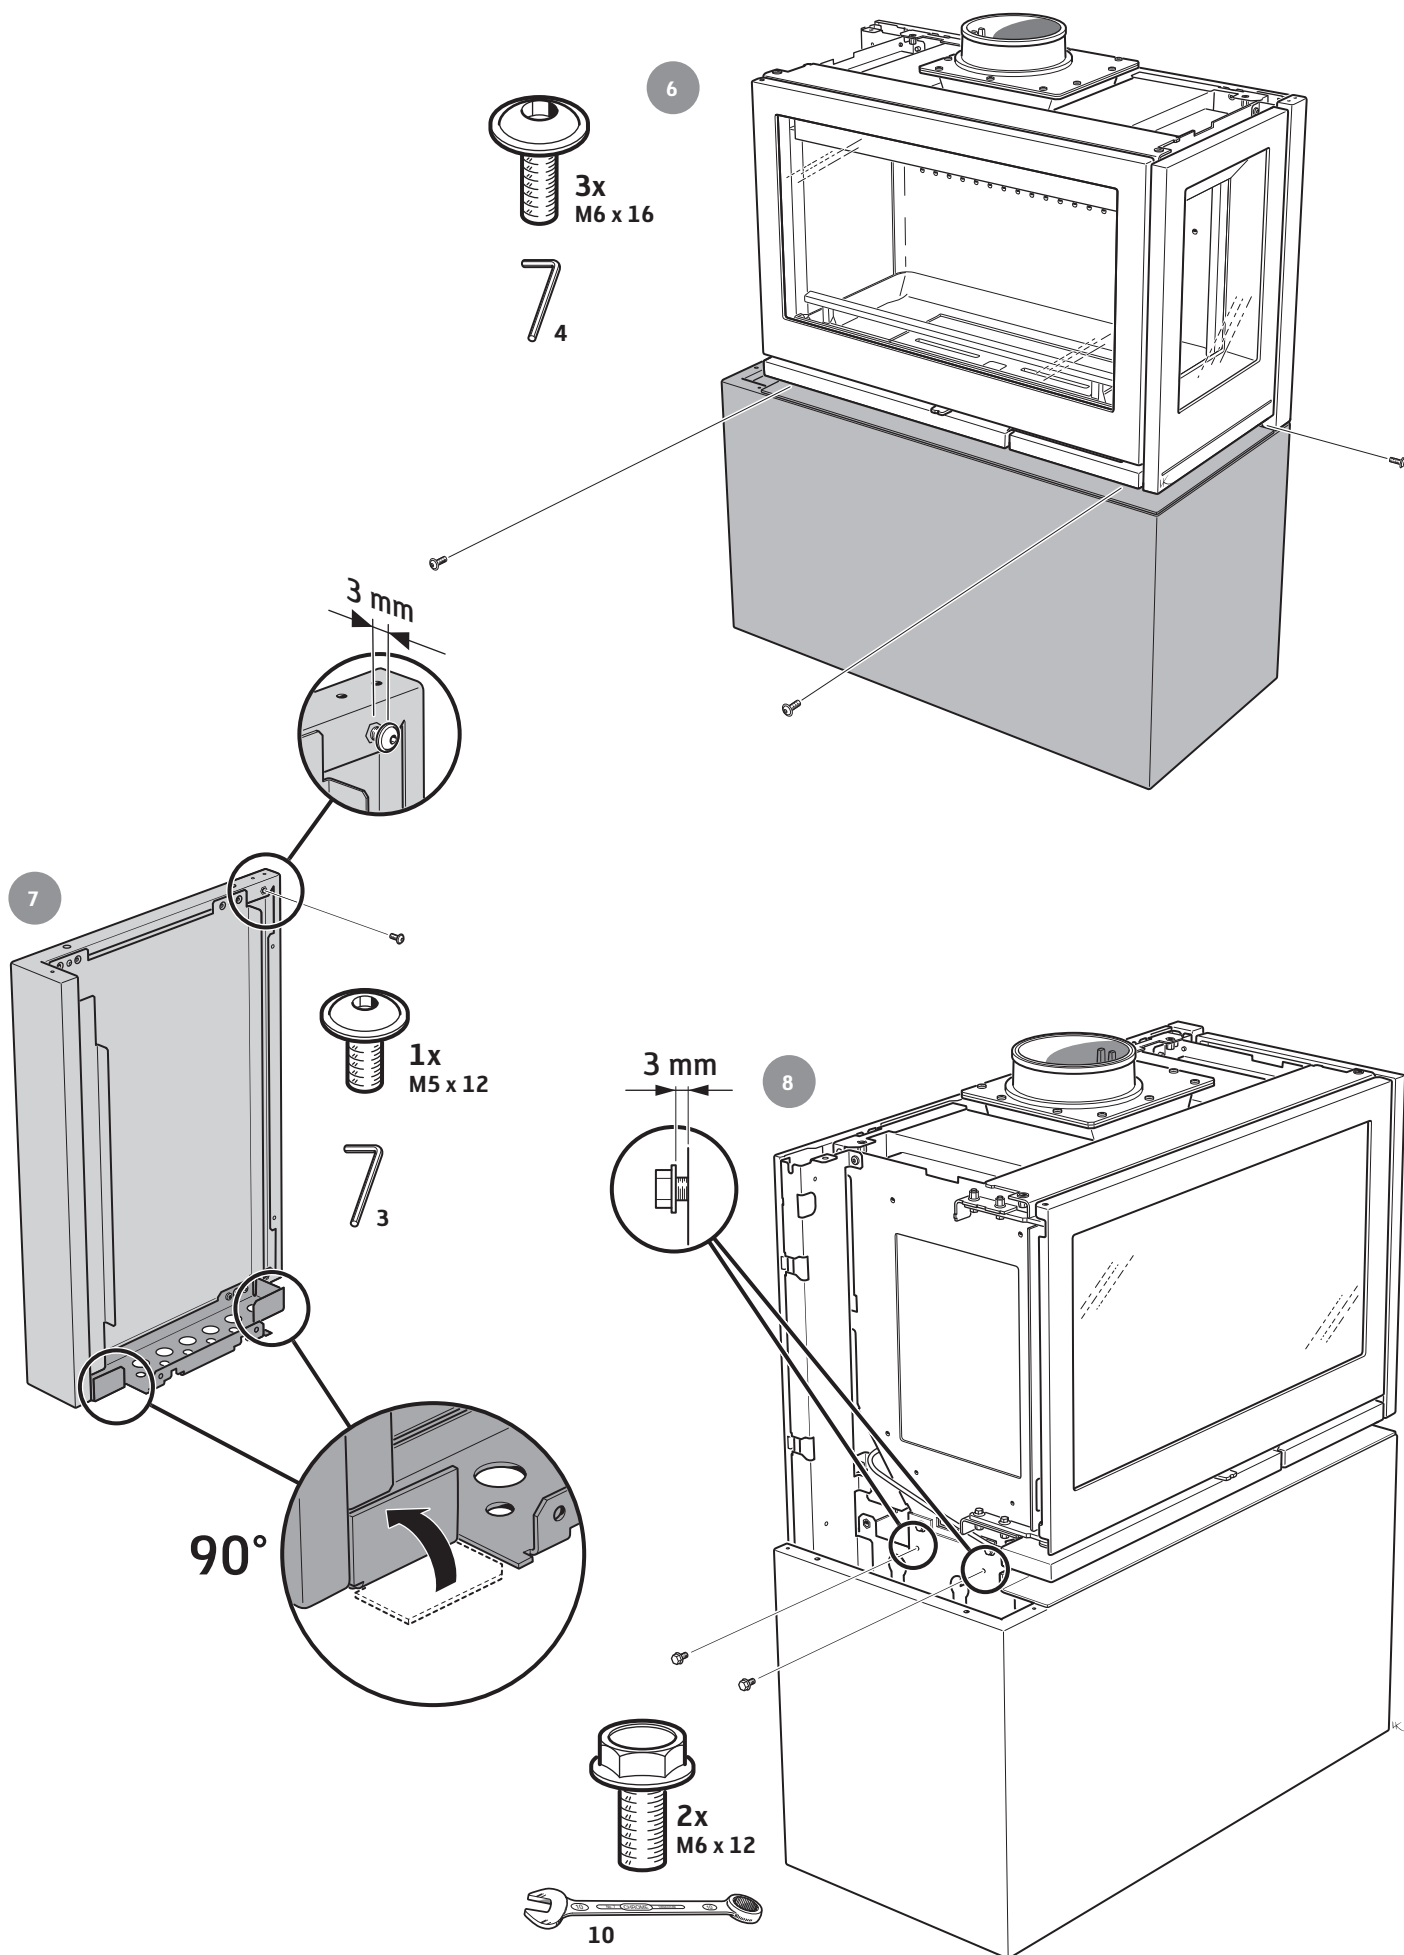



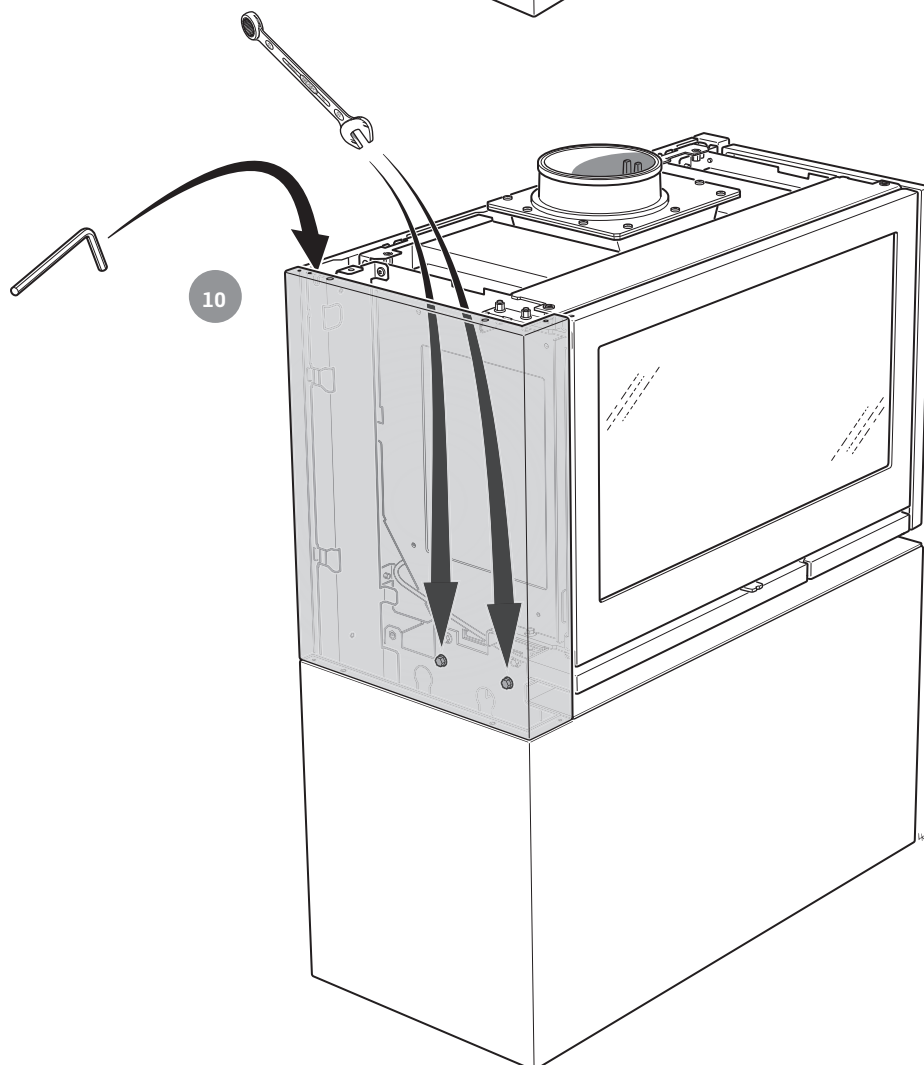
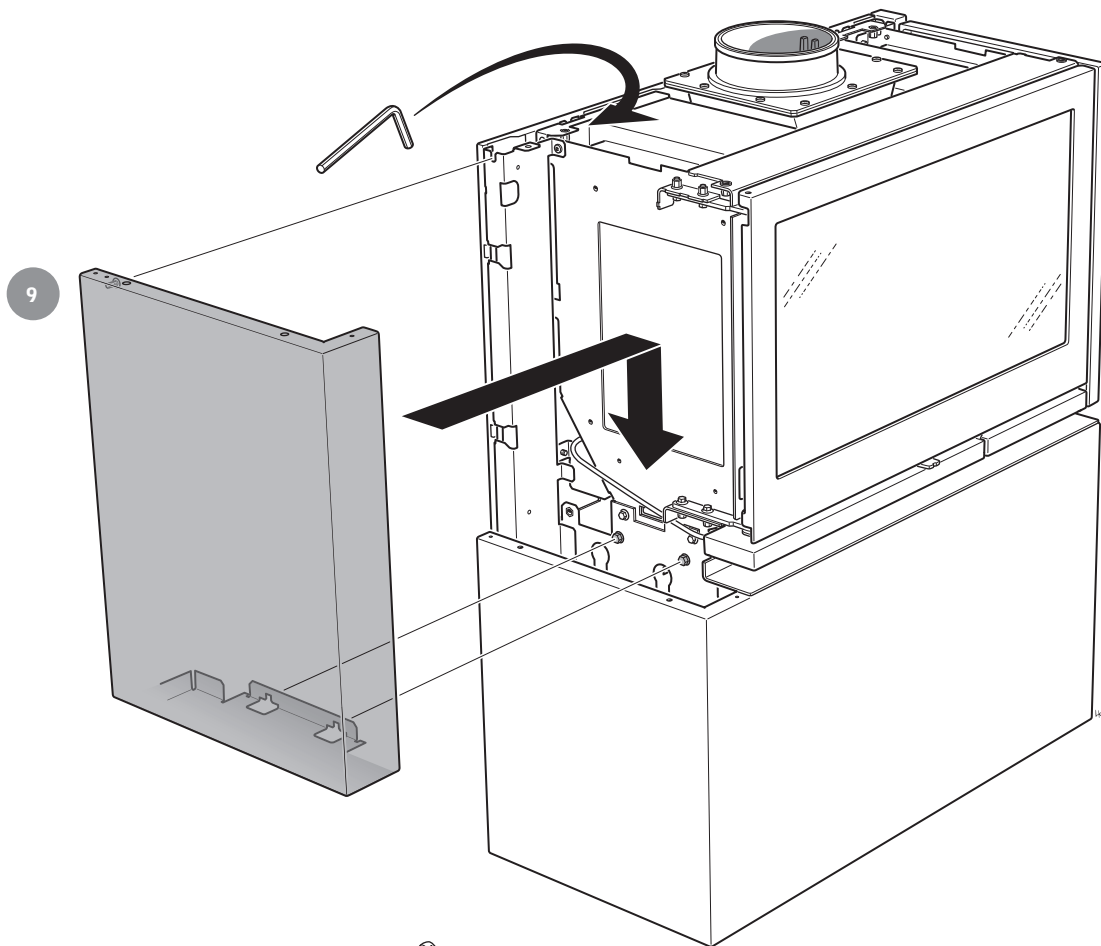


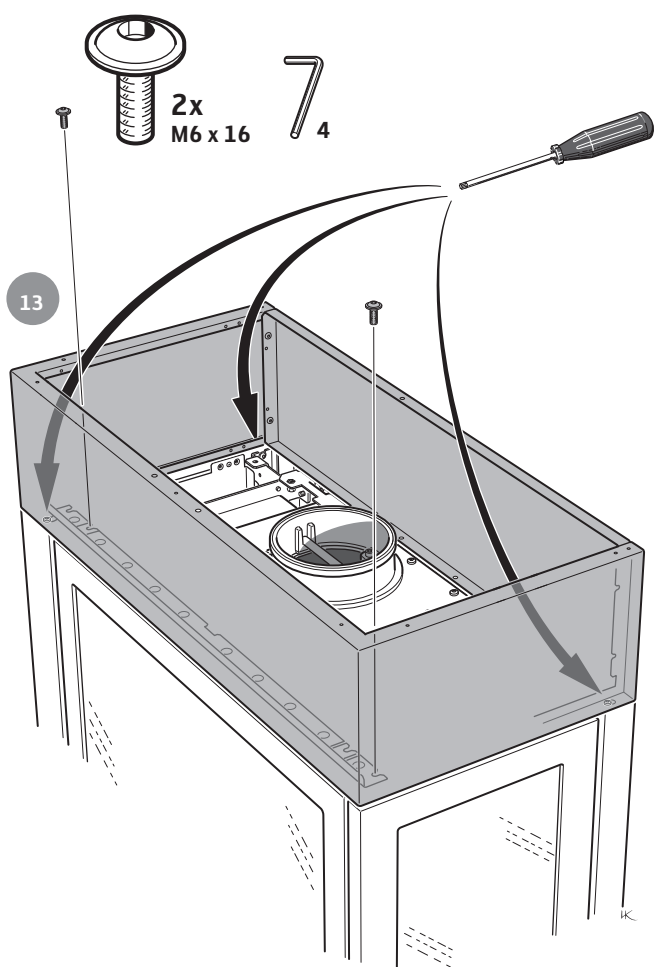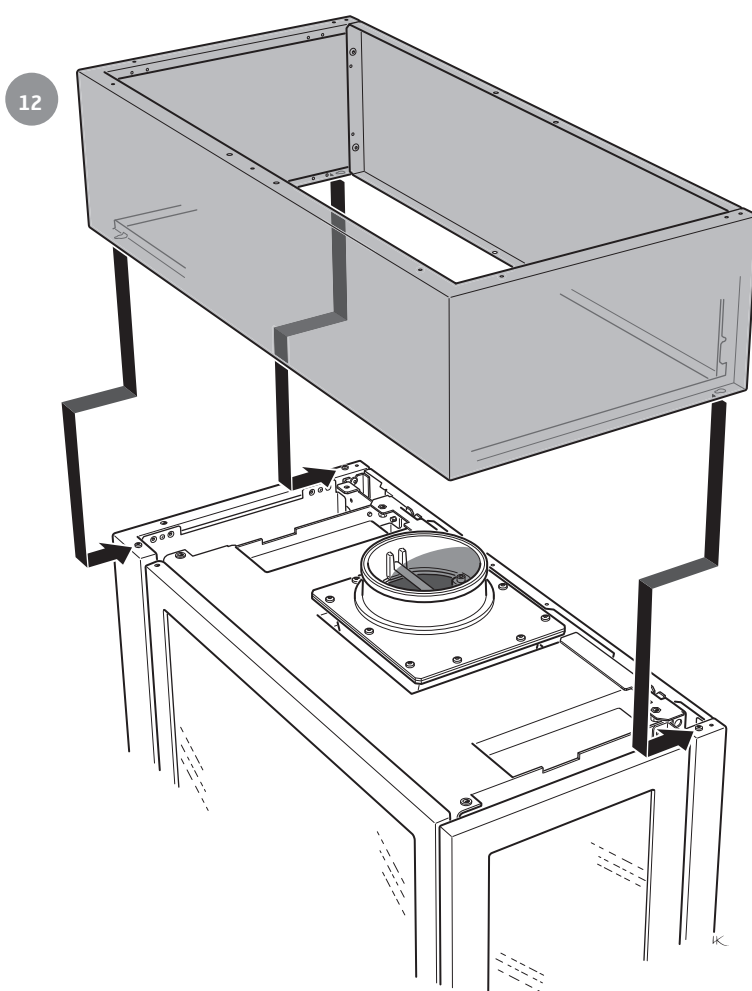
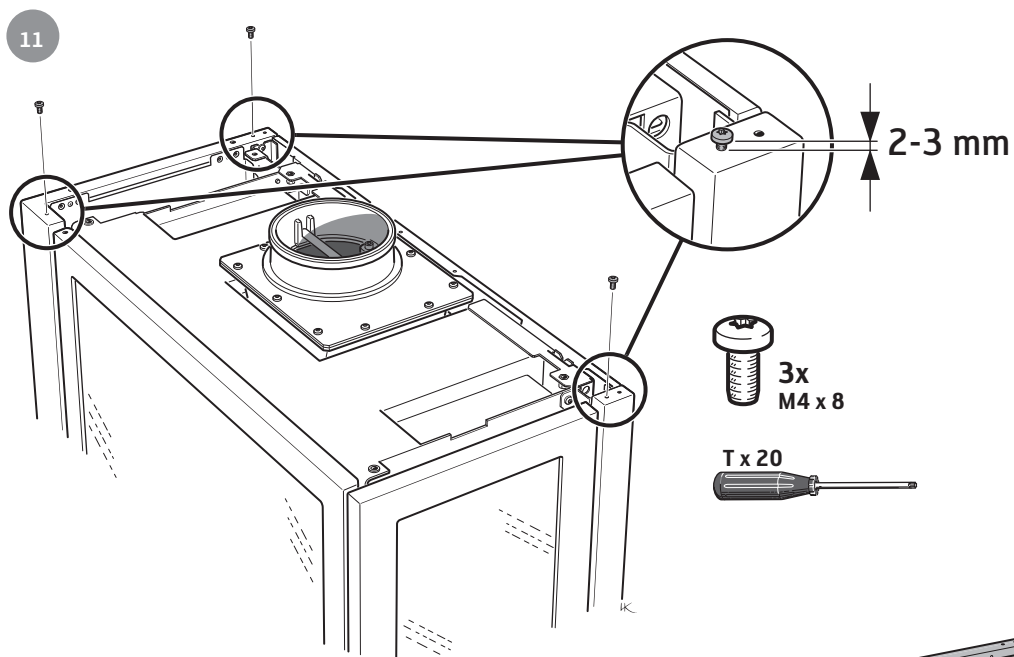


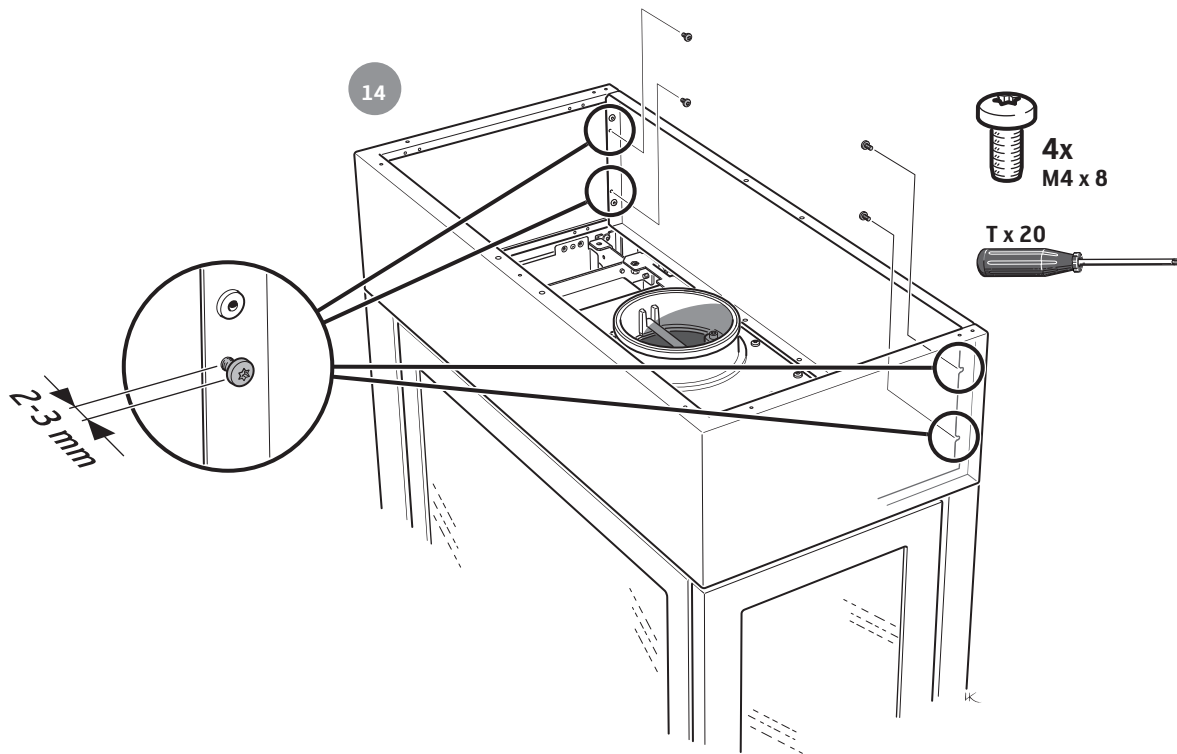


15

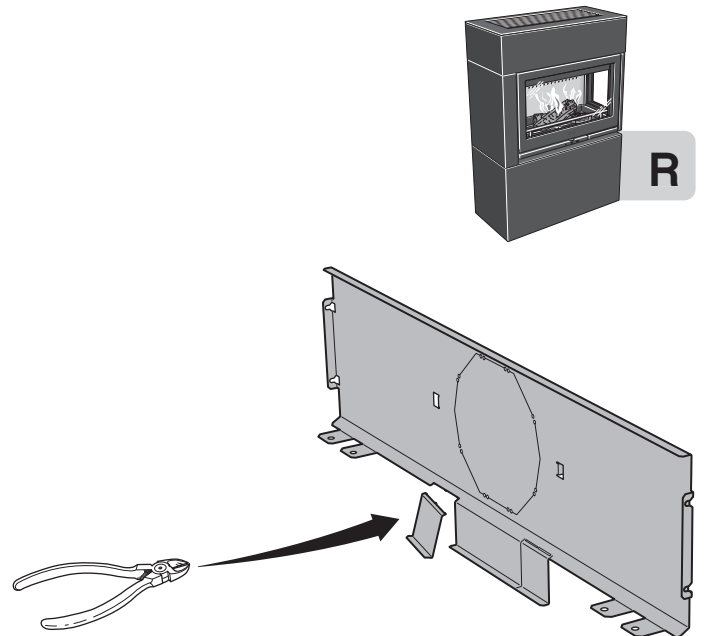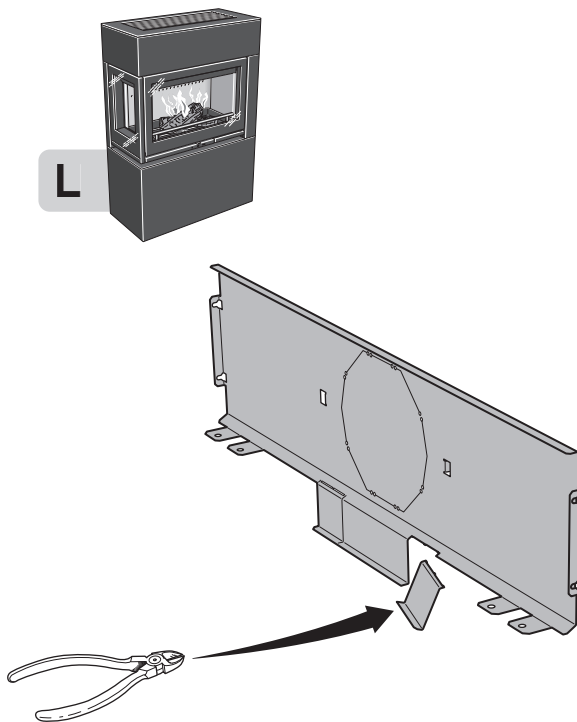

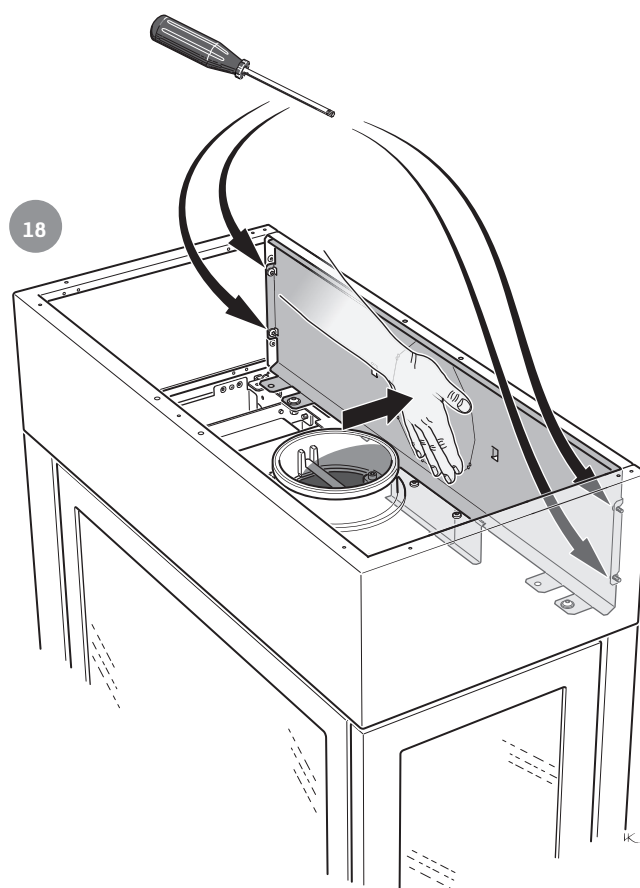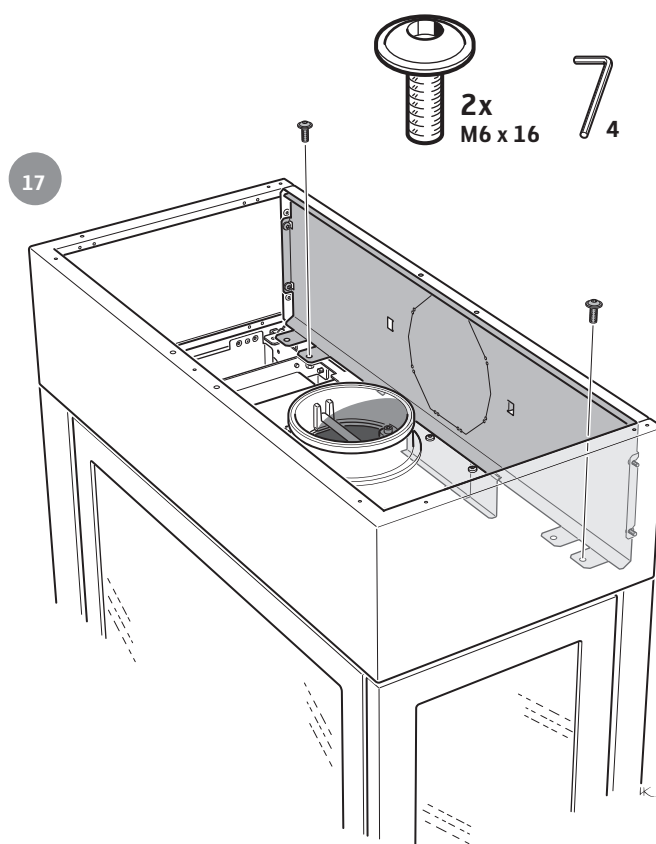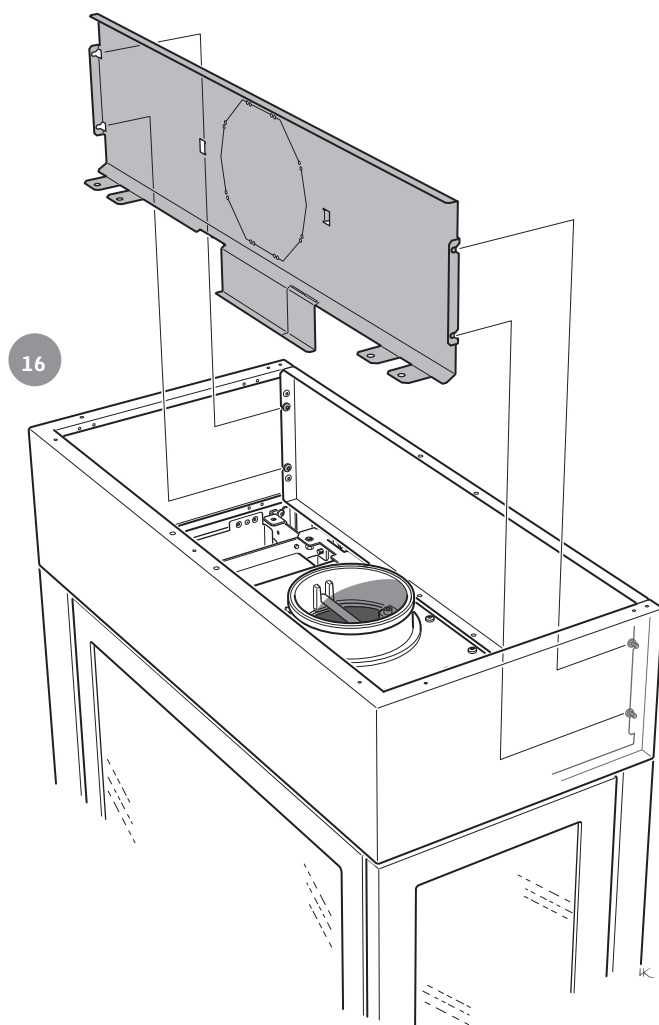


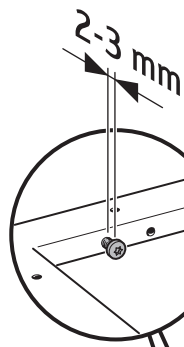



19

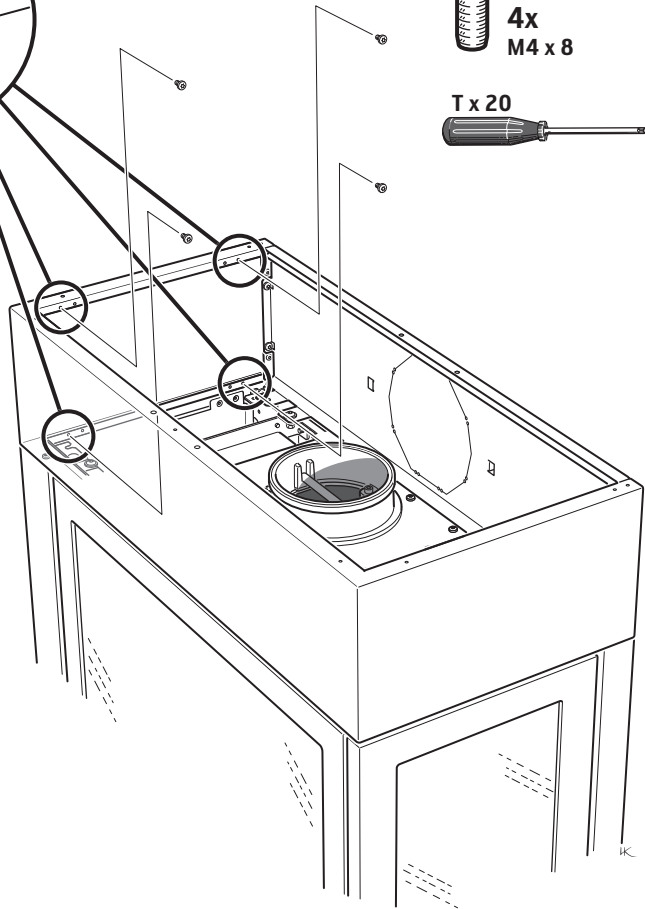

20

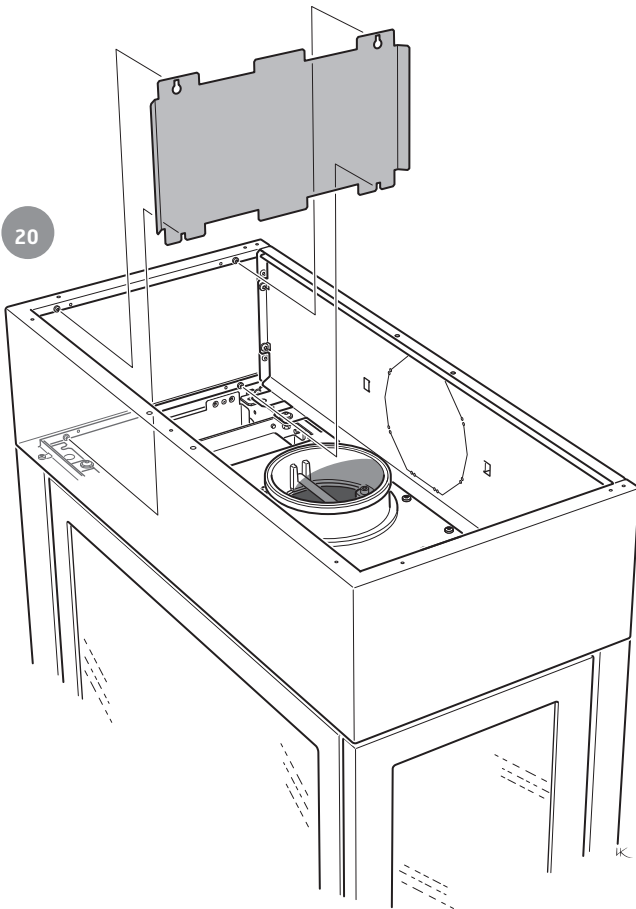

21

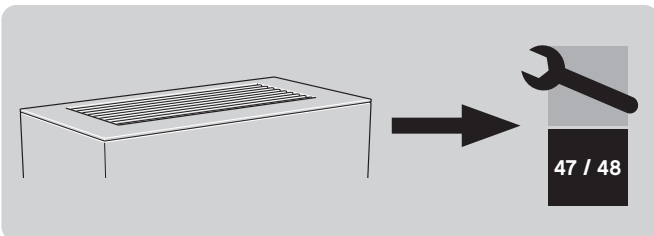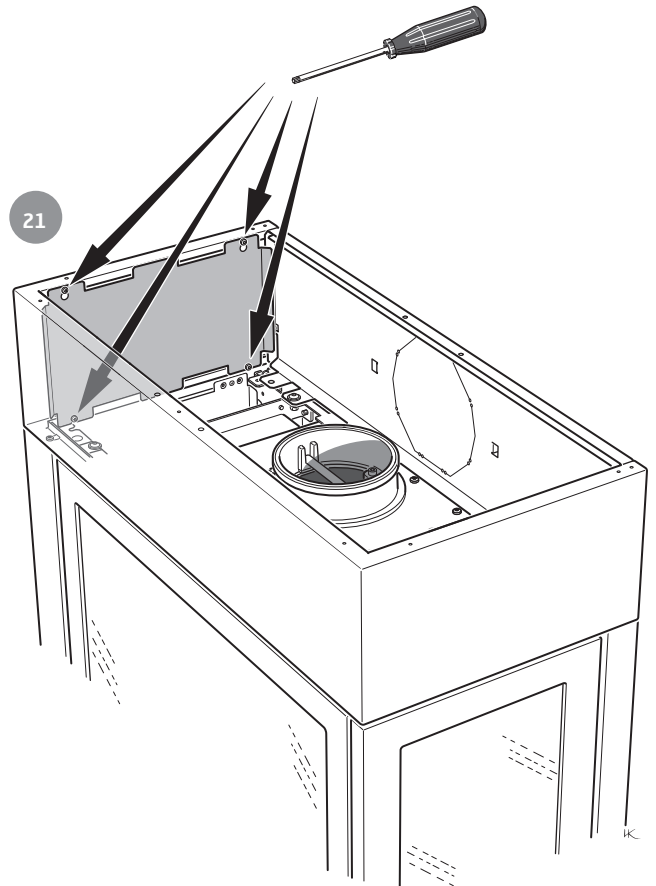



**SE** Extra sektion / sektioner (Tillbehör)

**DE** Zusätzliche(r) Abschnitt / Abschnitte (Zubehör)

**NO** Ekstra seksjon/seksjoner (Tilbehør)

**FR** Section(s) supplémentaire(s) (Accessoires)


**GB** Extra section / sections (Accessories)

**DK** Ekstra sektion / sektioner (Tilbehør)

**FI** Lisäosa/lisäosat (Lisävarusteet)


**IT** Sezione o sezioni extra (Accessori)

**NL** Extra sectie / secties (Accessoires)

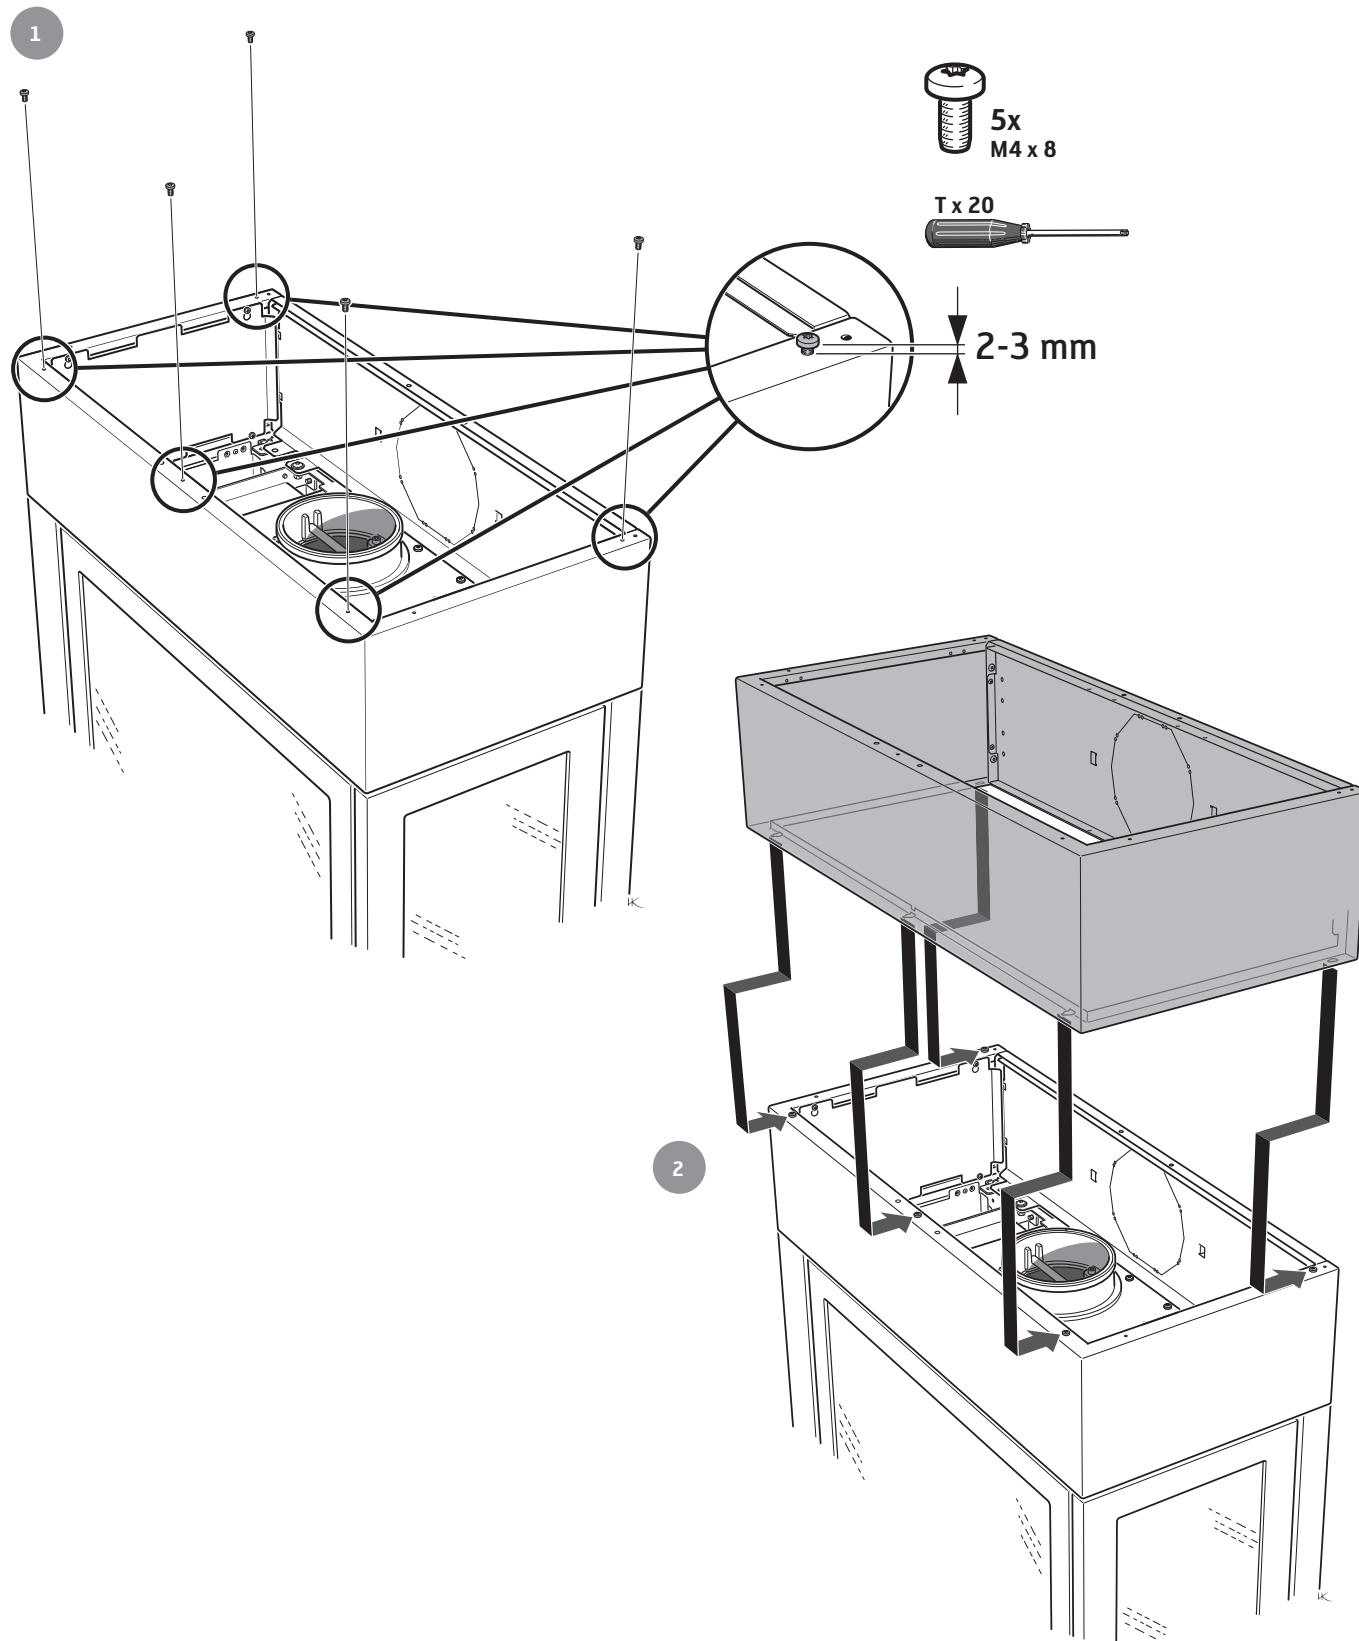




3

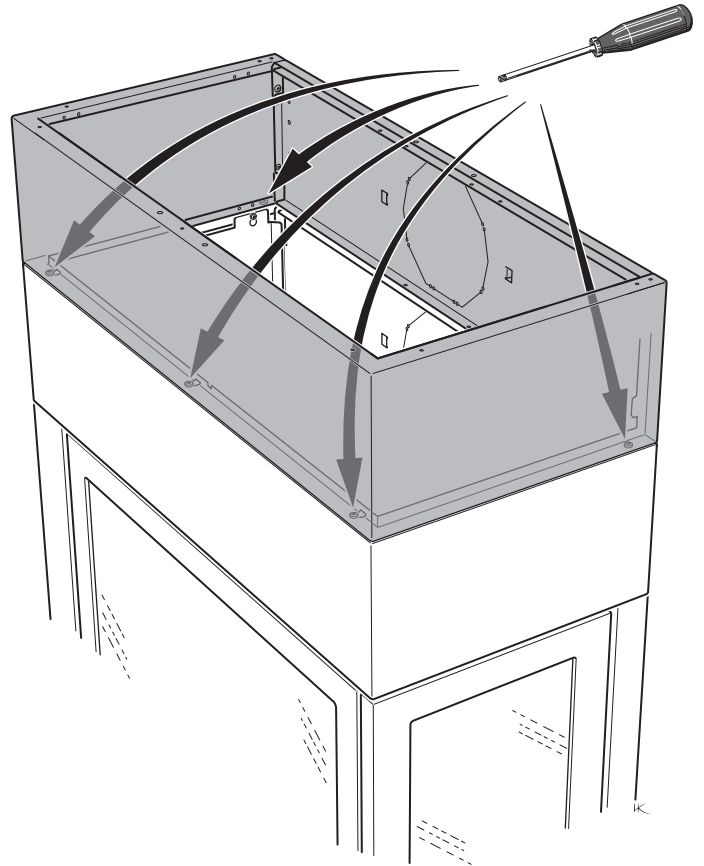

4

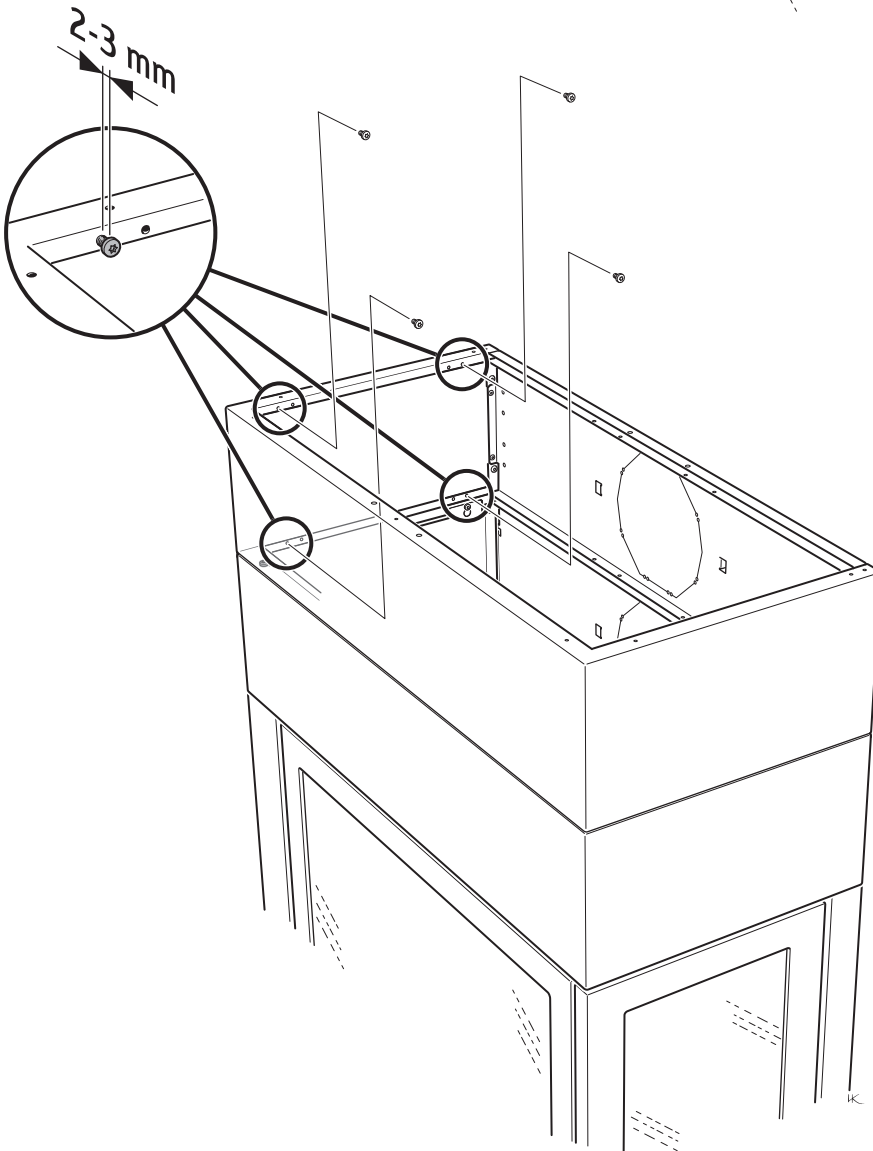


4x  
M4 x 8




T x 20



5

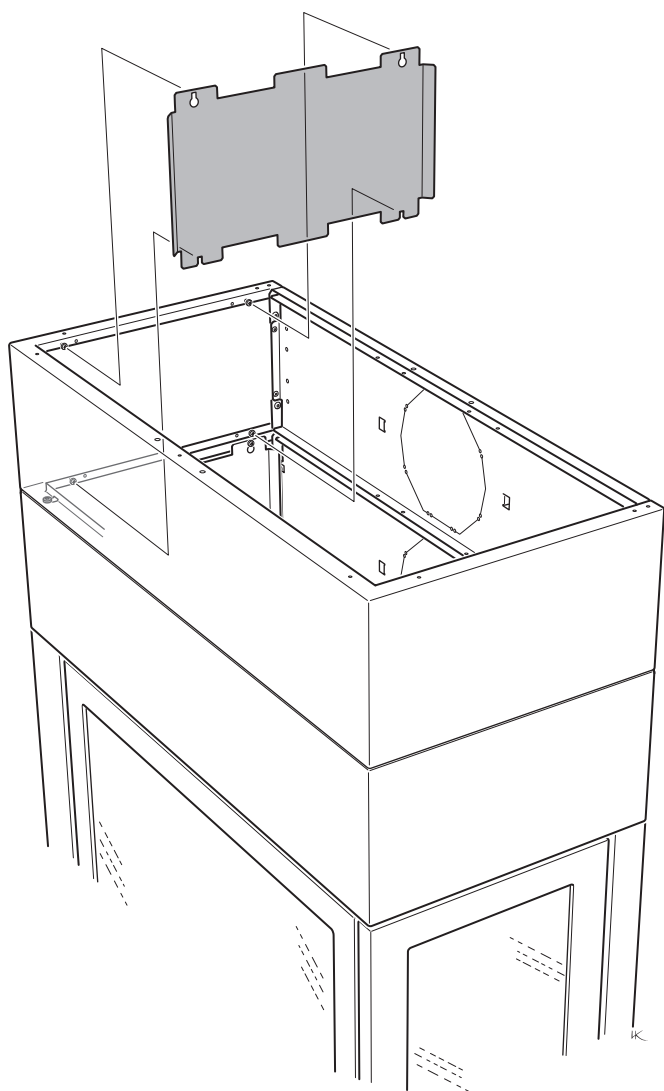





6

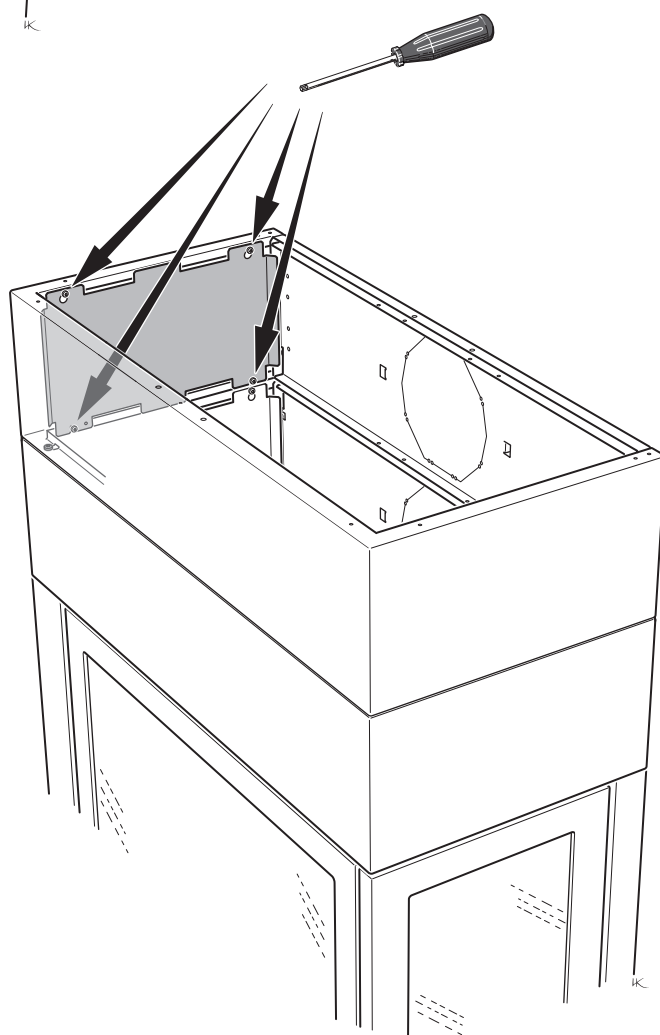





- SE** Montering av galler och topp  
Vid toppanslutning
- DE** Montage von Gitter und Oberseite  
Bei oberseitigem Anschluss
- NO** Montering av gitter og topp  
Ved toppmontering
- FR** Montage de la grille et de la partie supérieure  
Lors de raccordement par le haut
- GB** Assembling the grate and top  
For top connection





- DK** Montering af gitter og top  
Ved toptilslutning
- FI** Lämminilmaritilän ja kannen asennus  
Liitältä ylöspäin
- IT** Montaggio delle griglie e del top  
Con collegamento dal top
- NL** Rooster en bovenplaat monteren  
Bij bovenaansluiting

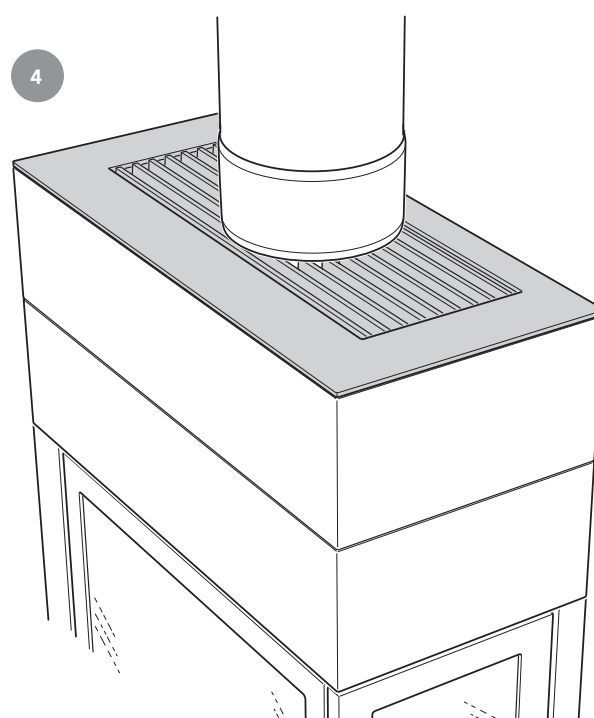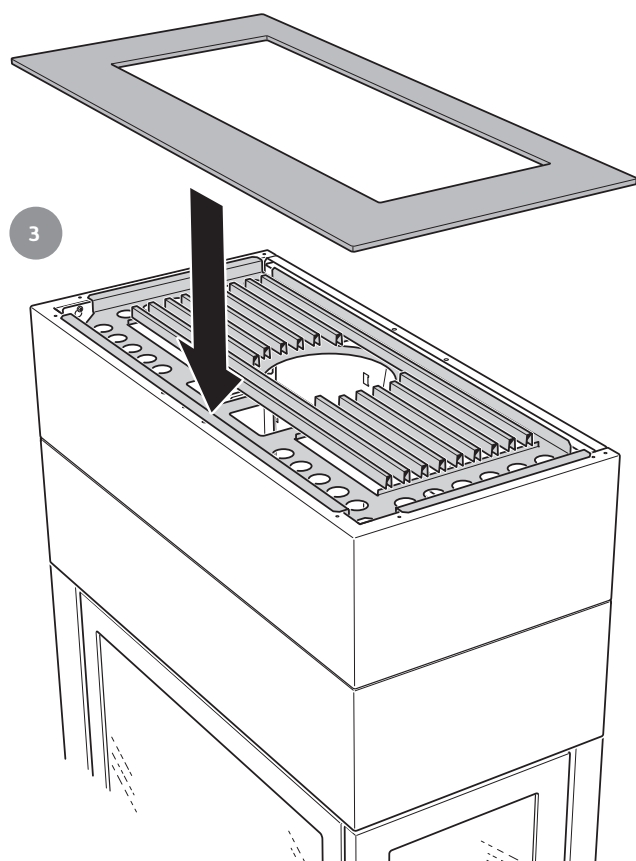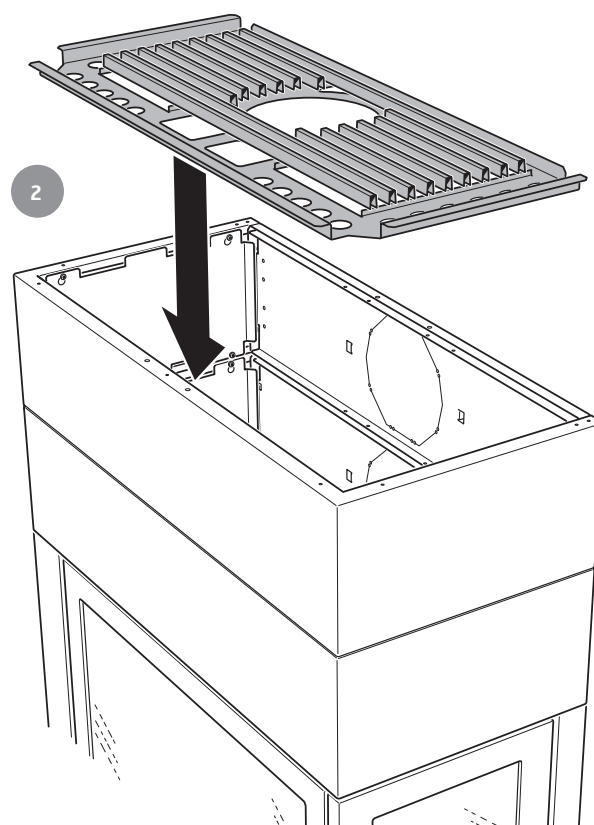
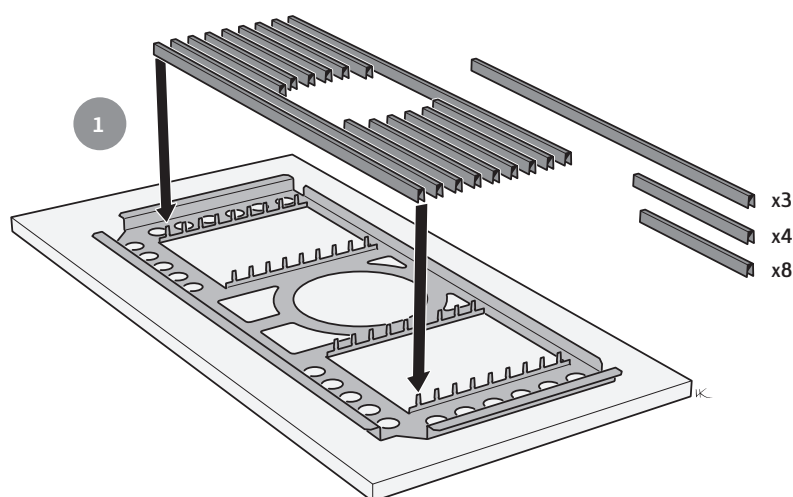










- SE** Montering av galler och topp  
Vid bakåttanslutning
- DE** Montage von Gitter und Oberseite  
Bei rückseitigem Anschluss
- NO** Montering av gitter og topp  
Ved bakmontering
- FR** Montage de la grille et de la partie supérieure  
Lors de l'accordement par l'arrière
- GB** Assembling the grate and top  
If connecting at the rear
- DK** Montering af gitter og top  
Ved tilslutning på bagside
- FI** Lämminilmaritilän ja kannen asennus  
Liitältä taaksepäin
- IT** Montaggio delle griglie e del top  
Con collegamento dal retro
- NL** Rooster en bovenplaat monteren  
Bij achteraansluiting

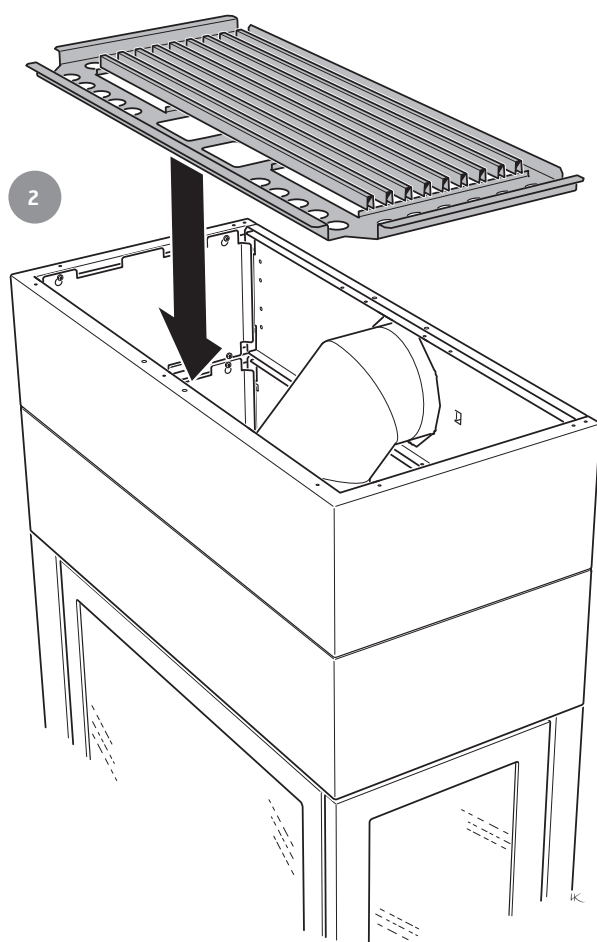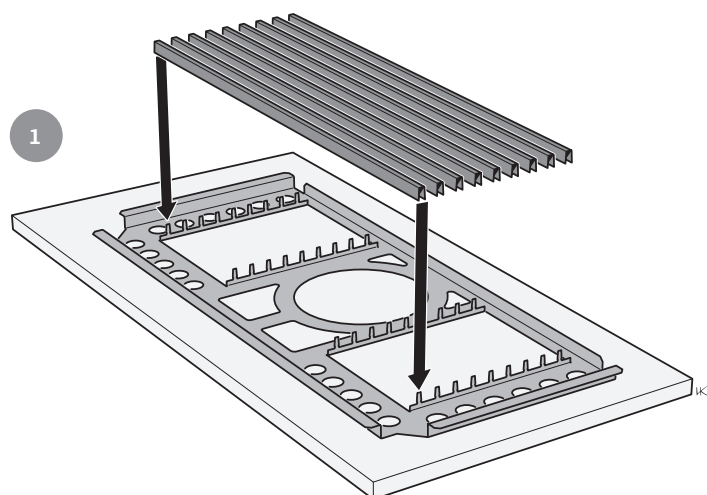

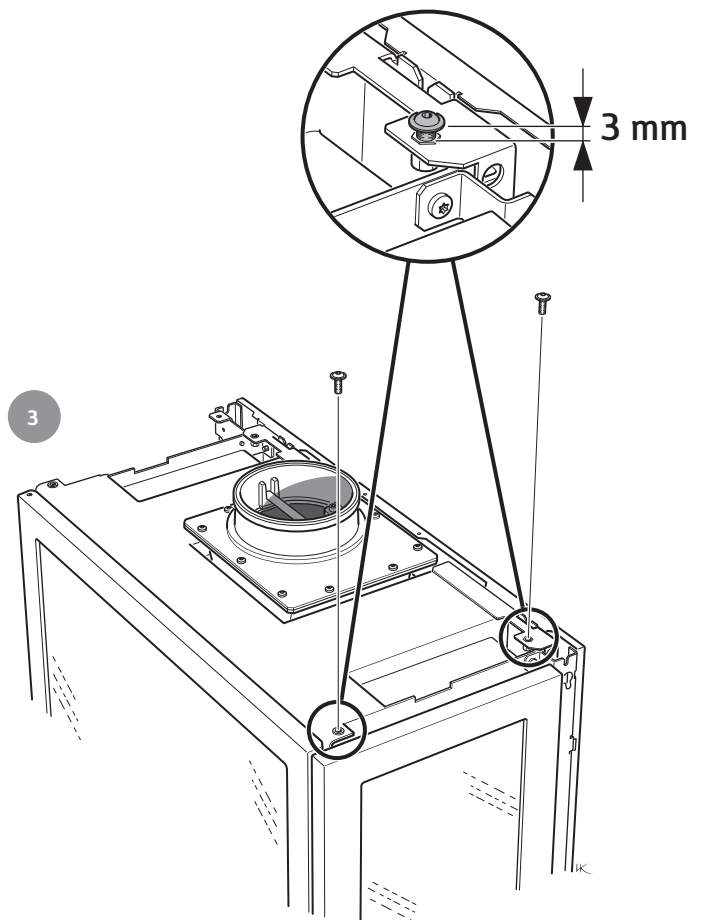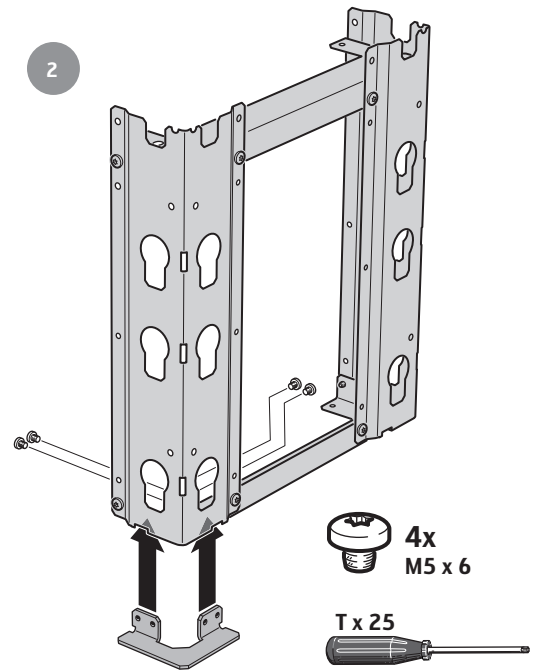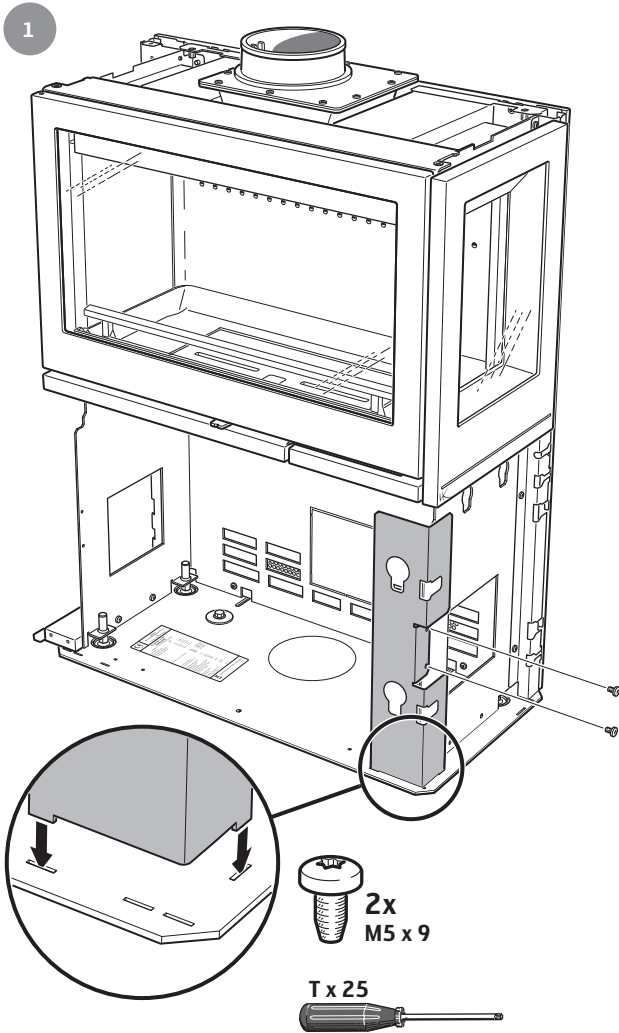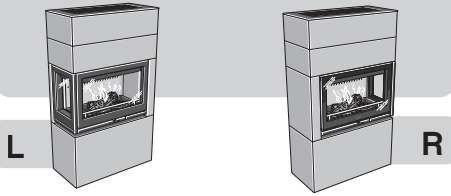




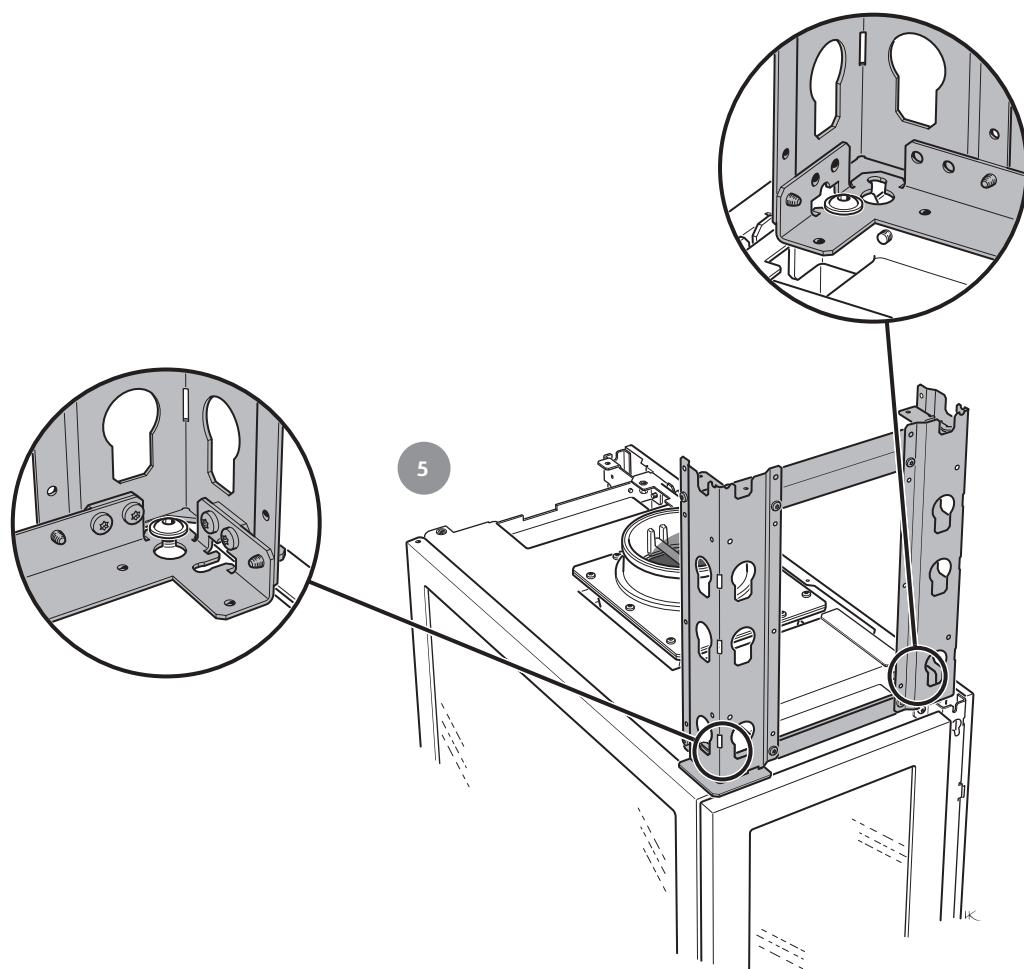
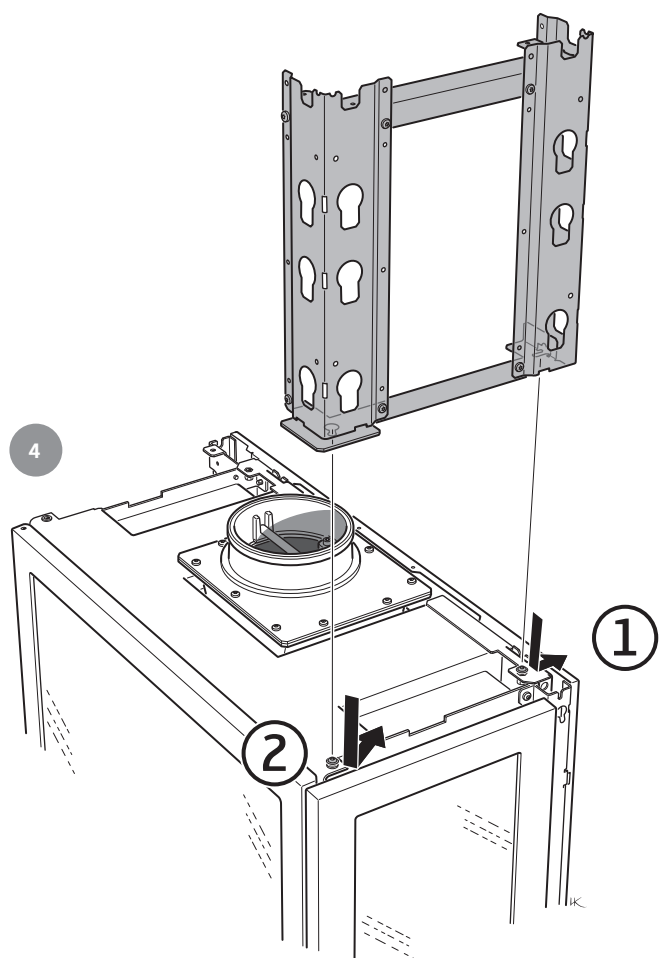


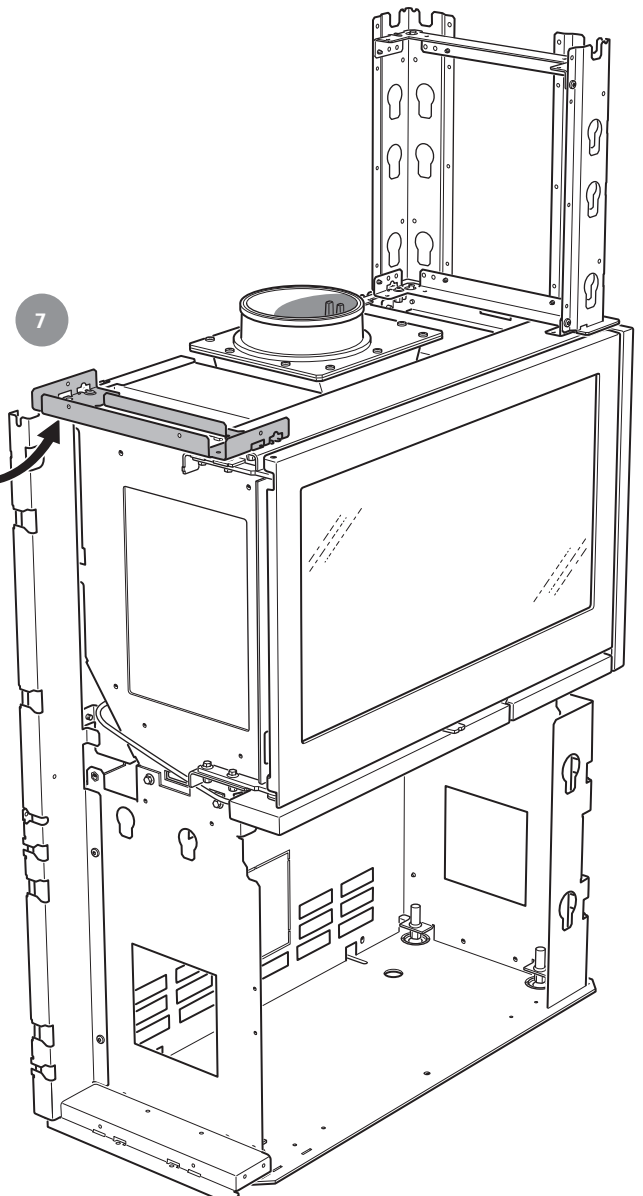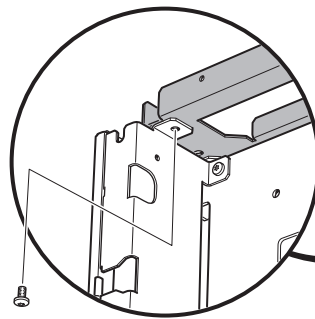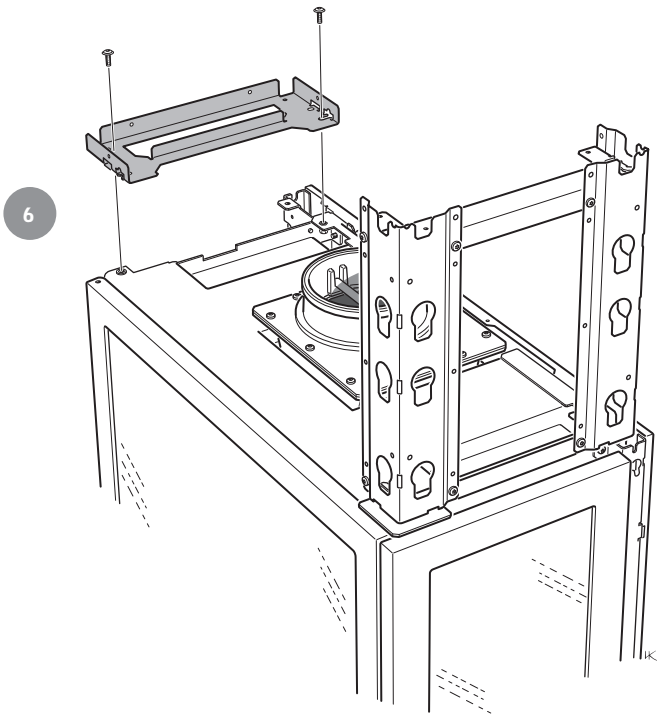

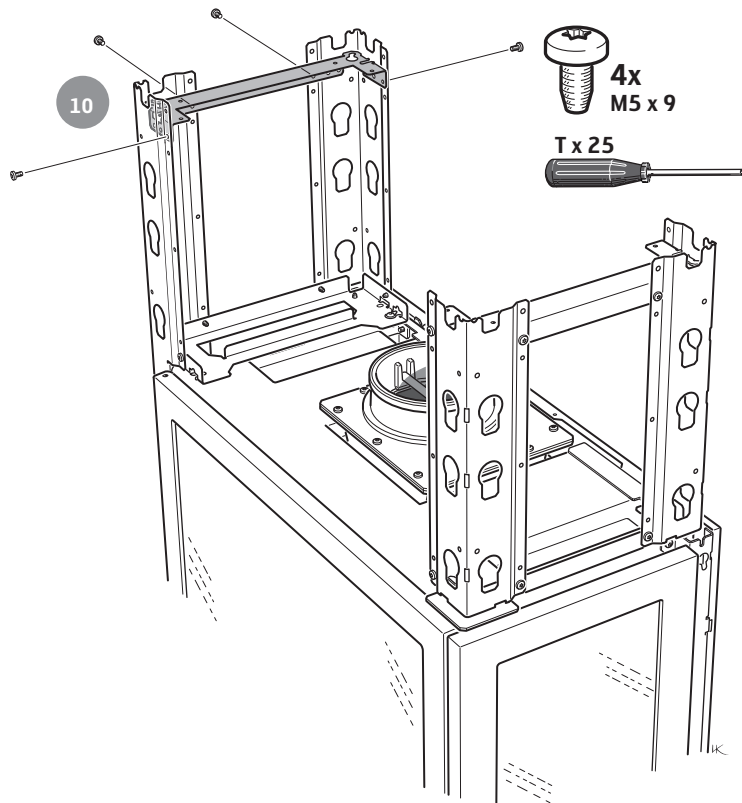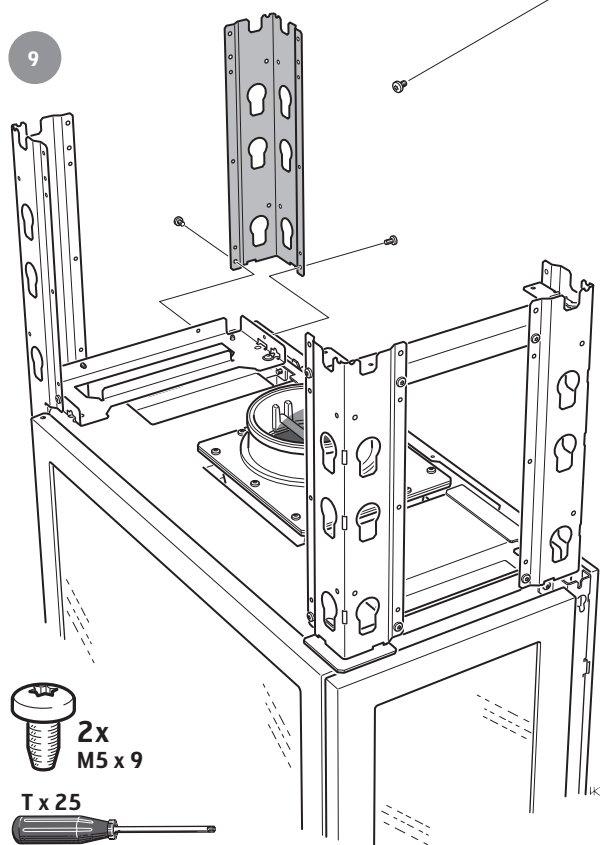
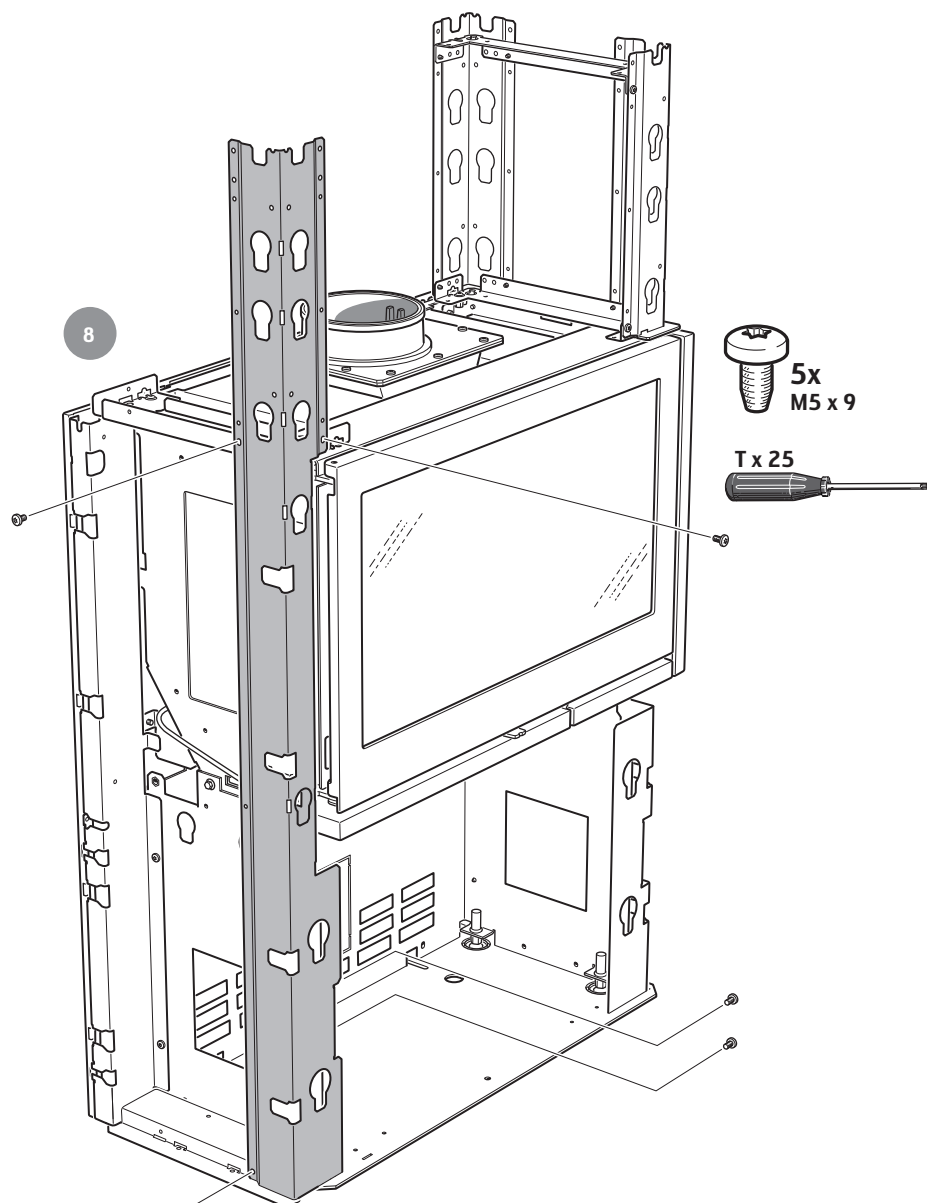









11

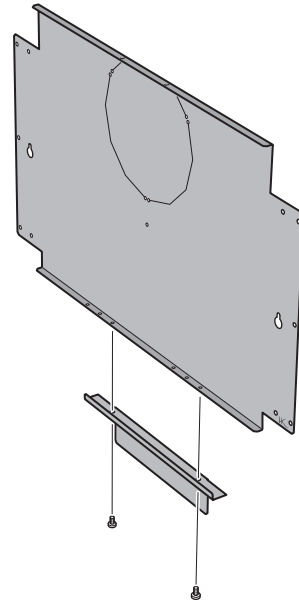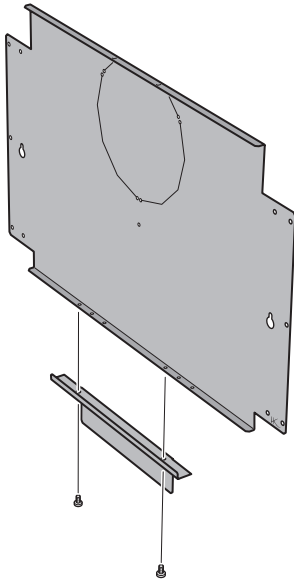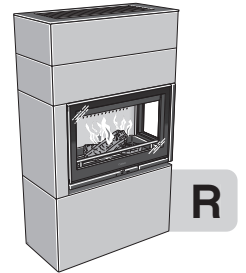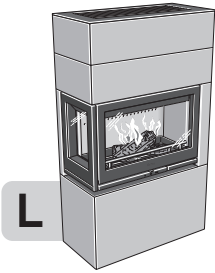

12

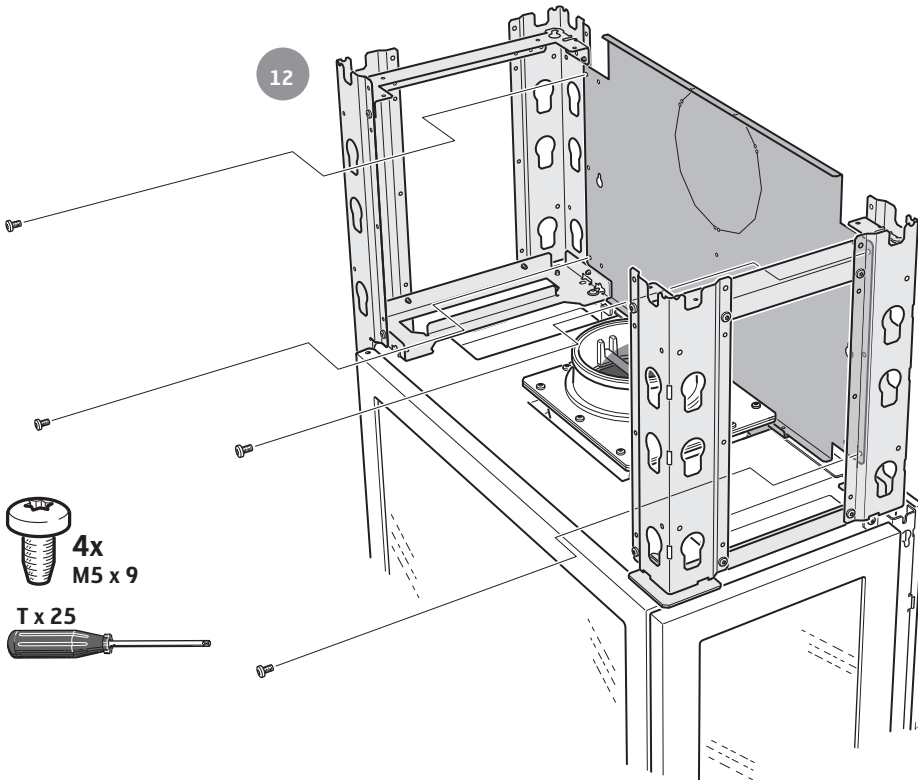

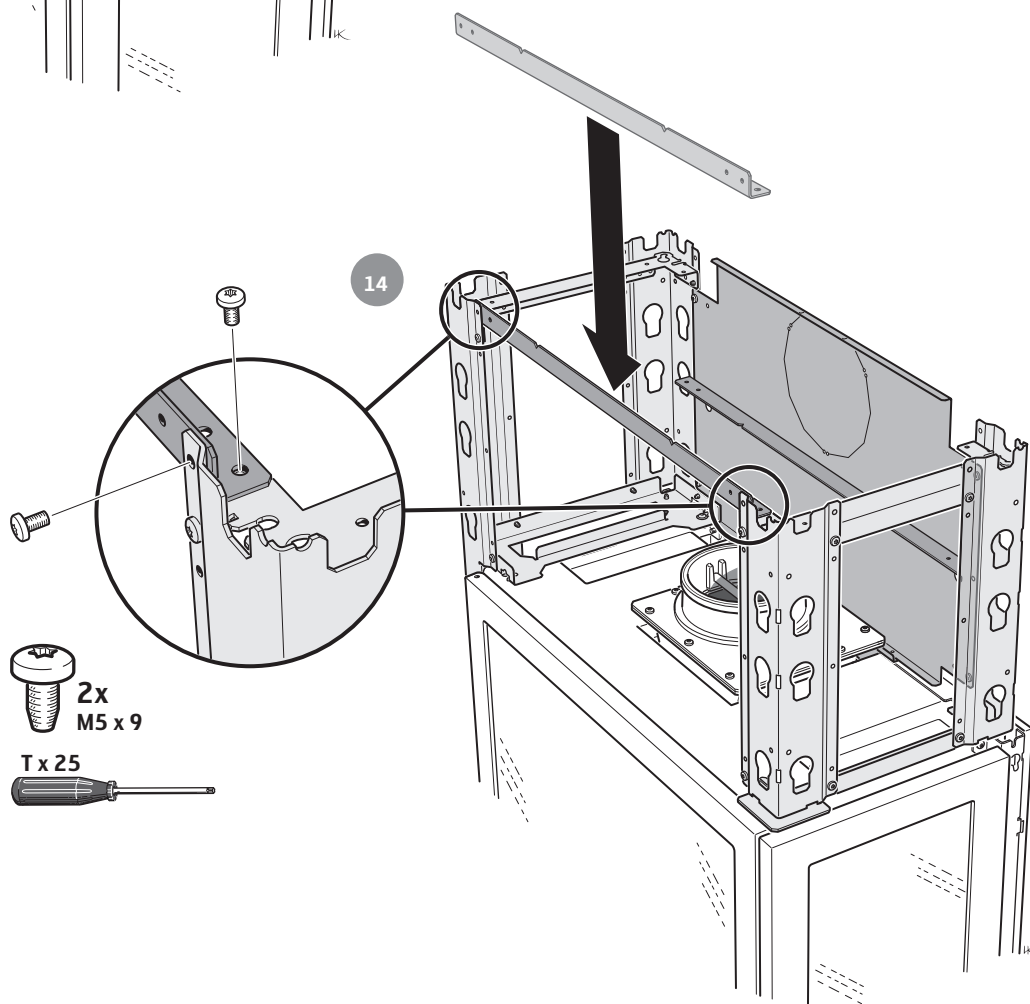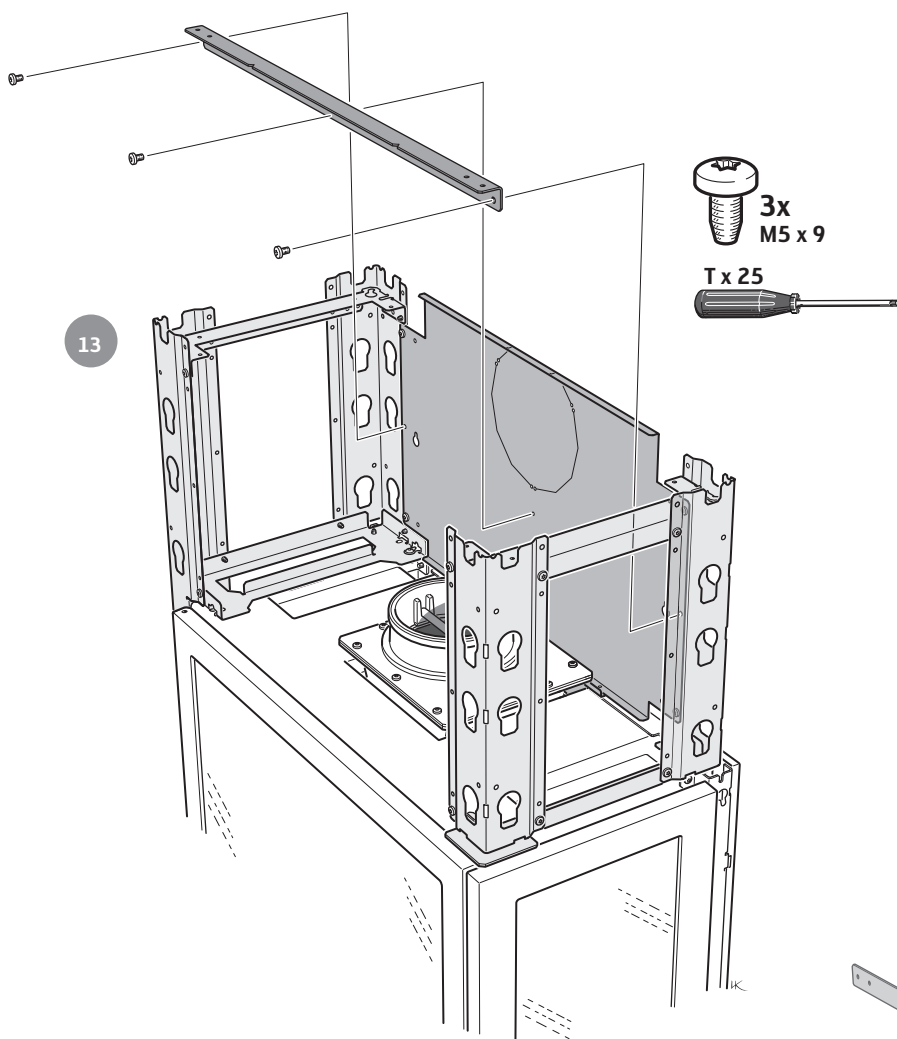

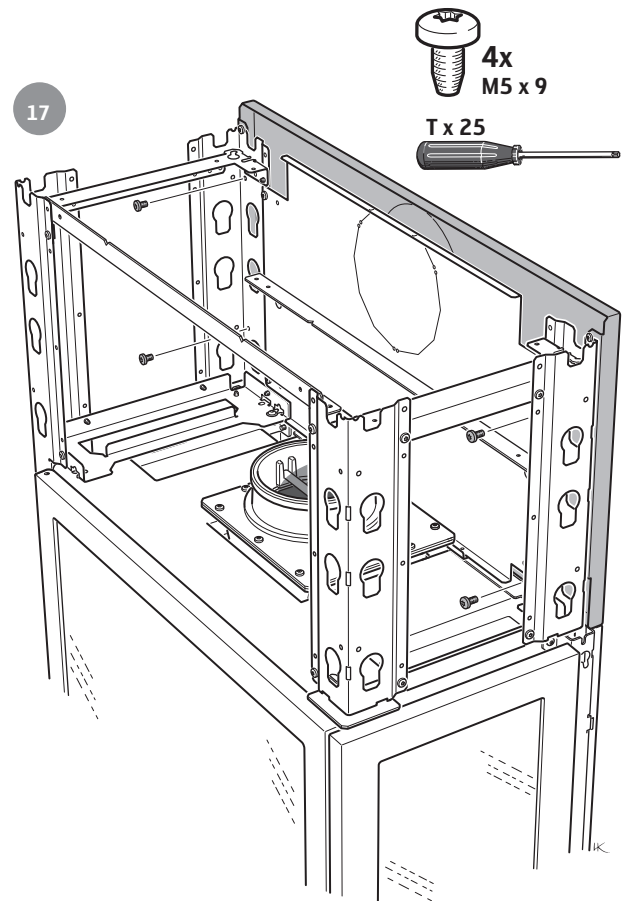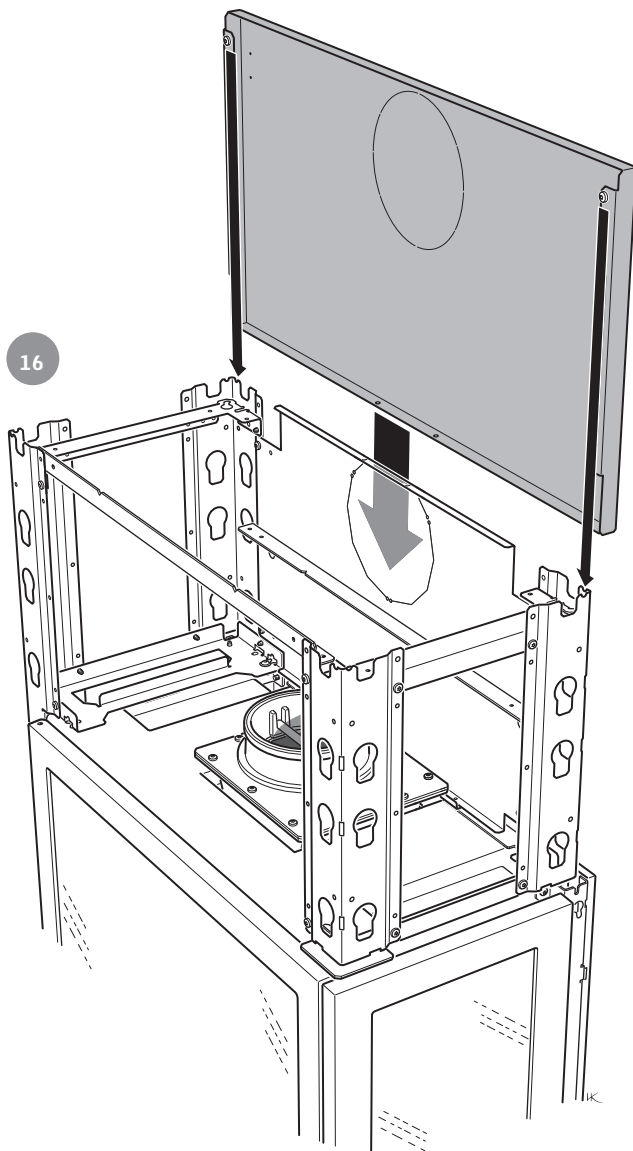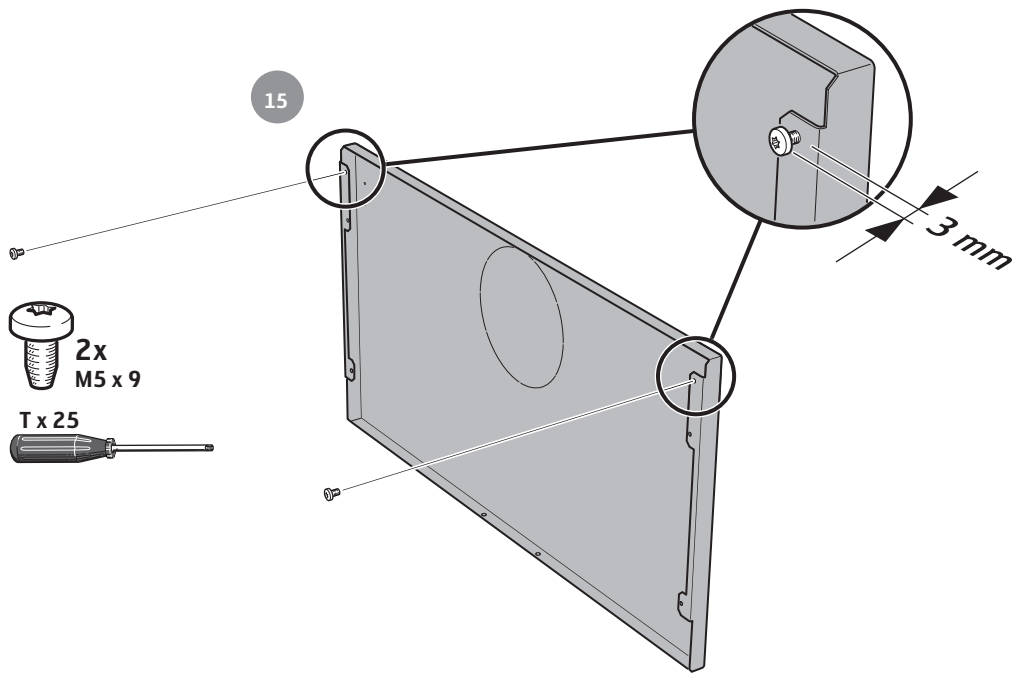

SE

## Montering av omramning

Hantera endast stenen med rena händer eller handskar. Hantera stenen varsamt för att inte skada känsliga hörn och kanter.

Stenen är ett naturmaterial, vilket innebär att vissa ojämnheter och variationer finns i dess utseende. Stenen rengörs med fuktig trasa. Vid behov kan såpavatten användas. Kontrollera under monteringen av varje stenskiift att samtliga stenar står rakt och att samtliga stenar blir jämnhöga. **Shimsa vid behov.**

DE

## Montage der Verkleidung

Fassen Sie die Steine nur mit sauberen Händen oder Handschuhen an. Gehen Sie vorsichtig mit den Steinen um, damit empfindliche Ecken und Kanten nicht beschädigt werden.

Die Steine sind ein natürliches Material, daher können gewisse Unregelmäßigkeiten und Abweichungen beim Erscheinungsbild vorkommen. Die Steine werden mit einem feuchten Tuch gereinigt. Bei Bedarf kann Seifenwasser verwendet werden. Kontrollieren Sie bei der Montage sämtlicher Steinschichten, dass alle Steine gerade stehen und dieselbe Höhe aufweisen. **Nutzen Sie bei Bedarf Distanzscheiben.**

NO

## Montering av omramming

Ha alltid rene hender eller bruk hansker ved håndtering av steinen. Håndter steinen varsomt for å unngå skade på skjøre hjørner og kanter.

Steinen er et naturmateriale, det innebærer at overflaten kan ha visse ujevnheter og variasjoner. Steinen rengjøres med en fuktig klut. Ved behov kan såpevann benyttes. Kontroller under monteringen av hvert steinlag at samtlige steiner står rett, og at alle steinene blir like høye. **Juster ved behov med shimsskiver.**

FR

## Montage de l'habillage

Manipulez les pierres uniquement avec des mains ou des gants propres. Manipulez soigneusement les pierres afin de ne pas endommager les coins et les bords fragiles.

La pierre est un matériau naturel qui, par définition, présente des irrégularités de structure et d'aspect. La pierre se nettoie avec un chiffon humide. De l'eau savonneuse peut être utilisée, si besoin. Vérifiez durant l'installation de chaque rangée de pierre que toutes les pierres sont droites et qu'elles sont au même niveau. **Utilisez des cales le cas échéant.**

GB

## Assembling the surround

Only handle the stone with clean hands or gloves. Handle the stone carefully so as not to damage fragile corners and edges.

The stone is a natural material, which means that there may be certain irregularities and variations in its appearance. Clean the stone with a damp cloth. Soapy water can be used if necessary. During assembly, check that all the stone sections are straight and that all stones are of a uniform height. **Use shims if necessary.**

DK

## Montering af omramning

Only handle the stone with clean hands or gloves. Handle the stone carefully so as not to damage fragile corners and edges.

The stone is a natural material, which means that there may be certain irregularities and variations in its appearance. Clean the stone with a damp cloth. Soapy water can be used if necessary. During assembly, check that all the stone sections are straight and that all stones are of a uniform height. **Use shims if necessary.**

FI

## Kuoren asennus

Pese aina kädet ennen kivien käsittelyä ja käytä puhtaita käsiä. Käsittele kiviä varoen, jotta kulmat ja reunat eivät vaurioitu.

Kivi on luonnonmateriaali, mikä tarkoittaa, että sen pinnassa on epätasaisuuksia ja vaihteluja. Kivet puhdistetaan kostealla liinalla. Tarvittaessa voidaan käyttää saippuavettä. Tarkasta kunkin kivikerroksen asennuksen aikana, että kaikki kivet ovat suorassa ja että kaikki kerroksen osat ovat yhtä korkeita. **Käytä tarvittaessa säätöprikkoja..**

IT

## Montaggio del rivestimento

Manipolare le pietre solo con le mani pulite, oppure con i guanti. Manipolare le pietre con attenzione per non danneggiarle. I bordi e gli angoli sono particolarmente fragili.

La pietra è un materiale naturale, quindi presenta variazioni e differenze. Pulire la pietra con un panno umido, se necessario si può usare acqua saponata. Durante l'installazione di ogni modulo in pietra, controllare che tutte le pietre siano collocate dritte e ad uguale altezza. **Inserire degli spessoramenti se necessario.**

NL

## Omlijsting monteren

Only handle the stone with clean hands or gloves. Handle the stone carefully so as not to damage fragile corners and edges.

The stone is a natural material, which means that there may be certain irregularities and variations in its appearance. Clean the stone with a damp cloth. Soapy water can be used if necessary. During assembly, check that all the stone sections are straight and that all stones are of a uniform height. **Use shims if necessary.**

SE Shimsbrickor

DE Distanzscheiben

NO Shimsskiver

FR Rondelles cales

GB Shims


DK Shims

FI Säätöprikat


IT Rondelle di spessoramento

NL Shims



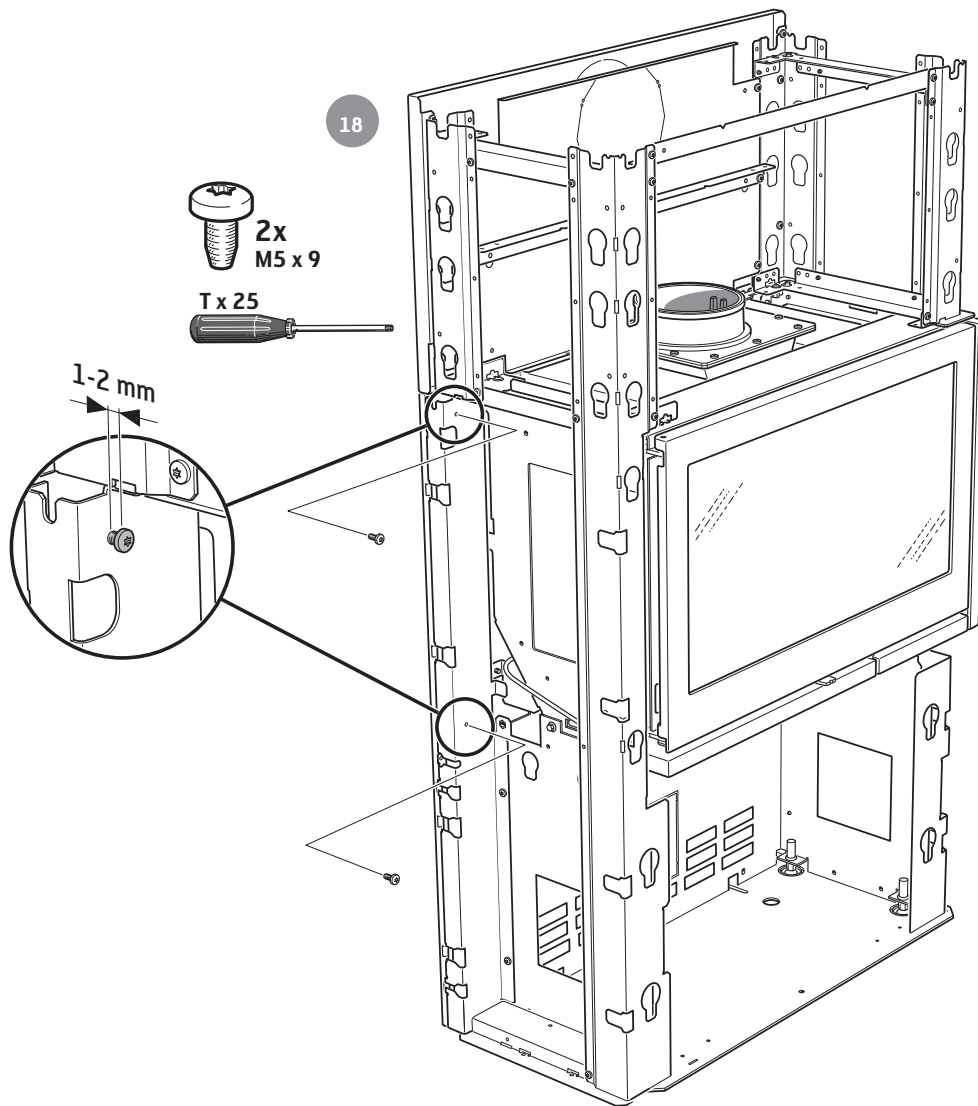

19

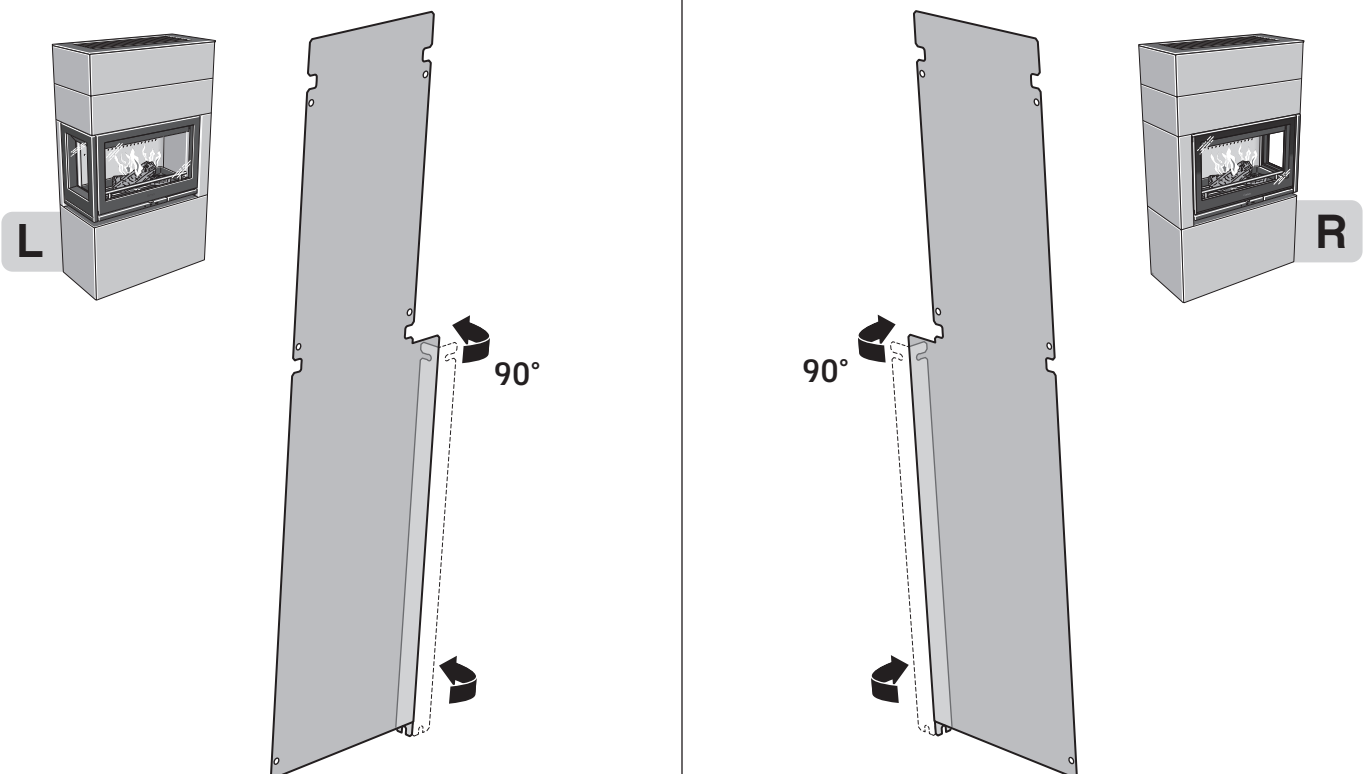




5x  
M5 x 9


T x 25



20

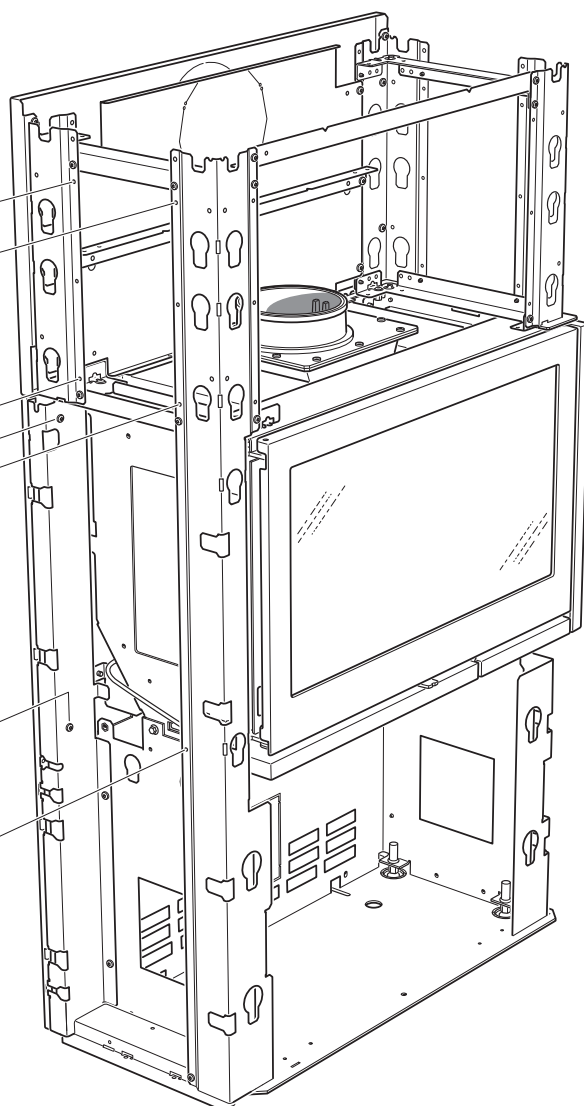


21

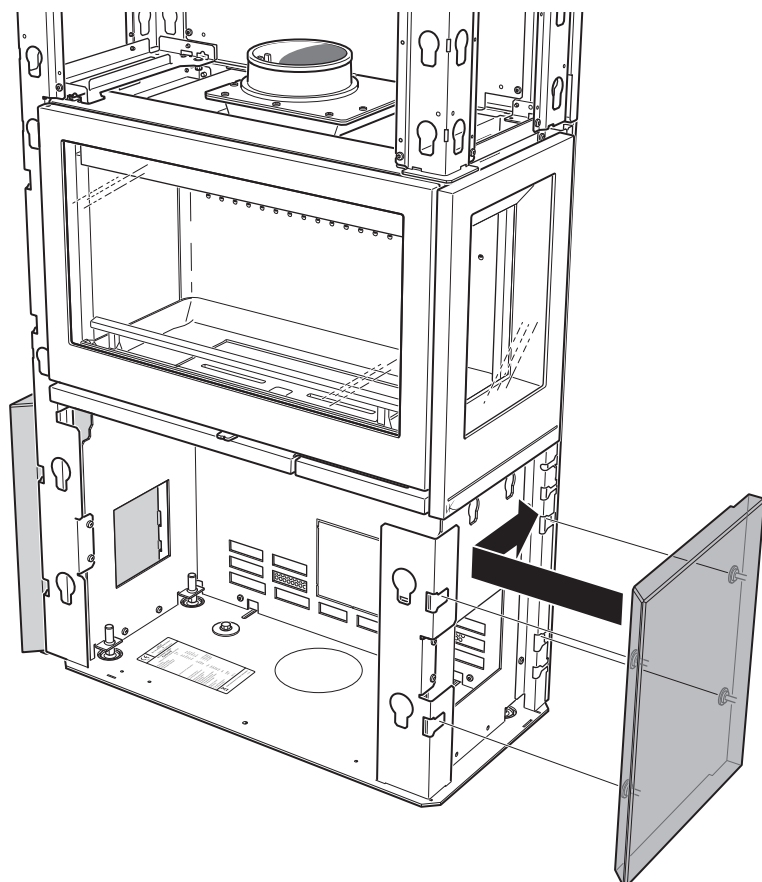




22

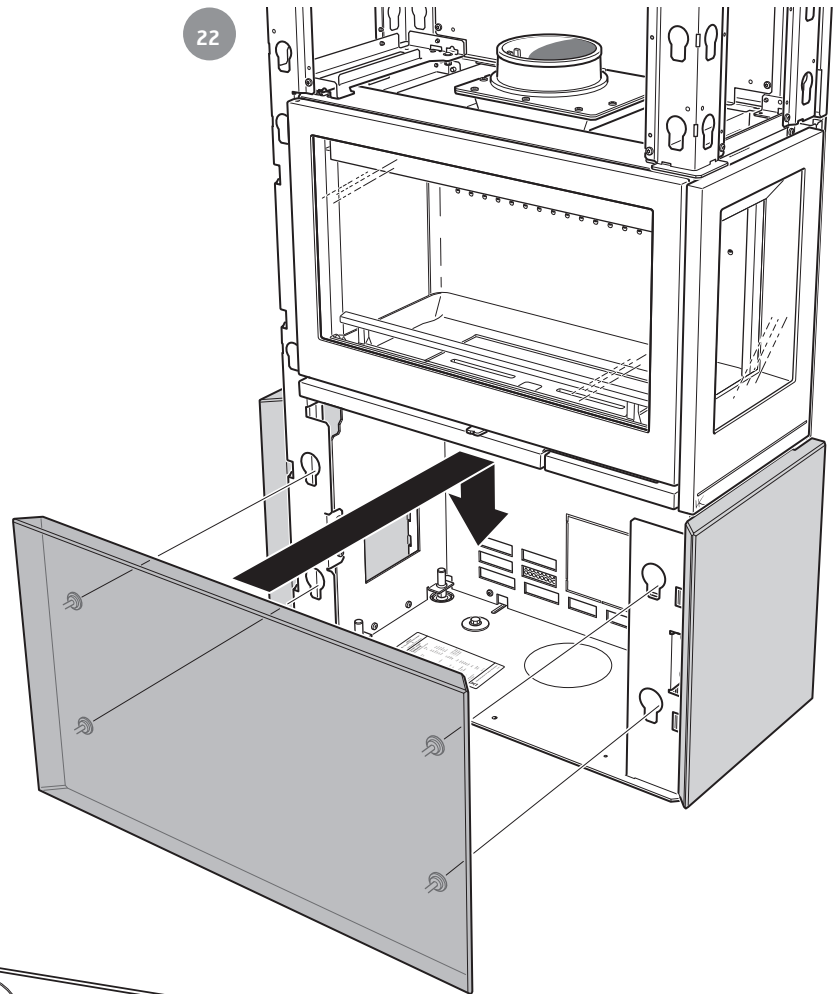


23

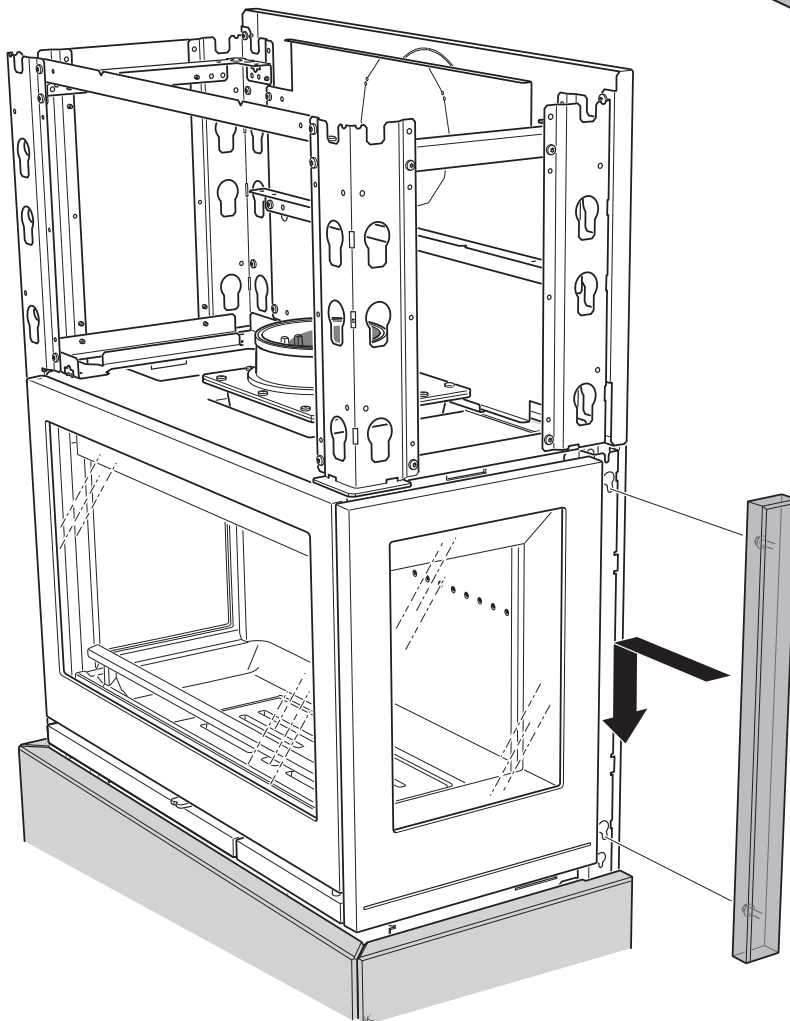




24

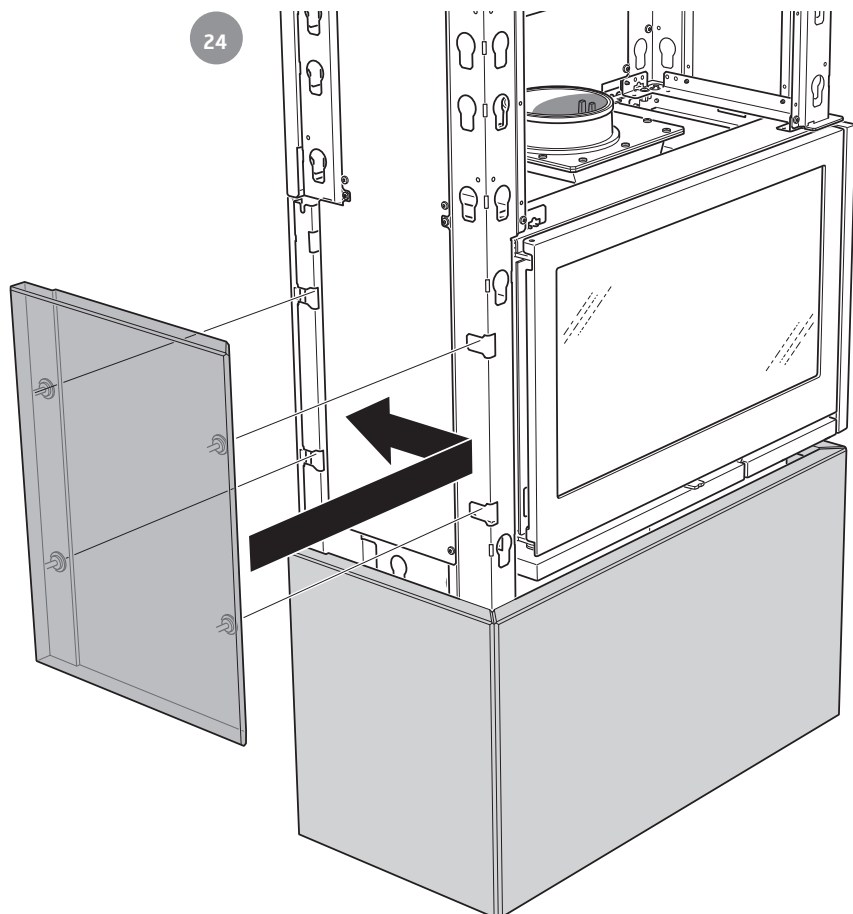


25

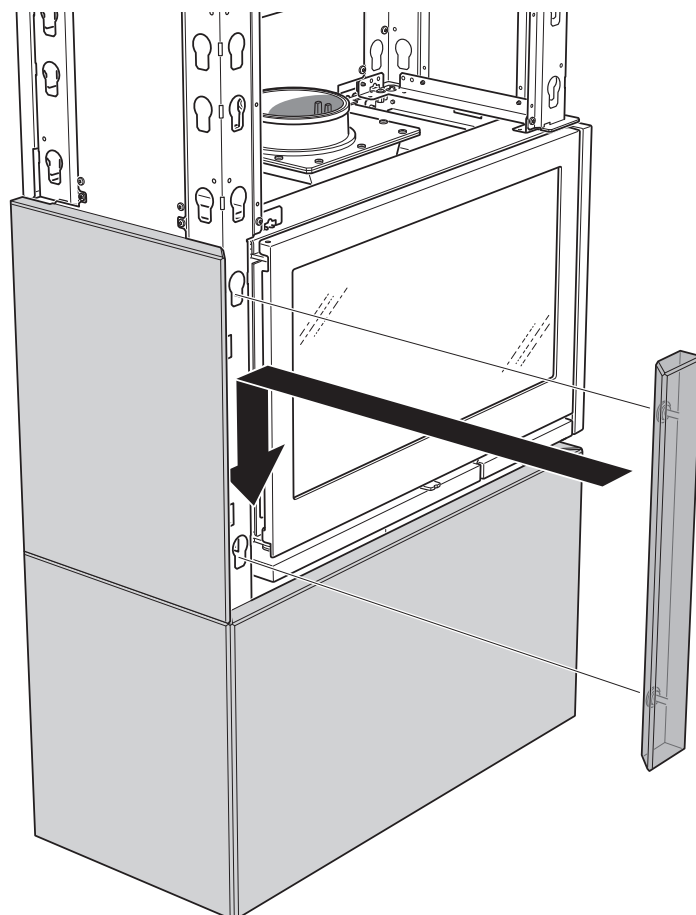








26

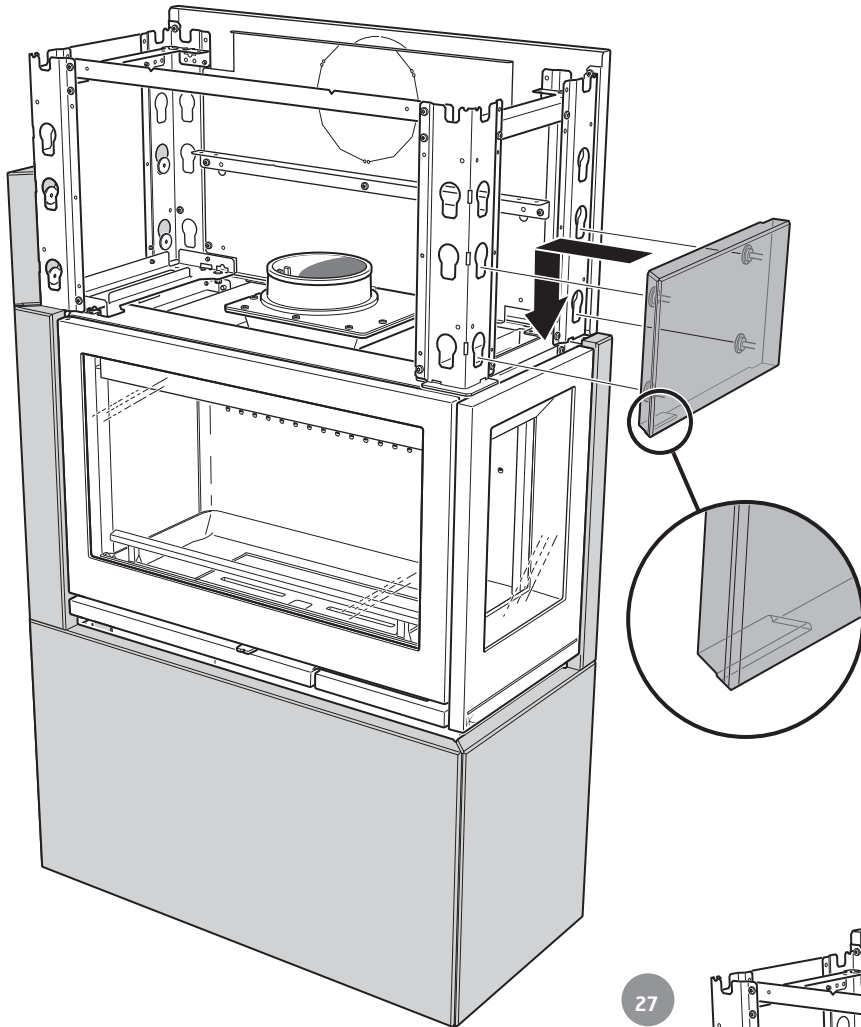

27

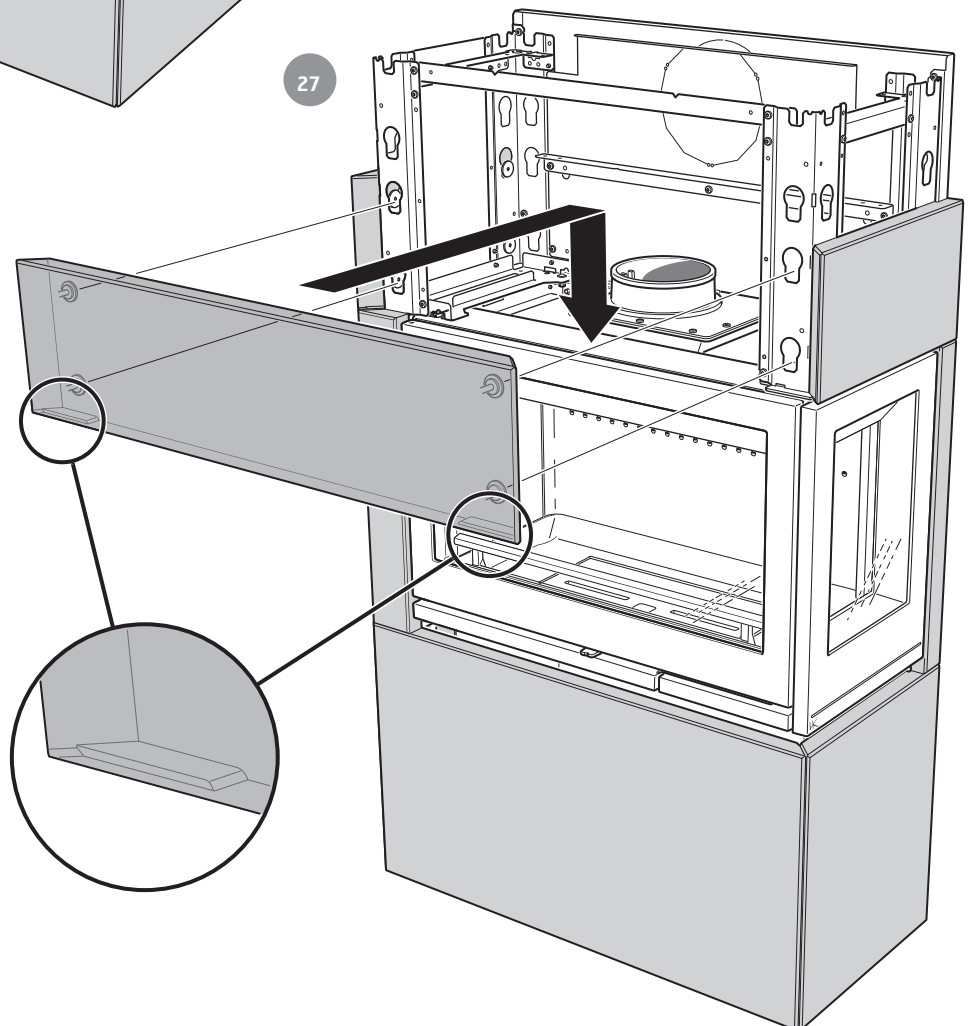



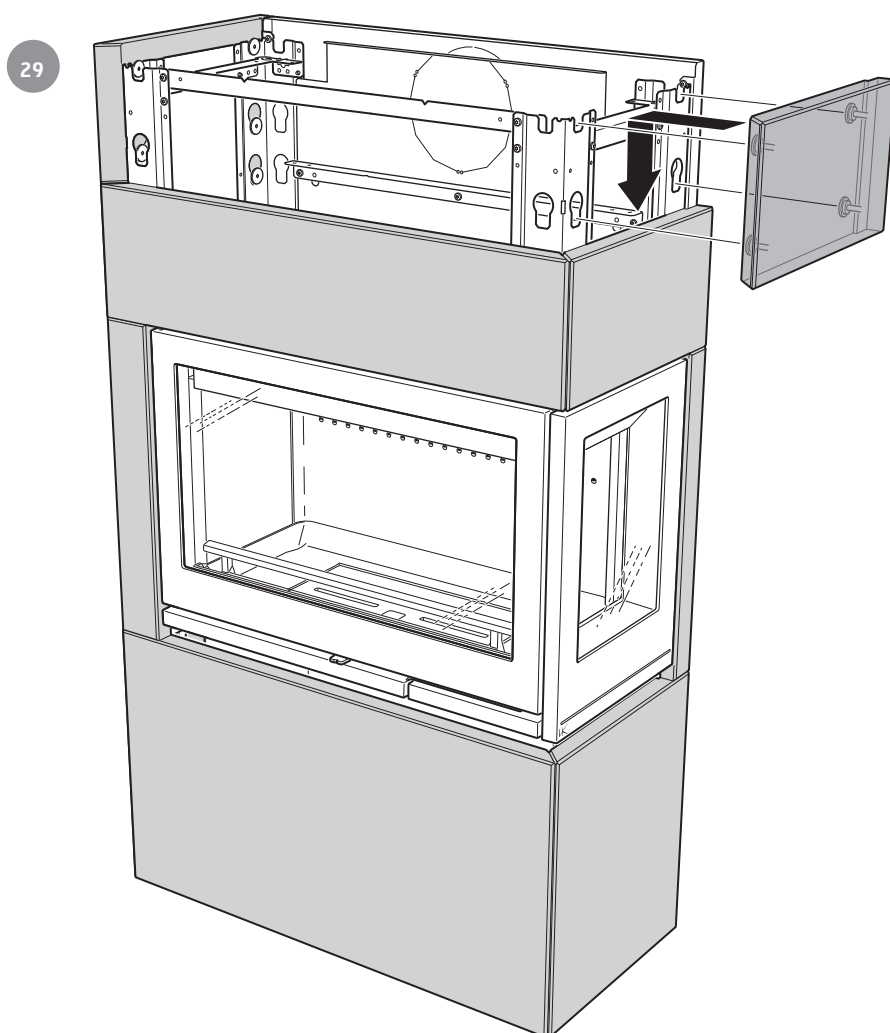
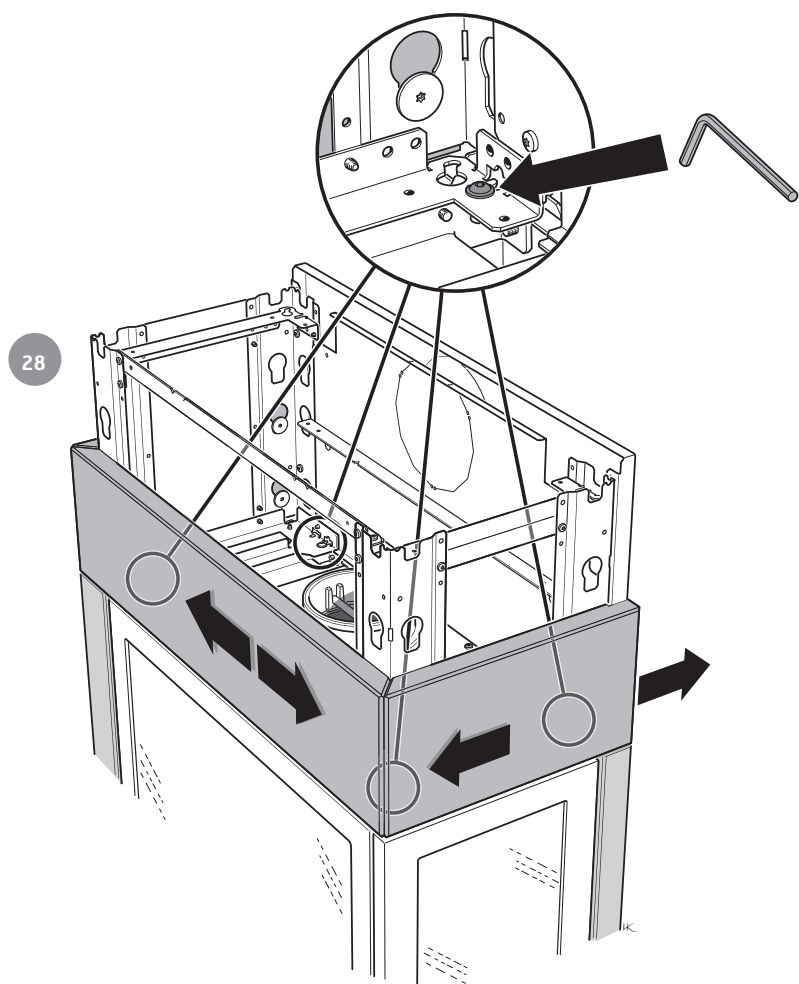


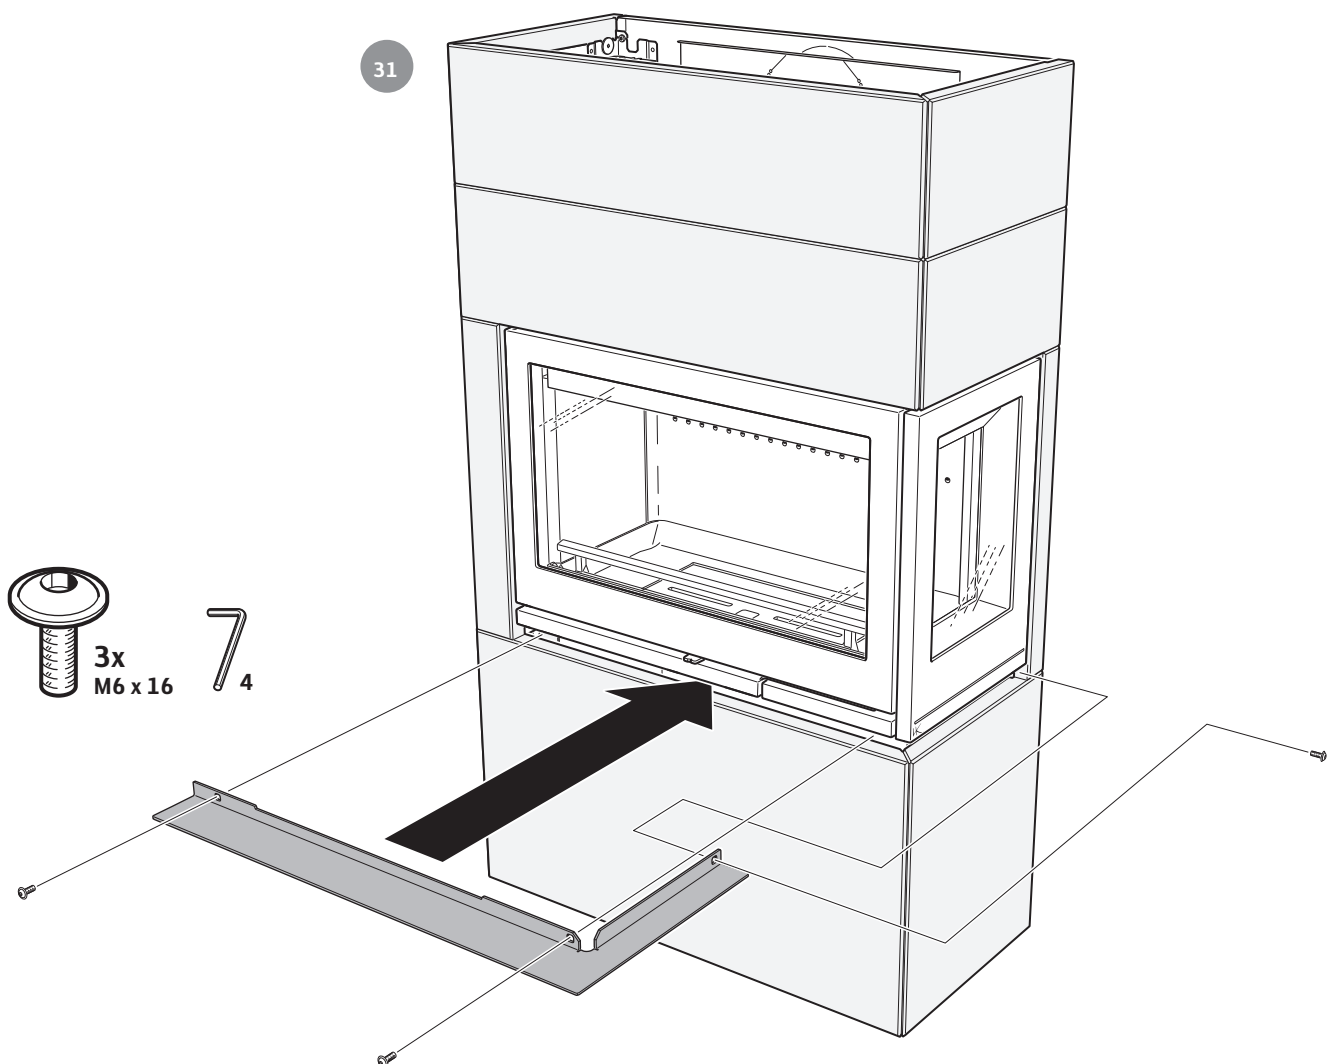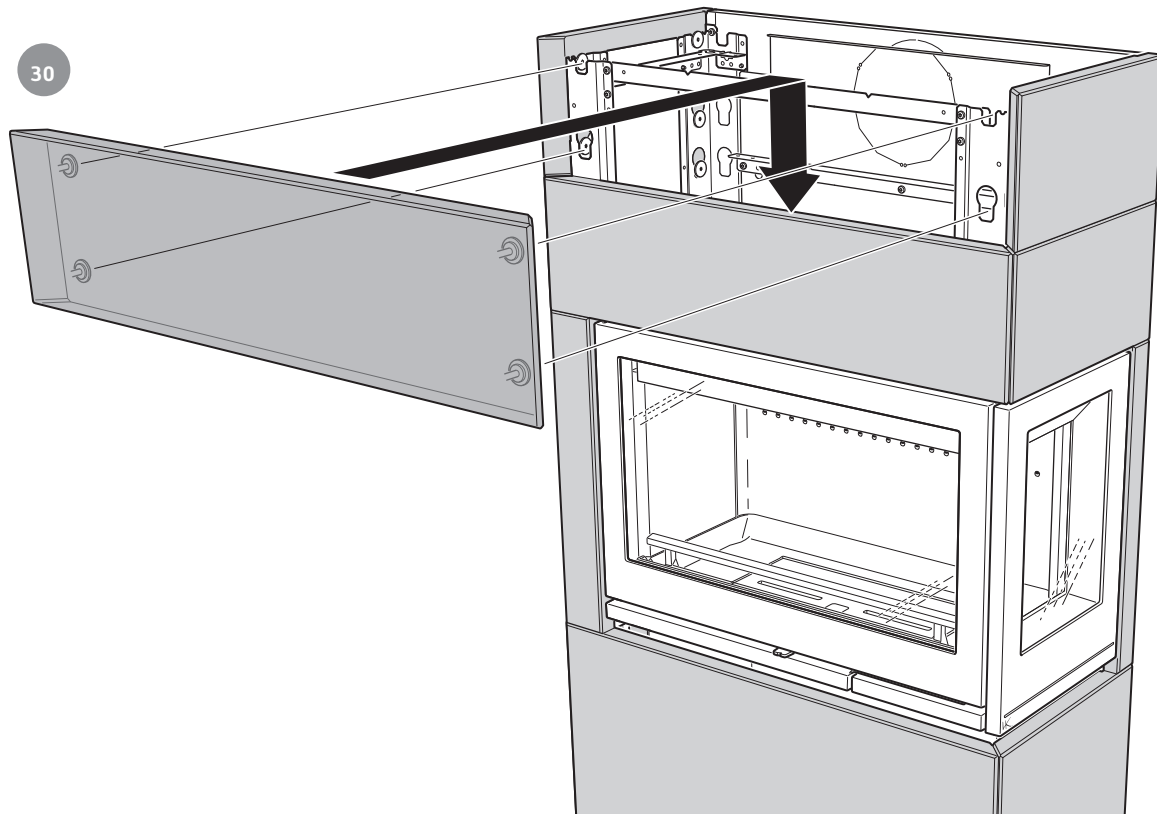



- SE** Montering av galler och topp  
Vid toppanslutning
- DE** Montage von Gitter und Oberseite  
Bei oberseitigem Anschluss
- NO** Montering av gitter og topp  
Ved toppmontering
- FR** Montage de la grille et de la partie supérieure  
Lors de raccordement par le haut
- GB** Assembling the grate and top  
For top connection

- DK** Montering af gitter og top  
Ved toptilslutning
- FI** Lämminilmaritilän ja kannen asennus  
Liitäntä ylöspäin
- IT** Montaggio delle griglie e del top  
Con collegamento dal top
- NL** Rooster en bovenplaat monteren  
Bij bovenaansluiting

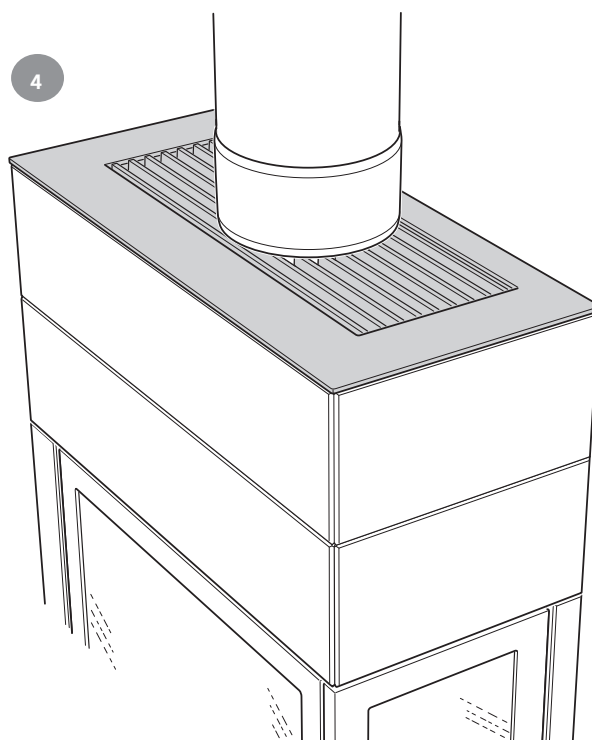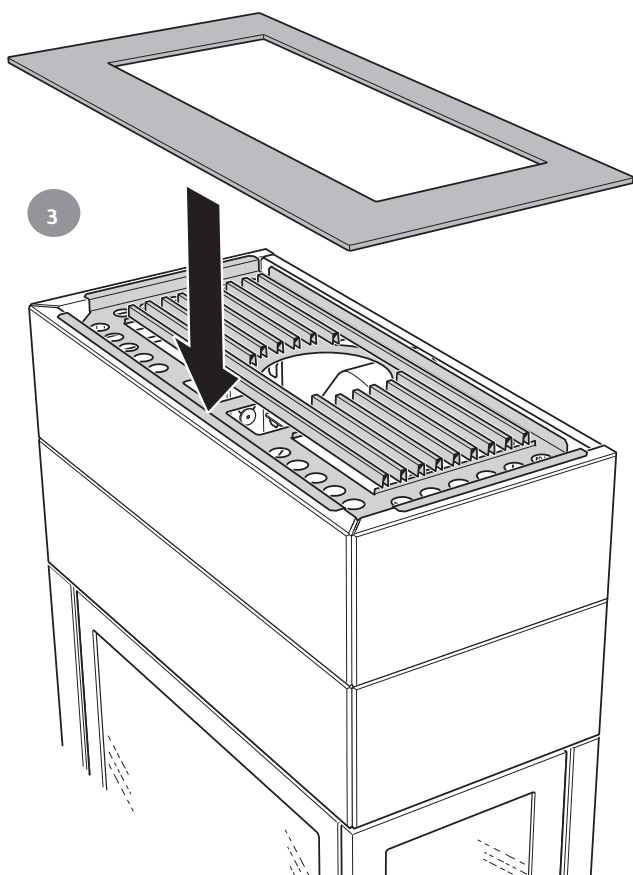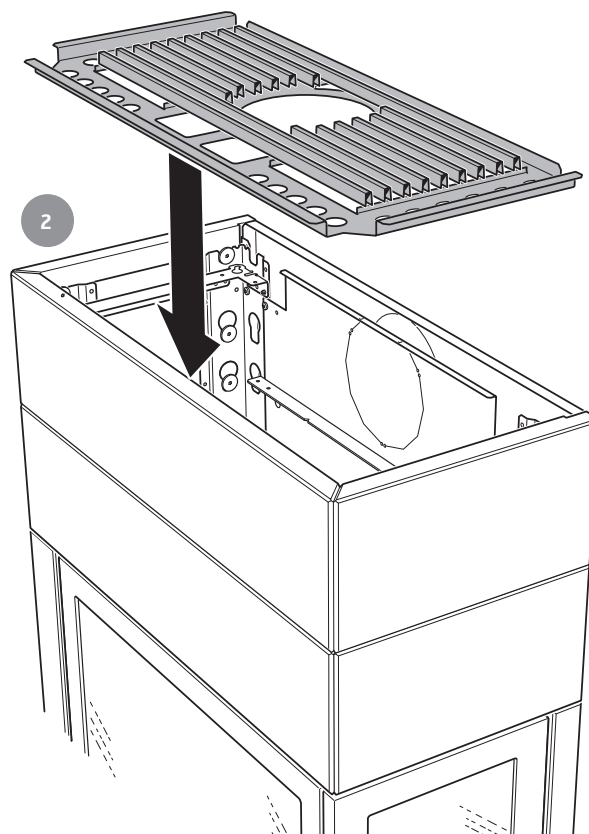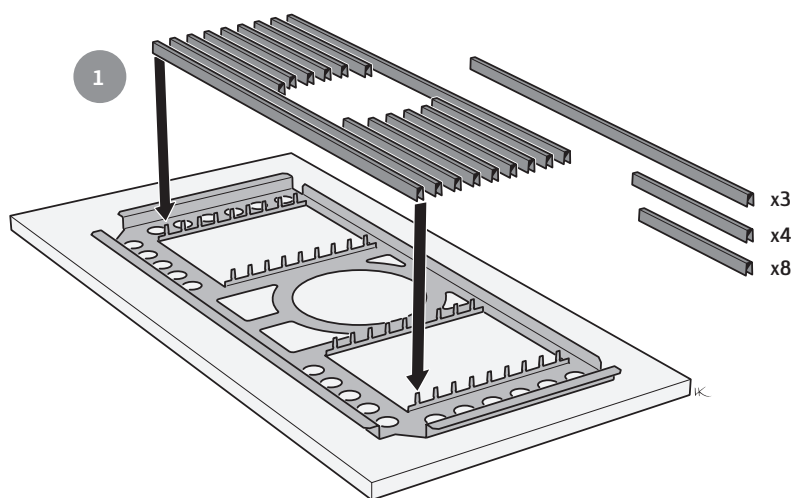



**SE** Montering av galler och topp  
Vid bakåttanslutning

**DE** Montage von Gitter und Oberseite  
Bei rückseitigem Anschluss

**NO** Montering av gitter og topp  
Ved bakmontering

**FR** Montage de la grille et de la partie supérieure  
Lors de raccordement par l'arrière

**GB** Assembling the grate and top  
If connecting at the rear

**DK** Montering af gitter og top  
Ved tilslutning på bagside

**FI** Lämminilmaritilän ja kannen asennus  
Liitääntä taaksepäin

**IT** Montaggio delle griglie e del top  
Con collegamento dal retro

**NL** Rooster en bovenplaat monteren  
Bij achteraansluiting

