


Contura

Contura Connect
App: Fire Wi-Fi Easy

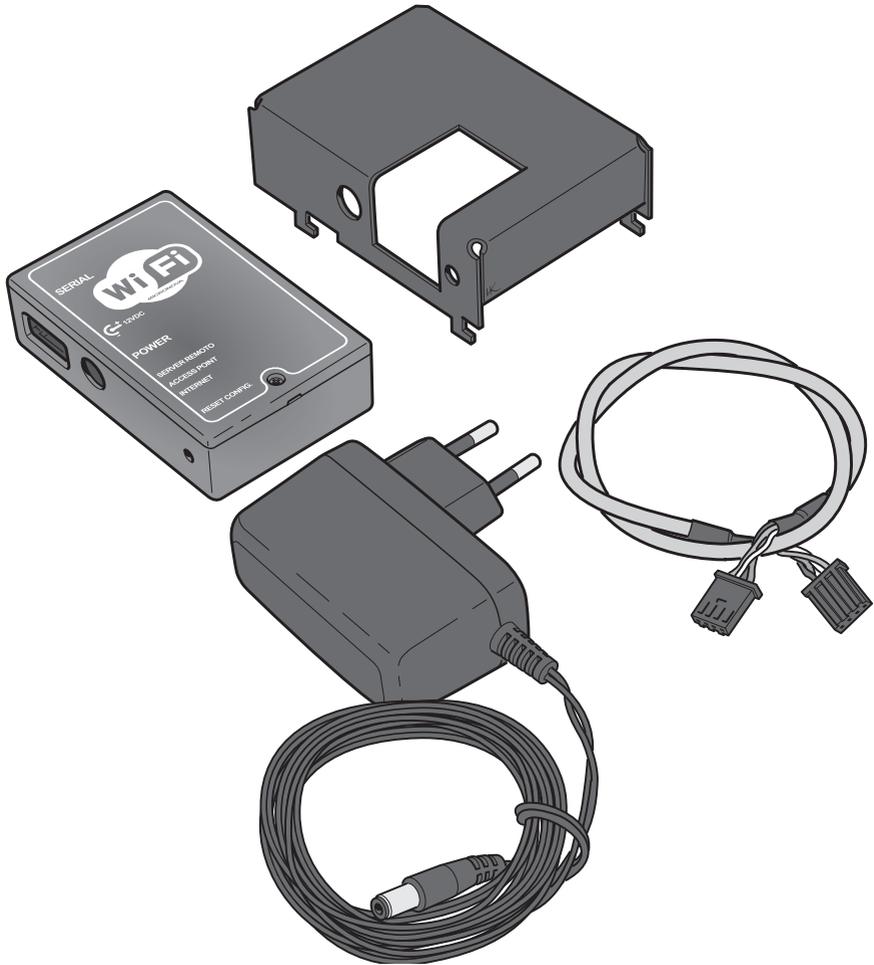

A warm welcome to Contura!

Welcome to the Contura family! We hope your WiFi device will bring you hours of pleasure. Please read through the entire manual to ensure the device is installed correctly. Keep this manual in a place where it can be accessed quickly. It can also be downloaded from Contura's website.

Contents

1	Introduction	20
	- Important information	20
	- Recycling	20
2	Connection to stove	21
	- WiFi device content	21
3	Connect WiFi device to the Internet	24
4	APP and configuration	26
5	Troubleshooting	30

1 Introduction

Important information

Installation should be performed by a service technician since it involves work on the stove.

CE declaration see manual for the stove Contura 101.

Recycling

Information about correct recycling of the product in accordance with the provisions of Directive 2012/19/EU.



When the device has reached the end of its useful life, it must not be disposed of as normal household waste.


It must be taken to a special waste collection centre or to a dealer providing this type of service.

Failure to dispose of the product correctly by the user shall result in administrative measures being imposed in accordance with applicable legislation.

2 Connection to stove

WiFi device content

- 1 WiFi device holder
- 2 WiFi device
- 3 Communication cable
- 4 Power adapter


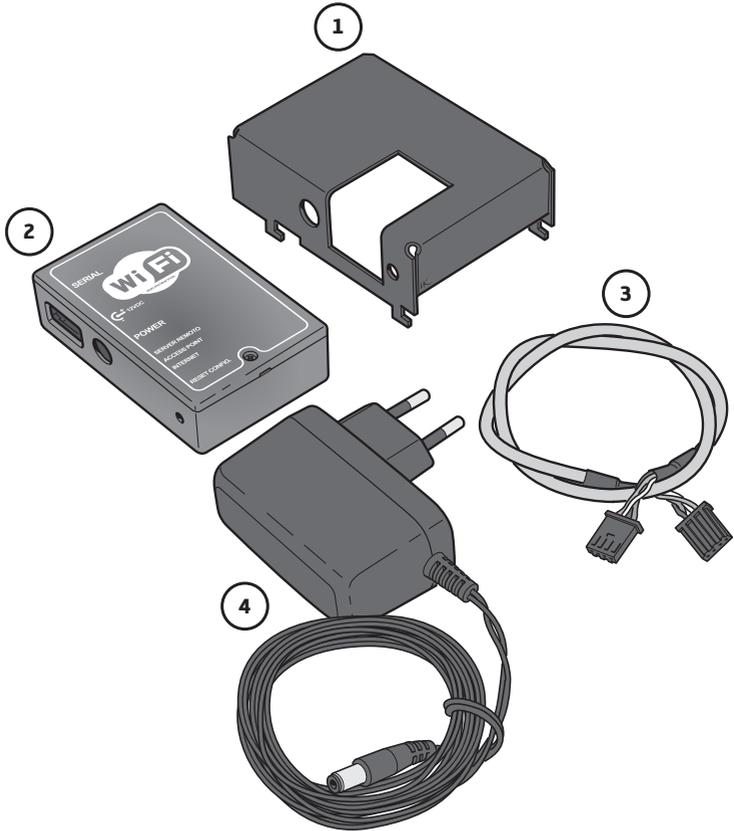




The code found on the back of the WiFi device is used later when connecting to the app.

MAC address XX:XX:XX:XX:XX:XX
REG.COD XXXXXX




1. Connect the communication cable to the control board. Note that the device connectors have a unique shape.
2. Pull the communication cable through the square hole. Connect the communication cable to the WiFi device. When the communication cable is connected to the control module, the WiFi device is powered by the stove while it is on.

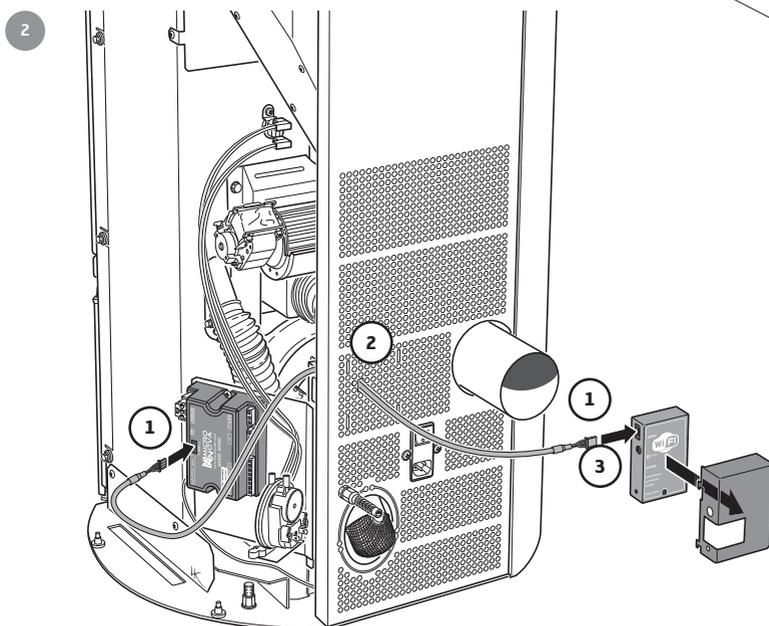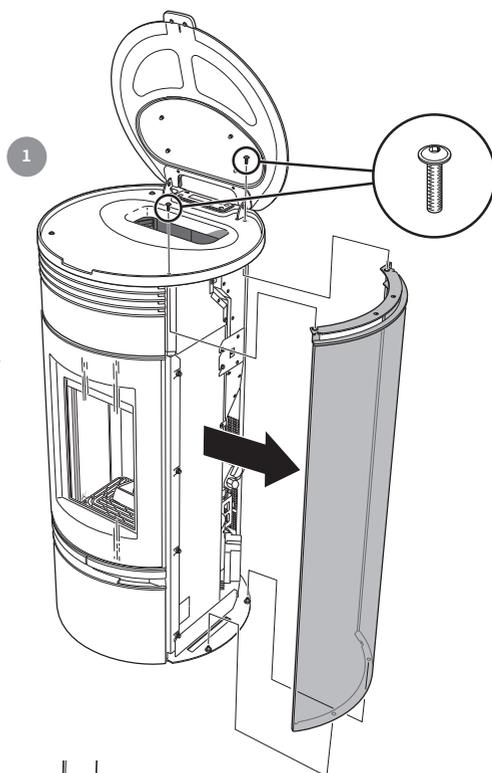

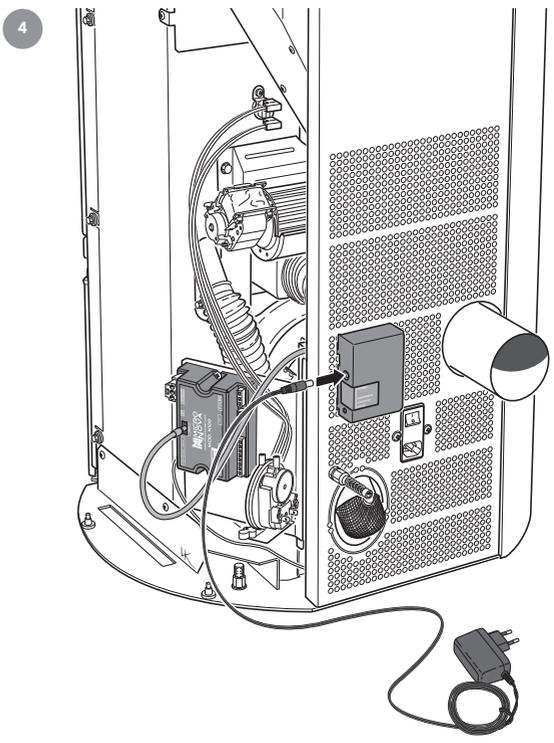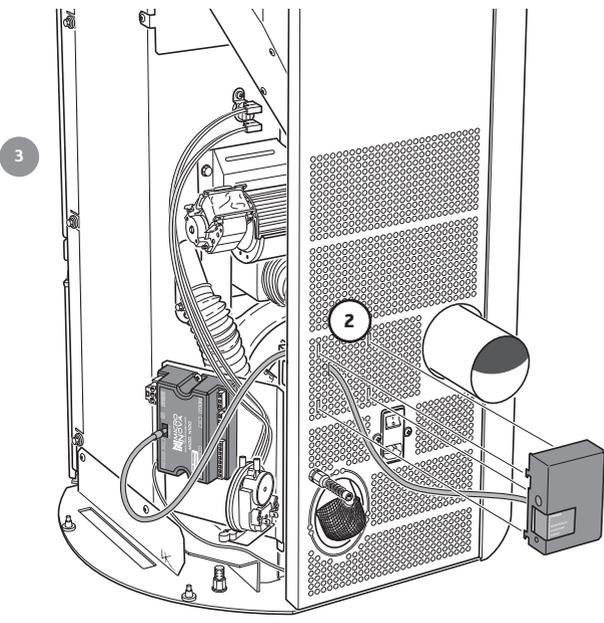

3 Connection of WiFi device to the Internet


1. **Communication cable connection**
2. **Power supply connection**
3. **POWER** Green LED: Shows that the WiFi device is connected to a power supply.
4. **SERVER REMOTO** Orange LED: Shows that it is connected to a WiFi network.
5. **ACCESS POINT** Orange LED: Configuration and activation status for ACCESS POINT. Blinking LED during start-up. Solid light during configuration and activation.
6. **INTERNET** Orange LED: Solid light connected to a WiFi network. Blinking LED trying to connect to a WiFi network
7. **RESET** Resetting WiFi device and activation of configuration status

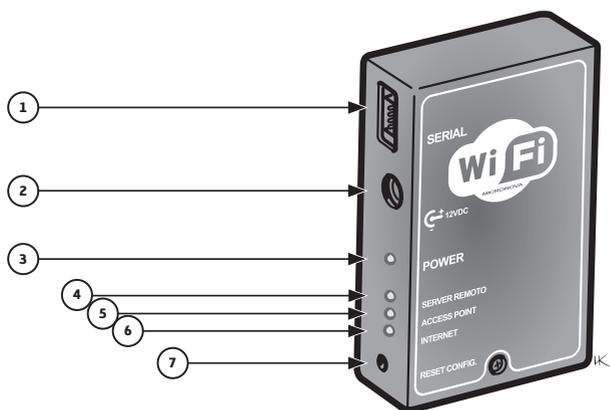


Connection of WiFi device to the Internet can be done without connection to the stove, in which case the power adapter must be connected. The communication cable does not need to be connected. After connection to the Internet, connect the WiFi device to the stove (see the section "Connection to stove").

- Check that a wireless network is available.
- Check that the green LED (POWER) is lit.
- When power is turned on, the orange LED (ACCESS POINT) will blink for about 5 seconds and then turn solid. If it continues to blink, hold the Reset button down for a few seconds.
- A WiFi device needs a PC/tablet/smartphone and must be connected to the wireless network. Connect a PC/tablet/smartphone to the wireless network PLT-WIFI_XXXXXXXXXXXX that the WiFi device creates.


Open it with the PC/tablet/smartphone's Internet: <http://192.168.1.1>

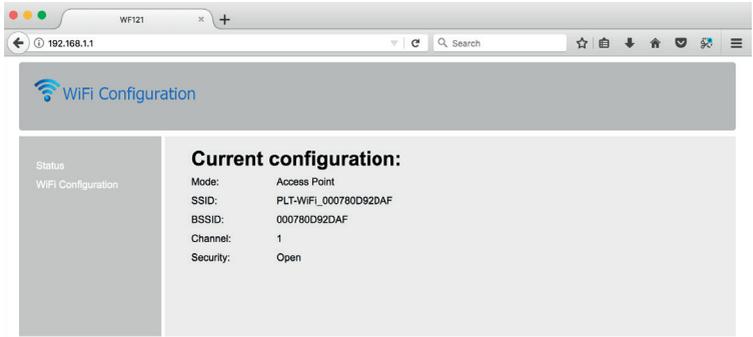

Select WiFi Configuration in the field on the left.

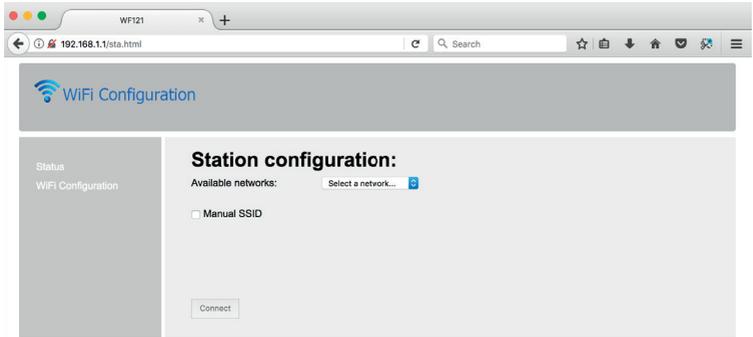


Select an available wireless network under "Available networks". Enter the password for the WiFi network and then click on "Connect".

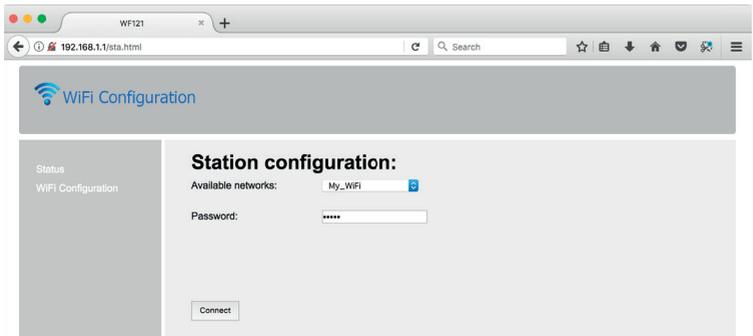

The orange LED (ACCESS POINT) turns off and another orange LED (INTERNET) blinks for a few seconds before turning solid. This indicates that the WiFi device is correctly connected to the Internet.




4 APP and configuration

The App "Fire Wi-Fi Easy" is available for Android and IOS phones.
Download and install the "Fire Wi-Fi Easy" app. Select a language for the app.




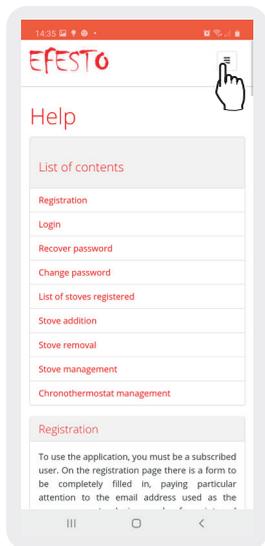


More info about the app see under "Help" and each content.



Change language

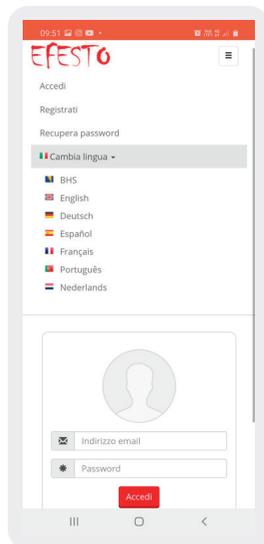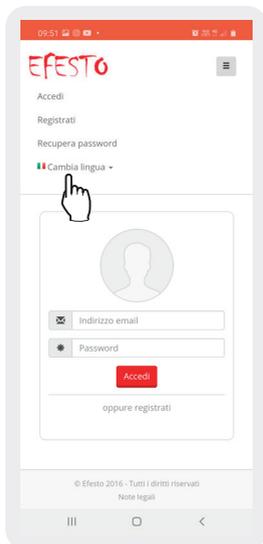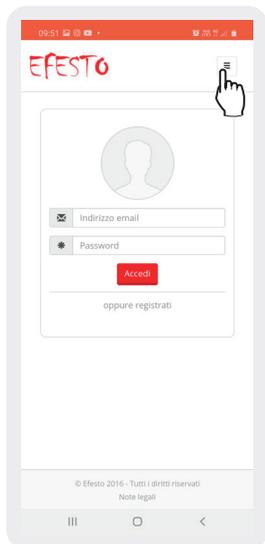


Register your email address with a password. An email message will be sent to your address with the link to confirm your subscription then login with your subscription.

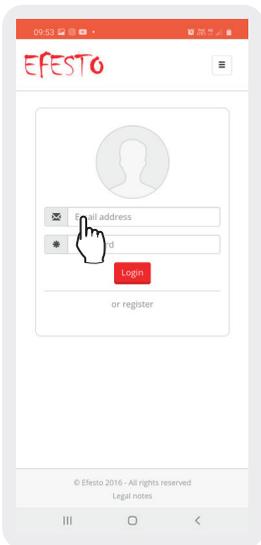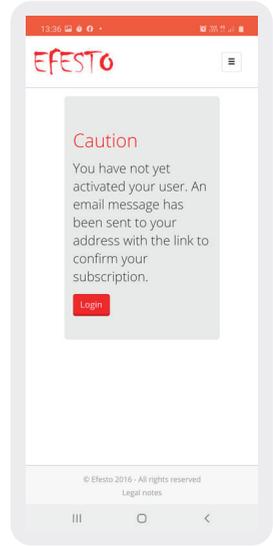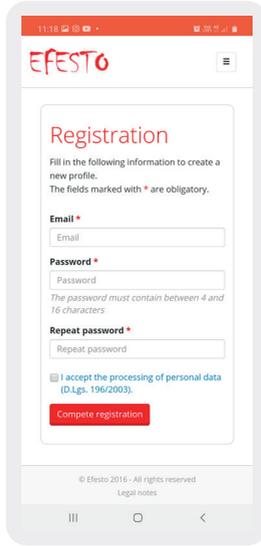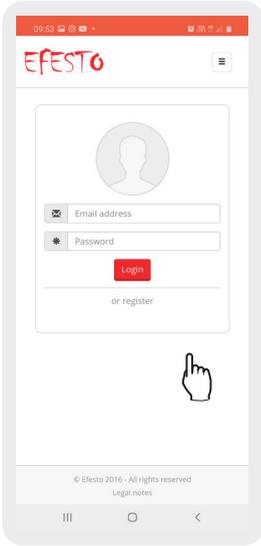


Add data as below and then press "Add the stove". To manage the stove choose the stove. You also find guidance and explanation under "Help" see page 29.

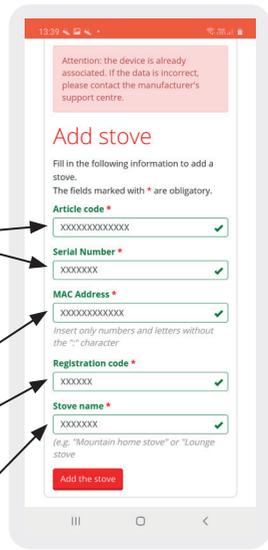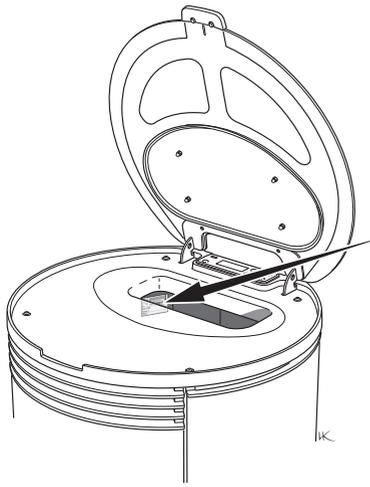


The name you choose for your stove

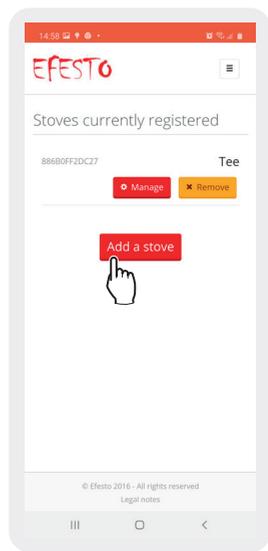


Pages on the app

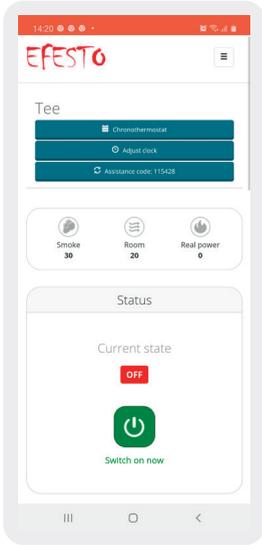


Turn the stove off/on
Info status stove

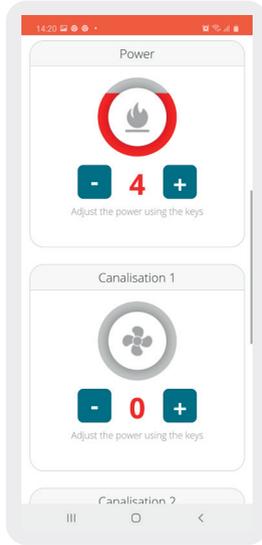



Set power
Set speed fan

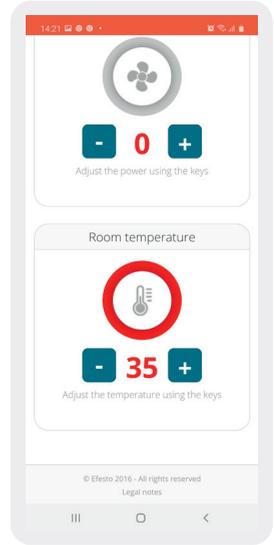

Set power
Set indoor temperature

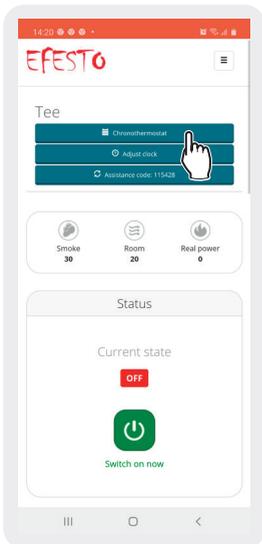

Chronothermostat

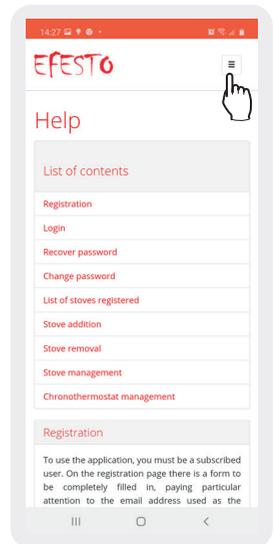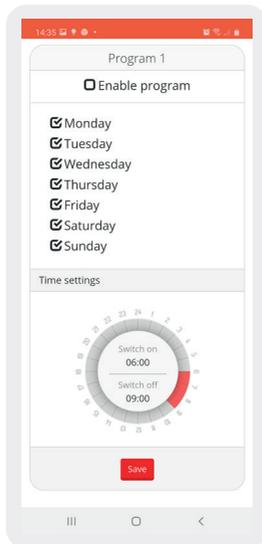

You will find guidance and explanation for each content under "Help"

5 Troubleshooting

Problem	Corrective action
The POWER LED is not lit.	<ul style="list-style-type: none">• Check that the stove is on.• Power adapter connected (not needed if the WiFi device is connected to the stove).• Communication cable connected.
The ACCESS POINT LED does not light up at the first start-up.	Press Reset and repeat the installation procedure.
The ACCESS POINT LED is blinking.	<ul style="list-style-type: none">• Check reception and network firewalls.• Reinstall.• Contact a service technician if the problem persists.
After installation, the INTERNET LED does not have a solid light.	<ul style="list-style-type: none">• Check reception and network firewalls.• Reinstall.• Contact a service technician if the problem persists.

Contura

NIBE AB · Box 134 · 285 23 Markaryd · Sweden
contura.eu

Contura reserves the right to change dimensions and procedures specified in these instructions without prior notice. Access the latest version at www.contura.eu